

## Revision History

Version	Description	Date	Writer
V0.1	Added setting codes that parts cannot be identified, such as Length settings for CODE11 and MSI ,RSS switch	2015.05.26	
V0.2	1.Added the control of floodlight and positioning light 2.Communication mode: Added USB KBW and USB serial port 3.Trigger mode: Added automatic induction mode	2015.07.27	
V0.3	Added default configuration parameters (default configuration contains the default configuration 1 and 2)	2015.08.04	
V0.4	Added the difference between 1D and 2D software Overview: 1D does not support automatic induction mode 1D product does not support USB interface 1D product only has a floodlight	2015.10.14	
V0.5	Automatic induction mode adds higher sensitivity	2015.10.19	
V0.6	1D supports automatic induction mode	2015.12.02	
V0.7	Added five default configuration	2015.12.17	
V0.8	Added auto newline	2016.01.07	
V0.9	Added default configuration 3	2016.01.22	
V0.10	The version can output all product information by setting code	2016.01.27	
V0.11	1D has the function of identifying two barcodes at the same time.	2016.03.25	
V0.12	1.Added communication mode: Support AUTO UK and AUTO UV 2.DM adds the function of reading Multi-code mode	2016.05.06	
V0.13	Added 2D barcode Packet format description	2016.05.25	
V0.14	The version supports Aztec Code, Maxi Code and Han Xin Code	2016.06.07	
V0.15	Added default configuration 4	2016.06.17	
V1.0	Formal Version	2016.10.31	
V1.01	Added prompt switch. Added Matrix 25 and Standard 25.	2016.11.17	
V1.02	Add detailed SSI command	2017.02.21	
V1.03	Add new functions Modify some of the contents of the manual	2017.04.21	
V1.04	Add event report, wiegand, PS2, setting code password mode,disable passive trigger scanning, default configuration ,command table	2017.06.15	
V1.05	Add WAKEUP contents	2017.06.28	

	Add REQUEST_REVISION contents Delete default configuration 6-8		
V1.06	Add ECI control of QR and DM Add logout password function	2017.07.20	
V1.07	Add invoice type Modify some mistakes	2017.08.16	
V1.08	Add input character set type Add output ctrl combination key Modify partial contents of table 4-3	2017.09.01	
V1.09	Add TTDATA, TTDATA+Serial Port Add ASCII Add Barcode Global Switch Add SSI Command of Custom Beeper Sound Add Terminator CR CR, CR LF CR LF Add Quick Settings of Keyboard Output Time Interval Add Button Continuous Add Keyboard Type Add Codabar Start Character and Terminator and Letter Case Setting of Start Character and Terminator Add ISSN, PLESSEY Table 1-11 adds AIM128, ISSN, PLESSEY Code 39 adds Convert Code 39 to Code 32 (Italian Pharma Code) , Code 32 Prefix and Transport Start Character and Terminator.	2017.11.23	
V1.10	Modify 'transmit Code ID Character' content Modify 'AIM code Identifiers' table	2018.02.11	
V1.11	Add RSS AI character, Code 39 bigcode, Bank code of Brazil, Read 1D inverse barcode Add keyboard, AIM128, DEU14, DEU12, Code 128, UCC/EAN128, EAN-8, EAN-13, UPC-E, UPC-A, ITF14, NEC-25(COOP25), Discrete 2 of 5, Code 93, Codabar, Plessey, QR barcode new content	2018.03.14	
V1.12	Add communication mode HID POS, Disable KBW Function Key, Hide Custom Barcode Data, Fast Setting of Same code reading delay, UPC-E1, Decoding Light Control, Continuously Set Multiple Prefix and Suffix Modes, EAN-13 Transmit Check Digit, Heartbeat Control, "Chech", "Slovakia" keyboard	2018.06.28	
V1.13	Supplement the content of Wiegand Protocol Type 、 Country/Language Keyboard 、 Decoding Light Control 、 Trigger Mode 、 Input Character Set Type ; Add Wiegand Output Time Interval Setting 、 COMPOSITE 、 Duration in Scanning Quick Setting 、 Set Prefix and Suffix according to Barcode Type 、 ASCII Control Character Output Mode Selection 、 Beeper Type 、 Positioning light Flicker 、 EAN-8 Transmit Check Digit 、 Insert Custom Data ; Modify UPC-E1 、 EAN-13 Transmit Check Digit 、 AIM128 、 I 2 of 5 Check Digit	2019.06.05	

	Verification; Delete Convert I 2 of 5 to EAN-13、 Output Ctrl Combination Key、 Disable KBW Function Key.		
V1.14	Modify some typesetting issues. Add Beeper Mute Function、 Input Character Set Type Function、 Wiegand WG64、 Code 32 Check Digit Verification、 Transmit Code 32 Check Digit、 Data bit、 Continue Scanning、 URL Blocking、 Multi-country Common Function、 Output CTRL+key combination, but not including the keys on the keyboard 、 RS485 Networking Function, all above functions.	2020.07.13	
V1.15	Add Suffix Key Combination、 RS485 Network Decoded Data Is Saved To Cache、 Continue Scanning、 Quickly Set Multiple Prefixes、 Quickly Set Multiple Suffixes、 Output Character Set Type、 Input Character Set Type、 Remove The UTF-8 BOM Encoding Format Of The QR Code、 Support GS1 Rules And Use Parentheses To Include AI Fields 、 Convert To Hexadecimal、 Modbus Rtu Networking Function、 Custom Barcode Data Reservation、 Hide The Customized Data String In The Barcode、 Suffix And Terminator Are Not Affected By The Output Mode Of ASCII Control Characters 、 Communication Mode、 Country/Language Keyboard、 The Same Code Is Not Output In a Single Round Of Decoding. Delete Code 93 Check 、 Transmit Code 93 Check Digit、 DEU12、 DEU14、 Brazilian Bank Code、 EAN/UCC、 Code 39 bigcode.Modify lines 1012 and 1019 of the character comparison table.	2021.08.12	
V1.16	Moved the contents of Table 3-1 to Table 4-7, delete Table 3-1, and modify some instructions in Table 4-7. Some functions have been deleted. Convert some functions to internal use. Made some description changes. Modify the character comparison table.	2022.03.15	



# Contents

- Revision History ..... 1**
- Contents ..... 4**
- 1. SSI Commands..... 10**
  - CMD\_ACK..... 11
  - CMD\_NAK..... 12
  - DECODE\_DATA ..... 13
  - LED\_OFF ..... 15
  - LED\_ON ..... 15
  - PARAM\_DEFAULTS ..... 16
  - PARAM\_REQUEST ..... 17
  - PARAM\_SEND ..... 18
  - REPLY\_REVISION ..... 19
  - REQUEST\_REVISION ..... 20
  - SCAN\_DISABLE ..... 20
  - SCAN\_ENABLE ..... 21
  - SLEEP ..... 22
  - START\_DECODE ..... 22
  - STOP\_DECODE ..... 23
  - RESET ..... 23
  - EVENT ..... 24
- 2. SSI Extended Commands..... 24**
  - DECODE\_DATA\_TWO ..... 25
- 3. Parameter Configuration ..... 26**
  - Set Default Parameter ..... 27
    - Factory Default Configuration ..... 27
    - Default Configuration1 ..... 27
    - Default Configuration2 ..... 27
    - Default Configuration3 ..... 28
    - Default Configuration4 ..... 28
    - Default Configuration5 ..... 28
  - Output Product Information..... 28
  - Trigger Mode..... 28
  - Duration in Scanning ..... 30
    - Quick Setting ..... 31
  - Continuous Reading Interval ..... 33
  - Same Code Reading Delay ..... 33
    - Fast Setting..... 33
  - Continue Scanning..... 35
  - The Same Code Is Not Output In a Single Round Of Decoding ..... 35
  - Disable passive trigger scanning ..... 36
  - Sensitivity Level..... 36
  - Custom Sensitivity..... 37
  - Stability of Induction Time..... 37
  - Communication Mode..... 38
  - Serial Parameters ..... 42
    - Baud Rate ..... 42

Data Bit.....	43
Parity.....	44
Stop Bit Select.....	45
Software Handshaking.....	46
Host Serial Response Time-out.....	46
Keyboard.....	47
Country/Language Keyboard.....	47
Time interval that keyboard outputs character.....	53
Quick Settings of Keyboard Output Time Interval.....	53
Letter case conversion.....	54
Keyboard Type.....	55
Keyboard State Control.....	56
ASCII Control Character Output Mode Selection.....	56
Wiegand.....	58
Wiegand Protocol Type.....	58
Wiegand 26 Protocol Output Mode.....	59
Wiegand Output Time Interval Setting.....	59
RS485 Networking Function.....	60
Enable RS485 Networking Function.....	60
Modify 485 Device Slave Address.....	60
RS485 Networking Decoding Data Format.....	61
RS485 Networking Heartbeat Switch.....	61
RS485 Network Decoded Data Is Saved To Cache.....	62
Modbus Rtu Networking Function.....	62
Disable/Enable Modbus Rtu Function.....	62
Barcode Cache.....	63
Slave Address Setting.....	63
Quickly Set The Slave Address.....	64
Power Mode.....	65
Beeper.....	65
Beeper Volume.....	65
Beeper Type.....	66
Beep After Good Decode.....	67
Indicator Light Function.....	67
LED After Good Decode.....	67
Decode Indicator Control.....	68
Mute.....	69
Boot prompt.....	69
Setup Code Prompt.....	70
Floodlight Control.....	70
Positioning light.....	71
Positioning light control.....	71
Positioning light Flicker.....	72
Decode Data Packet Format.....	72
Transmit "No Read" Message.....	72
Transmit Code ID Character.....	73
Terminator.....	74
Prefix/Suffix.....	75
Prefix/Suffix Values.....	75
Continuously Set Multiple Prefix and Suffix Modes.....	76
Scan Data Transmission Format.....	78
STX and ETX Setting.....	80

Suffix Key Combination.....	81
Suffix Alt Key Combination.....	81
Suffix Ctrl Key Combination.....	81
Suffix Shift Key Combination.....	82
Suffix And Terminator Are Not Affected By The Output Mode Of ASCII Control Characters.....	82
Set Prefix and Suffix according to Barcode Type.....	83
Set Prefix according to Barcode Type.....	83
Set Suffix according to Barcode Type.....	83
Clear Prefix according to Barcode Type.....	83
Clear Suffix according to Barcode Type.....	84
Enable/Disable Prefix or Suffix.....	84
Hide Custom Barcode Data.....	85
Hide Head Data.....	85
Set the Length of the Hidden Head Data.....	85
Hide Intermediate Data.....	86
Set the Starting Position of Hiding the Intermediate Data.....	86
Set the Length of the Hidden Intermediate Data.....	87
Hide Tail Data.....	87
Set the Length of the Hidden Tail Data.....	87
Custom Barcode Data Reservation.....	88
Reserve Header Data.....	88
Set The Length Of The Reserved Header Data.....	88
Quickly Set The Length Of The Reserved Header Data.....	89
Reserve Middle Data.....	89
Set The Starting Position To Reserve Middle Data.....	90
Quickly Set The Starting Position To Reserve Middle Data.....	90
Set The Length Of The Reserved Middle Data.....	91
Quickly Set The Length Of The Reserved Middle Data.....	91
Reserve Tail Data.....	92
Set The Length Of The Reserved Tail Data.....	92
Quickly Set The Length Of The Reserved Tail Data.....	92
Hide The Customized Data String In The Barcode.....	93
Enable/Disable.....	93
Set The Hidden Data String.....	94
Complete The Setup.....	94
Read Back And Clear.....	94
Insert Custom Data.....	95
Enable/Disable Insert Custom Data.....	95
Set Position of the Inserted Data.....	95
Set Inserted Data.....	96
Exit Setting Custom Data.....	96
Output Character Set Type.....	96
Input Character Set Type.....	98
USB Type.....	100
Event Report.....	101
Boot Event.....	101
Trigger Event.....	101
Heartbeat Control.....	102
URL Blocking.....	103
Invoice Function.....	104
Automatic Filling of Value-added Tax Invoice.....	104
Invoice Type.....	104



Parameter Scanning .....	105
Send Setting Code .....	105
Setting Code Password Mode .....	106
Enable Setting Code Password Mode .....	106
Input Setting Code Password .....	106
Modify Setting Code Password .....	107
Logout Password .....	107
Linear Code Type Security Level .....	107
Linear Security Level 1 .....	107
Linear Security Level 2 .....	108
Linear Security Level 3 .....	108
Linear Security Level 4 .....	108
Support GS1 Rules And Use Parentheses To Include AI Fields .....	108
Convert To Hexadecimal .....	109
Convert To Hexadecimal Output .....	109
Convert To Hexadecimal Interval Output .....	110
1D Inverse Barcode Reading .....	110
Barcode Global Switch .....	111
1D Global Switch .....	111
2D Global Switch .....	111
All Barcode Switch .....	112
UPC-A .....	113
Enable/Disable UPC-A .....	113
UPC-A Preamble .....	113
Transmit UPC-A Check Digit .....	114
UPC-A 2-bits Supplementals .....	114
UPC-A 5-bits Supplementals .....	115
UPC-A Read Supplementals .....	115
UPC-E .....	115
Enable/Disable UPC-E .....	115
UPC-E Preamble .....	116
Transmit UPC-E Check Digit .....	117
Convert UPC-E to UPC-A .....	117
UPC-E 2-bits Supplementals .....	118
UPC-E 5-bits Supplementals .....	118
UPC-E Read Supplementals .....	119
UPC-E1 .....	119
EAN-8 .....	120
Enable/Disable EAN-8 .....	120
EAN-8 Zero Extend .....	120
EAN-8 2-bits Supplementals .....	121
EAN-8 5-bits Supplementals .....	121
EAN-8 Read Supplementals .....	121
EAN-8 Transmit Check Digit .....	122
EAN-13 .....	122
Enable/Disable EAN-13 .....	122
EAN-13 2-bits Supplementals .....	123
EAN-13 5-bits Supplementals .....	123
EAN-13 Read Supplementals .....	124
EAN-13 Transmit Check Digit .....	124
Enable/Disable Bookland EAN(ISBN) .....	125
Code 128 .....	125

Enable/Disable Code 128.....	125
Transmit Check Digit.....	126
Set Lengths for Code 128.....	126
GS1-128 (formerly UCC/EAN-128) .....	127
Enable/Disable GS1-128 (formerly UCC/EAN-128) .....	127
UCC/EAN-128 Transmit Check Digit.....	127
Set Lengths for UCC/EAN-128.....	128
ISBT 128.....	129
Code 39.....	129
Enable/Disable Code 39.....	129
Set Lengths for Code 39.....	130
Code 39 Check Digit Verification.....	130
Transmit Code 39 Check Digit.....	131
Enable/Disable Code 39 Full ASCII .....	131
Code 39 Transport Start Character and Terminator.....	132
Convert Code 39 to Code 32 (Italian Pharma Code) .....	133
Code 32 Prefix.....	133
Code 32 Check Digit Verification.....	134
Transmit Code 32 Check Digit.....	134
Code 93.....	134
Enable/Disable Code 93.....	134
Set Lengths for Code 93.....	135
Code 11.....	136
Enable/Disable Code 11.....	136
Set Lengths for Code 11.....	137
Code 11 Check Digit Verification.....	137
Transmit Code 11 Check Digit.....	138
Interleaved 2 of 5/ITF/交叉 25 码.....	138
Enable/Disable Interleaved 2 of 5 .....	138
Set Lengths for Interleaved 2 of 5 .....	139
I 2 of 5 Check Digit Verification.....	140
Transmit I 2 of 5 Check Digit.....	140
Discrete 2 of 5/Industrial 2 of 5/IND25/.....	141
Enable/Disable Discrete 2 of 5 .....	141
Set Lengths for Discrete 2 of 5 .....	141
Discrete 2 of 5 Check.....	142
Transmit Discrete 2 of 5 Check Digit .....	142
Matrix 25.....	143
Enable/Disable Matrix 25.....	143
Matrix 25 Check Digit Verification .....	143
Transmit Matrix 25 Check Digit.....	143
Set Lengths for Matrix 25 .....	144
Standard 25/IATA 25(25).....	145
Enable/Disable Standard 25 .....	145
Standard 25 Check Digit Verification .....	145
Transmit Check Digit.....	146
Set Lengths for Standard 25 .....	146
Codabar.....	147
Enable/Disable Codabar.....	147
Set Lengths for Codabar.....	147
Codabar Check .....	148

Transmit Codabar Check Digit.....	148
NOTIS Editing .....	149
Start Character and Terminator.....	149
Letter Case Setting of Start Character and Terminator.....	150
MSI/MSI PLESSEY.....	150
Enable/Disable MSI.....	150
Set Lengths for MSI.....	151
MSI Check Digits .....	151
Transmit MSI Check Digit.....	152
MSI Check Digit Algorithm .....	152
GS1 DataBar/RSS .....	153
Enable/Disable GS1 DataBar-14.....	153
RSS AI Character .....	153
PDF417.....	154
Enable/Disable PDF417 .....	154
Read Normal Phase/ Phase Reversal.....	154
QR.....	155
Enable/Disable QR .....	155
ECI Control .....	155
QR Read Normal Phase/ Phase Reversal.....	156
Remove The UTF-8 BOM Encoding Format Of The QR Code .....	156
Data Matrix(DM) .....	157
Enable/Disable Data Matrix(DM).....	157
Read Normal Phase/ Phase Reversal.....	157
ECI Control .....	158
Maxi Code .....	158
Enable/Disable Maxi Code .....	158
Aztec Code.....	159
Enable/Disable Aztec Code .....	159
Han Xin Code.....	159
Enable/Disable Han Xin Code .....	159
Read Normal Phase/ Phase Reversal.....	160
ISSN.....	160
NEC-25(COOP25) .....	161
NEC-25(COOP25) .....	161
NEC-25(COOP25) Check.....	161
Transmit NEC-25(COOP25) Check Digit.....	162
Set Lengths for NEC-25(COOP 25).....	162
COMPOSITE .....	163
Enable/Disable COMPOSITE .....	163
<b>4. Appendix.....</b>	<b>163</b>
Numeric Barcodes.....	164
Cancel.....	165
Setting Code Lengths Via Serial Commands.....	166
Character Comparison Table .....	166
Code ID.....	173
AIM Code Identifiers .....	174
Parameter Command .....	175

## 1. SSI Commands

**Table 1-1 SSI Commands**

Name	Type	Opcode	Description	Support
CMD_ACK	H/D	0xD0	Effective response	Yes
CMD_NAK	H/D	0xD1	Invalid response	Yes
DECODE_DATA	D	0xF3	Decode data(only for 1D barcode)	Yes
LED_OFF	H	0xE8	Close LED	Yes
LED_ON	H	0xE7	Open LED	Yes
PARAM_DEFAULTS	H	0xC8	Restore default parameters of the SE series	Yes
PARAM_REQUEST	H	0xC7	Request one parameter of the SE series	Yes
PARAM_SEND	H/D	0xC6	Send one parameter of the SE series	Yes
REQUEST_REVISION	H	0xA3	Request the engine's software version message	Yes
REPLY_REVISION	D	0xA4	Reply the engine's software version message	Yes
SCAN_DISABLE	H	0xEA	Disable scanning	Yes
SCAN_ENABLE	H	0xE9	Enable scanning	Yes
SLEEP	H	0xEB	Sleep state	Yes
START_DECODE	H	0xE4	Start decoding	Yes
STOP_DECODE	H	0xE5	Start decoding	Yes
WAKEUP	H	N/A	Wakeup	Yes
RESET	H	0xFA	Reset	Yes
EVENT	D	0xF6	Event indicated by associated event code	Yes

[Table 1-2](#) shows the general packet format for SSI messages, and [Table 1-3](#) lists the descriptions of fields that occur in all messages. These descriptions are repeated for each Opcode in the SSI message formats section. For messages that use the *Data* field, the specific type of data is shown in that field.

**Table 1-2 General Packet Format**

Length	Opcode	Message Source	Status	Data	Checksum
--------	--------	----------------	--------	------	----------

**Table 1-3 Field Descriptions**

Field Name	Format	Sub-Field	Meaning
Length	1 Byte	Length	Length of message not including the checksum bytes. Maximum value is 0xFF.
Opcode	1 Byte	See <a href="#">Table 1-1</a> for details.	Identifies the type of packet data being sent.
Message Source	1 Byte	0 = Scan engine 04 = Host	Identifies where the message is coming from.
Status	Bit 0	Retransmit	0 = First time packet is sent 1 = Subsequent transmission Attempts
	Bit 1	Reserved	Always set to zero
	Bit 2	Reserved	Always set to zero
	Bit 3	Change Type (applies to parameters)	0 = Temporary change 1 = Permanent change
	Bits 4 – 7		Unused bits must be set to 0.
Data	Variable number of bytes	See individual sections for details.	
Checksum	2 Bytes	2's complement sum of message contents excluding checksum.	Checksum of message formatted as HIGH BYTE LOW BYTE, HIGH BYTE is in front.

Note: The checksum is a 2 byte checksum and must be sent as HIGH BYTE followed by LOW BYTE.

## CMD\_ACK

**Description: Positive acknowledgment of received packet**

**Table 1-4 Packet Format**

Length	Opcode	Message Source	Status	Data	Checksum
0x04	0xD0				

**Table 1-5 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message(not including checksum)	1 Byte	Length Field
Opcode	0xD0	1 Byte	Identifies this Opcode type

Message Source	0 = Scan engine 4 = Host	1 Byte	Identifies where the message is coming from.
Status	Bit 0: Retransmit Bit 1-7: unused	1 Byte	Identifies the transmission status All unused bits must be set to 0
Data			None
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

This message is sent to the SSI packet transmitter when the received packet passes the checksum check and no negative acknowledgment conditions apply (see CMD\_NAK). If the data is in response to a command (e.g., PARAM\_REQUEST, REQUEST\_REVISION, etc.), no ACK is sent.

**NOTE** :ACK/NAK handshaking can be disabled, but this is not recommended.

It is not necessary to respond to a valid ACK or NAK message.

### Host Requirements

The scan engine must send a CMD\_ACK or response data within the programmable Serial Response Time-out to acknowledge receipt of all messages, unless noted otherwise in the message description section. If the host sends data and does not receive a response within the programmable serial response time-out, it resends the message (with the retransmit status bit set) before declaring a failure. The host should limit the number of retries.

### Scan Engine Requirements

The scan engine must send a CMD\_ACK or response data within the programmable Serial Response Time-out to acknowledge receipt of all messages, unless noted otherwise in the message description section. If the scan engine does not receive an ACK within this time period, it sends the previous message again. The scan engine retries twice more (with the retransmit status bit set) before declaring a transmit error.

## CMD\_NAK

**Description: Negative acknowledgment of received packet**

**Table 1-6 Packet Format**

Length	Opcode	Message Source	Status	Cause	Checksum
0x05	0xD1				

**Table 1-7 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum).	1 Byte	Length Field
Opcode	0xD1	1 Byte	Identifies this Opcode type.
Message Source	4 = Host 0 = Scan engine	1 Byte	Identifies where the message is coming from.
Status	Bit 0: Retransmit Bit 1-7: unused	1 Byte	Identifies the transmission status. Unused bits must be set to 0.
Cause	Reason code	1 Byte	Identifies the reason the NAK occurred: 0=Reserved

			1=(RESEND) Checksum failure 2= (BAD_CONTEXT) Unexpected or Unknown message 3= Reserved 4= Reserved 5= Reserved 6= (DENIED) Host Directive Denied 7= Reserved 8= Reserved 9= Reserved
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message.

This message is sent when the received packet fails the checksum verification or some error occurred while handling the message.

**NOTE** :ACK/NAK handshaking can be disabled, but this is not recommended.  
It is not necessary to respond to a valid ACK or NAK message.

Table 1-8 describes NAK types supported by the scan engine.

**Table 1-8 Scan engine-Supported NAK Types**

NAK Type	Meaning	Receiver Action
NAK_RESEND	Checksum incorrect.	Ensure checksum is correct. Limit number of resends. Send packet again with resend bit set.
NAK_DENIED	Host is unable to comply with the requested message(e.g., beep code is out of range).	Do not send data with this message again. Developer should check values with specified values. Developer should ensure the proper character is sent, if using wake-up character.
NAK_BAD_CONTEXT	Host does not recognize the command.	

The scan engine only resends a message twice. If the message is not sent successfully either time, the scan engine declares a transmit error and issues transmit error beeps (LO-LO-LO-LO).

Do not send data with this message again. Developer should check values with specified values. Developer should ensure the proper character is sent, if using wake-up character.

## DECODE\_DATA

**Description: Decode data in SSI packet format**

**Table 1-9 Packet Format**

Length	Opcode	Message Source	Status	Barcode Type	Decode Data	Checksum
	0xF3	0x00				

**Table 1-10 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum).	1 Byte	Length Field

Opcode	0xF3	1 Byte	Identifies this Opcode type.
Message Source	0 = Scan engine	1 Byte	Identifies where the message is coming from
Status	Bits 1-7: unused Bit 0: Retransmit	1 Byte	Identifies the transmission status. Unused bits must be set to 0.
Barcode Type	See <a href="#">Table 1-11</a>	1 Byte	Identifies the scanned data code type.
Decode Data	<data>	Variable	Data is decoded data including prefix and suffix sent in ASCII format.
Checksum	2's complement sum of message contents excluding checksum.	2 Bytes	Checksum of message.

The scan engine uses this opcode when packeted data is selected to send decoded barcode data to the host. The decoded message is contained in the Decode Data field.

[Table 1-11](#) lists all scan engine supported code types. The associated hex value for each code (as required) is entered in the Code Type field.

**Table 1-11 Supported Code Types**

Code Type	Hex Value	Code Type	Hex Value
Not Applicable	0x00	EAN 13 with 5 Supps.	0x8B
Code 39	0x01	EAN 13	0x0B
Codabar	0x02	EAN 13 with 2 Supps.	0x4B
Code 128, Setup128	0x03	EAN 13 with 5 Supps.	0x8B
Discrete 2 of 5	0x04	MSI	0x0E
IATA 2 of 5	0x05	GS1-128	0x0F
Interleaved 2 of 5	0x06	UPC E1	0x10
Code 93	0x07	UPC E1 with 2 Supps.	0x50
UPC A	0x08	UPC E1 with 5 Supps.	0x90
UPC A with 2 Supps.	0x48	Trioptic Code 39	0x15
UPC A with 5 Supps.	0x88	Bookland EAN	0x16
UPC E0	0x09	Coupon Code	0x17
UPC E0 with 2 Supps.	0x49	GS1 DataBar-14	0x30
EAN 8 with 2 Supps	0x4A	Code11	0x0C
EAN 8 with 5 Supps	0x8A	PDF417	0xF0
QR	0xF1	Data Matrix(DM)	0xF2

Aztec Code	0xF3	Maxi Code	0xF4
Veri Code	0xF5	Han Xin	0xF7
AIM128	0xA2	ISSN	0xA3
PLESSEY	0xA4		

### Host Requirements

If ACK/NAK handshaking is enabled, the host responds to each of these messages.

### Scan Engine Requirements

Decode data is sent in this format if packeted decode data is selected via parameter. The host responds to this message with a CMD\_ACK, if ACK/NAK handshaking is enabled.

## LED\_OFF

**Description: De-activate LED output**

**Table 1-12 Packet Format**

Length	Opcode	Message Source	Status	LED Selection	Checksum
0x05	0xE8	0x04		0x01	

**Table 1-13 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xE8	1 Byte	Identifies this Opcode type
Message Source	4 = Host	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status. Unused bits must be set to 0
LED Selection	Bit 0 - 7: LED bit numbers to turn off	1 Byte	Bit 0 = decode LED All other bits should be set to 0
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

The host sends this message to turn off the decode LED.

### Host Requirements

None.

### Scan Engine Requirements

The scan engine turns off the decode LED.

## LED\_ON

**Description: Activate LED output**

**Table 1-14 Packet Format**

Length	Opcode	Message Source	Status	LED Selection	Checksum
0x05	0xE7	0x04		0x01	

**Table 1-15 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xE7	1 Byte	Identifies this Opcode type
Message Source	4 = Host	1 Byte	Identifies where the message is coming from

Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status. Unused bits must be set to 0
LED Selection	Bit 0 - 7: LED bit numbers to turn on	1 Byte	Bit 0 = decode LED All other bits should be set to 0
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

The host sends this message to turn on the decode LED.

**Host Requirements**

None.

**Scan Engine Requirements**

The scan engine turns on the decode LED.

**PARAM\_DEFAULTS**

**Description:** Sets the parameters to their factory default values

**Table 1-16 Packet Format**

Length	Opcode	Message Source	Status	Checksum
0x04	0xC8	0x04		

**Table 1-17 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xC8	1 Byte	Identifies this Opcode type
Message Source	4 = Host	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status Unused bits must be set to 0
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

This command returns all parameters to their factory default settings.

**Host Requirements**

The host sends this command to reset the scan engines parameter settings to the factory default values.

**Scan Engine Requirements**

Upon receiving this command, the scan engine resets all its parameters to the factory default values. The behavior is the same as scanning a **Set Factory Defaults** barcode.

### Recommendations

When setting parameters via SSI with the permanent flag set, the following conditions must be met:

- The system must have stable power applied to the scan engine.
- The scan engine and host must be operating and communicating with no interference.
- Power must be maintained for at least two seconds after sending the command or scanning the parameter barcode.

Failure to meet these conditions can corrupt the scan engine's memory.

## PARAM\_REQUEST

**Description: Request values of selected parameters**

**Table 1-18 Packet Format**

Length	Opcode	Message Source	Status	Request Data	Checksum
	0xC7	0x04			

**Table 1-19 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xC7	1 Byte	Identifies this Opcode type
Message Source	4 = Host	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status Unused bits must be set to 0
Request Data	<Param_num><Param_num> <Param_num>...	Variable	
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

The host uses this message to request selected parameters from the scan engine.

### Host Requirements

The host requests the scan engine's current values for specific parameters by listing the parameter numbers in the Request\_Data field. If the host asks for a parameter value not supported by the scan engine, the scan engine does not send a value for this unsupported param\_num. If none of the requested values is supported, the scan engine transmits an empty PARAM\_SEND message. If the host requests the value of all the parameters, it sends a special param\_num called ALL\_PARAMS (0xFE) in the first position of the Request\_Data field.

**NOTE:** The scan engine's response to this command is PARAM\_SEND, not ACK. Depending on the time-out set, and the number of parameters requested, this reply may fall outside the programmable Serial Response Time-out. If this occurs, this is not a time-out error. To compensate, increase the time-out.

### Scan Engine Requirements

When the scan engine receives this message, it processes the information by formatting a PARAM\_SEND message containing all requested parameters supported and their values. The programmable Serial Response Time-out can be exceeded when processing this message, depending on the time-out set and the number of parameters requested.

### Hints for requesting parameter values

Before forming a PARAM\_REQUEST, confirm that the scan engine supports the requested parameters. To find out what parameters are supported, send an 0xFE (request all parameters). The response to this is a PARAM\_SEND which contains all the supported parameters and their values. 0xFE must be in the first position of the request\_data field if used, or it is treated as an unsupported parameter.

Unsupported parameters are not listed in the PARAM\_SEND response. Requesting unsupported parameters has no effect, but can cause delays in responding to requests for valid parameters. See [Table 1-20](#) for example requests and responses.

**Table 1-20 Example Requests and Replies**

	PARAM_REQUEST message	Response PARAM_SEND message
#1, 9C	06 C7 04 00 01 9C FE 92	09 C6 00 00 FF 01 00 9C 07 FD 8E
#All, 1, 9C	07 C7 04 00 FE 01 9C FD 93	0D C6 00 00 FF 01 00 02 01 9C 07 E6 63 FC 3E
#1, 9C, ALL	07 C7 04 00 01 9C FE FD 93	09 C6 00 00 FF 01 00 9C 07 FD 8E
#4	05 C7 04 00 04 FF 2C	05 C6 00 00 FF FE 36
#ALL - 3 times	07 C7 04 00 FE FE FE FC 34	0D C6 00 00 FF 01 00 02 01 9C 07 E6 63 FC 3E
#1 -3 times	07 C7 04 00 01 01 01 FF 2B	0B C6 00 00 FF 01 00 01 00 01 00 FE 2D

## PARAM\_SEND

**Description:** Respond to a PARAM\_REQUEST, change particular parameter values

**Table 1-21 Packet Format**

Length	Opcode	Message Source	Status	Beep Code	Param data	Checksum
	0xC6					

**Table 1-22 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xC6	1 Byte	Identifies this Opcode type
Message Source	0 = Scan engine 4 = Host	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bits 1, 2: Unused Bit 3: Change Type Bits 4-7: Unused	1 Byte	Bit 0: 1= Retransmit Bit 3: 1 = Permanent change 0 =Temporary change - lost when power removed Unused bits must be set to 0
Beep code		1 Byte	If no beep is required, set this field to 0xFF
Param_data	See <a href="#">Table 3-1</a>		The parameter numbers and data to be sent to the requester
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

This message is sent by the scan engine in response to the PARAM\_REQUEST message, or by the host to change the scan engine's parameter values.

Parameter numbers 0xF0 (+256), 0xF1 (+512), 0xF2 (+768) are used to access parameters whose numbers are 256 and higher. For example, to access the first parameter in the 256-511 range, use 0xF0 and 0x00.

### Host Requirements

The host transmits this message to change the scan engine's parameters. Be sure the Change Type bit in the Status byte is set as desired. If no beep is required, the beep code must be set to 0xFF.

**NOTE:** Due to the processing time of interpreting and storing parameters contained in the message, the scan engine may not be able to send an ACK within the programmable Serial Response time-out. This is not an error; to compensate, increase the time-out.

### Scan Engine Requirements

When the scan engine receives a PARAM\_SEND, it interprets and stores the parameters, then send ACKs command (if ACK/NAK handshaking is enabled). These parameters are stored permanently only if the Change Type (bit 3 of the Status byte) is set to 1. If bit 3 is set to 0 the changes are temporary, and are lost when the scan engine is powered down.

If the PARAM\_SEND is sent by the host contains a valid beep code, the scan engine issues the requested beep sequence, and changes the requested parameter values.

The scan engine issues a PARAM\_SEND in response to a PARAM\_REQUEST from the host. It responds to the PARAM\_REQUEST message by sending all supported parameter values. No value is sent for any unsupported param\_num. If none of the requested values is supported, the PARAM\_SEND message is transmitted with no parameters. When sending this command, the Change Type bit (bit 3 of Status byte) can be ignored.

### Recommendations

When setting parameters via SSI with the permanent flag set, the following conditions must be met:

- The system must have stable power applied to the scan engine.
- The engine and host must be operating and communicating with no interference.
- Power must be maintained for at least two seconds after sending the command or scanning the parameter barcode.

Failure to meet these conditions can corrupt the scan engine's memory.

## REPLY\_REVISION

**Description:** Reply to REQUEST\_REVISION command with software revision string

**Table 1-23 Packet Format**

Length	Opcode	Message Source	Status	Revision	Checksum
	0xA4	0x00			

**Table 1-24 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xA4	1 Byte	Identifies this Opcode type
Message Source	0 = Scan engine	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status Unused bits must be set to 0
Revision	ASCII data	variable	Software revision in ASCII (see format below)
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

### Host Requirements

None.

**Scan Engine Requirements**

The scan engine sends its revision string to the host in the following format:

Product Name <space> Product ID <space> Hardware version <space> Firmware version

Product Name corresponds to the scan engine product name.

Product ID is the only ID of the product.

The hardware version of the scan engine, version format is 1.1.3.

The firmware version of the scan engine, version format is 1.1.3.

**REQUEST\_REVISION**

**Description:** Request the software revision string from the scan engine

**Table 1-25 Packet Format**

Length	Opcode	Message Source	Status	Data	Checksum
0x04	0xA3	0x04			

**Table 1-26 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xA3	1 Byte	Identifies this Opcode type
Message Source	4 = Host	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status Unused bits must be set to 0
Data			None
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

**Host Requirements**

The host sends this message to request revision information from the scan engine. The scan engine responds with **REPLY\_REVISION**.

**Scan Engine Requirements**

The scan engine sends its revision string to the host. See [REPLY\\_REVISION](#) for format.

**NOTE:**

Sleep Mode: Send 0x00, delay 50ms once. Then send the query command. There is still no data if waiting for 600ms, you should repeat the above process three times.

Normal Mode: Send the query command. There is still no data if waiting for 600ms, you should repeat the above process three times.

**SCAN\_DISABLE**

**Description:** Prevent the scan engine from scanning barcodes

**Table 1-27 Packet Format**

Length	Opcode	Message Source	Status	Data	Checksum
0x04	0xEA	0x04			

**Table 1-28 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xEA	1 Byte	Identifies this Opcode type
Message Source	4 = Host	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status Unused bits must be set to 0
Data			None
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

### Host Requirements

All scan attempts are disabled by this command until either a SCAN\_ENABLE is sent, or the scan engine is reset.

### Scan Engine Requirements

When the scan engine receives this command, it ignores all trigger/START\_DECODE requests until a SCAN\_ENABLE command is received.

## SCAN\_ENABLE

**Description:** Permit the scan engine to scan barcodes

**Table 1-29 Packet Format**

Length	Opcode	Message Source	Status	Data	Checksum
0x04	0xE9	0x04			

**Table 1-30 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xE9	1 Byte	Identifies this Opcode type
Message Source	4 = Host	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status Unused bits must be set to 0
Data			None
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

### Host Requirements

The host sends the SCAN\_ENABLE command to enable scanning in the scan engine. Scanning is enabled upon power-up, so this command need only be sent if a prior SCAN\_DISABLE command was sent.

### Scan Engine Requirements

The scan engine allows scanning and decoding upon receipt of this command.

**NOTE :**At initial power-up, the scan engine assumes SCAN\_ENABLED.

## SLEEP

**Description:** Request to place the scan engine into Sleep power state

**Table 1-31 Packet Format**

Length	Opcode	Message Source	Status	Data	Checksum
0x04	0xEB	0x04			

**Table 1-32 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xEB	1 Byte	Identifies this Opcode type
Message Source	4 = Host	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status Unused bits must be set to 0
Data			None
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

### Host Requirements

The host sends this command to place the scan engine into Sleep power state. If the low power mode parameter is enabled, the scan engine goes into Sleep power state automatically, and the SLEEP command is not necessary.

**NOTE :** The scan engine does not sleep immediately upon acknowledging the command if it is processing data when the SLEEP command is sent.

### Scan Engine Requirements

None.

## START\_DECODE

**Description:** Tell scan engine to attempt to decode a barcode

**Table 1-33 Packet Format**

Length	Opcode	Message Source	Status	Data	Checksum
0x04	0xE4	0x04			

**Table 1-34 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xE4	1 Byte	Identifies this Opcode type
Message Source	4 = Host	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status Unused bits must be set to 0
Data			None
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

This command tells the scan engine to start a scan and decode session. The decode session ends with a successful decode, a scan session time-out, or a STOP\_DECODE command.

**Host Requirements**

If the TRIGGER\_MODE parameter is set to HOST, the host can use this command instead of a trigger pull.

**Scan Engine Requirements**

None.

## STOP\_DECODE

**Description:** Tell scan engine to abort a decode attempt

**Table 1-35 Packet Format**

Length	Opcode	Message Source	Status	Data	Checksum
0x04	0xE5	0x04			

**Table 1-36 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xE5	1 Byte	Identifies this Opcode type
Message Source	4 = Host	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status Unused bits must be set to 0
Data			None
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

This command tells the scan engine to stop a scan and decode attempt.

**Host Requirements**

The TRIGGER\_MODE parameter must be set to HOST.

**Scan Engine Requirements**

None.

## RESET

**Description:** Reset scan engine

**Table 1-38 Packet Format**

Length	Opcode	Message Source	Status	Data	Checksum
0x04	0xFA	0x04			

**Table 1-39 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xE5	1 Byte	Identifies this Opcode type
Message Source	4 = Host	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status Unused bits must be set to 0
Data			None

Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message
----------	---	---------	---------------------

**Host Requirements**

Send 0xFA command.

**Scan Engine Requirements**

Which the scan engine replies ACK indicates reset.

**EVENT**

**Description: Indicate selected events occurred**

**Table 1-40 Packet Format**

Length	Opcode	Message Source	Status	Event Code	Checksum
0x05	0xF6	0x00			

**Table 1-41 Field Descriptions**

Field Name	Format	Size	Description
Length	Length of message (not including checksum)	1 Byte	Length field
Opcode	0xF6	1 Byte	Identifies this Opcode type
Message Source	0 = Decoder	1 Byte	Identifies where the message is coming from
Status	Bit 0: Retransmit Bit 1-7: Unused	1 Byte	Identifies the transmission status Unused bits must be set to 0
Event Code	Type of Event Code	1 Byte	See <a href="#">Table 1-42</a>
Checksum	2's complement sum of message contents excluding checksum	2 Bytes	Checksum of message

**Host Requirements**

The host receives this message when a selected event occurs.

**Decoder Requirements**

Generate this message when a selected event occurs

The command does not require the host to reply to the ACK. Specific event switch refers to Event Report

**Table 1-42 Event Codes**

Event Class	Event	Code Reported
Boot Up Event	Scan engine completes power on	0x01
Trigger Event	Scan engine triggers to read	0x02

**2. SSI Extended Command**

**Table 2-1 SSI Extended Command**

Name	Type	Opcode	Description	Support
DECODE_DATA_TWO	D	0xF4	Decode data (only for 2D barcode )	Yes
CFG_PARAM_SEND	H/D	0xFC	Send configuration parameters (extended command format )	Yes
CFG_PARAM_REQUEST	H	0xFD	Request configuration parameters (extended command format )	Yes

**Table 2-2 General Packet Format**

Length 1	Opcode1	Length 2 High Byte	Length 2 Low byte	Opcode 2	Message Source	Status	Data	High 8-bit Check	Low 8-bit Check
----------	---------	--------------------	-------------------	----------	----------------	--------	------	------------------	-----------------

255 is the maximum data length that SSI command supports, so SSI extended command is needed

Description:

Length 1: Always 0xFF

Length 2: Length does not include 2 bytes of check digit

Opcode1: Opcode 1 is the same as Opcode 2

More information refers to SSI Command.

**Table 2-3 Field Descriptions**

Field Name	Format	Sub-Field	Meaning
Length1	1 Byte	Length1	Length1 is 0xFF
Opcode1	1 Byte	See <a href="#">Table 2-1</a> for details.	Identifies the type of packet data being sent.
Length2	2 Bytes	Packet length	Length2 has two bytes, high 8 bits in front ,low 8 bits at the back.
Opcode2	1 Byte	See <a href="#">Table 2-1</a> for details.	The same as opcode1
Message Source	1 Byte	0 = Scan engine 04 = Host	Identifies where the message is coming from.
Status	Bit 0	Retransmit	0 = First time packet is sent 1 = Subsequent transmission attempts
	Bit 1	Reserved	Always set to zero
	Bit 2	Reserved	Always set to zero
	Bit 3	Change Type (applies to parameters)	0 = Temporary change 1 = Permanent change
	Bits 4 – 7		Unused bits must be set to 0.
Data	Variable number of bytes	See individual sections for details.	
Checksum	2 Bytes	2's complement sum of message contents excluding checksum.	Checksum of message formatted as HIGH BYTE LOW BYTE, HIGH BYTE is in front.

Note: The checksum is a 2 byte checksum and must be sent as HIGH BYTE followed by LOW BYTE.

## DECODE\_DATA\_TWO

Description: 2D barcode decoded packet format.

**Table 2-4 Packet Format**

Length1	Opcode1	Length2	Opcode2	Message Source	Status	Barcode Type	Decode Data	Checksum
---------	---------	---------	---------	----------------	--------	--------------	-------------	----------

0xFF	0xF4		0xF4	0x00				
------	------	--	------	------	--	--	--	--

**Table 2-5 Field Descriptions**

Field Name	Format	Size	Description
Length1	0xFF	1 Byte	Length1 is always 0xFF
Opcode1	0xF4	1 Byte	Identifies this Opcode type.
Length2	High 8 bits, low 8 bits	2 Bytes	Length2 has two bytes, high 8 bits in front, low 8 bits at the back.
Opcode2	0xF4	1 Byte	Identifies this Opcode type.
Message Source	0 = Scan engine	1 Byte	Identifies where the message is coming from.
Status	Bit 0: Retransmit Bits 1-7: unused	1 Byte	Identifies the transmission status. Unused bits must be set to 0.
BarCode Type	See <a href="#">Table 1-11</a>	1 Byte	Identifies the scanned data code type.
Decode Data	<data>	Variable	Data is decoded data including prefix and suffix sent in ASCII format.
Checksum	2's complement sum of message contents excluding checksum.	2 Bytes	Checksum of message.

**Host Requirements**

If ACK/NAK handshaking is enabled, the host responds to each of these messages.

**Scan Engine Requirements**

Decode data is sent in this format if packeted decode data is selected via parameter. The host responds to this message with a CMD\_ACK, if ACK/NAK handshaking is enabled.

### 3. Parameter Configuration

Default setting code of special mark symbol is corresponding to different default configuration.No special mark symbol depends on default setting code with \* symbol(except factory default configuration):

- \* : default configuration 1
- # : default configuration 2

% : default configuration 3

& : default configuration 4

## Set Default Parameter

To restore Factory Default Configuration or Default Configuration 1-5, scan the appropriate barcode below.

**Set Factory Defaults** - Scan this barcode to restore the factory default values listed in [Table 4-6](#).

### Factory Default Configuration



Note: Default configurations of the scan engine depend on factory default configuration.

### Default Configuration1

The parameter is main for the POS,.

Communication Mode: Serial port

Trigger Mode: Key holding.

Terminator: Disable



### Default Configuration2

The parameter is main for Self-help parameter configuration,

Communication Mode: USB KBW

Trigger Mode: Auto-induction

Terminator: Auto newline(\r\n)



### Default Configuration3

The parameter is main for scan engine parameters configuration  
Communication Mode: USB KBW  
Trigger Mode: Key holding  
Terminator : Enter(\r)



### Default Configuration4

Communication Mode: Serial port 9600  
Trigger Mode: Key holding.  
Terminator: Auto newline  
2D barcode only open QR and DM.



### Default Configuration5

Not yet enabled



## Output Product Information

Parameter # 0xF4 0x01



## Trigger Mode

Parameter # 0x8A

## (Level) Key Holding

Press the button to trigger the reading, release the button to end the reading. Reading success or reading time over a single reading time will end the reading.

## (Pulse) Single Key Trigger

Detects the change of the key level (Maintain 30ms, depending on the product )to start reading, and then detects the change of the key level (Maintain 30ms, depending on the product )again to end reading. Reading success or reading time over a single reading time will end the reading.

## Continuous Mode

The reading engine performs continuous work. Reading success or reading time over a single reading time will end the reading. More than the specified time will automatically trigger the next reading.

## Automatic Induction Mode

In automatic induction mode, the scan engine detects the brightness of the surroundings. Trigger reading when the brightness changes. Reading success or reading time over a single reading time will end the reading. Regardless of the last success or failure to read, re-enter the detection of the surrounding environment brightness.

## Host

Through the command to trigger the scan engine to read, also through the command to trigger the scan engine to end reading. Reading success or reading time over a single reading time will end the reading.

## Button Automatic Induction Mode

When the button is pressed all the way, it enters automatic induction mode until the button is released and scanning barcode is finished.

When the button is pressed, the positioning light is on, off when the button is released.

**Note:** Key Trigger(Level and Pulse) still valid in other modes



2050200

\* % & Level

(0X00)



2050202

Pulse

(0X02)



2050204

Continuous

(0X04)




2050209

# Automatic Induction Mode  
(0x09)



2050208

Host  
(0X08)

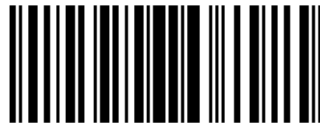

205020A

Button Continuous  
(0x0A)



205020B

Button Automatic Induction Mode  
(0x0B)

## Duration in Scanning

### Parameter # 0x88

This parameter sets the maximum time decode processing continues during a scan attempt. It is programmable in 0.1 second increments from 0.50 to 25.5 seconds.

To set a duration in scanning, scan the barcode below. Next scan three *Numeric Barcodes* in appendix that correspond to the desired on time. Single digit numbers must have a leading zero. For example, to set an on time of 0.5 seconds, scan the barcode below, then scan the "0", "0" and "5" barcodes; to set an on time of 10.5 seconds, scan the barcode below, then scan the "1", "0" and "5" barcodes. To change the selection or cancel an incorrect entry, scan *Cancel* in appendix.



**30500305FF**  
Duration in Scanning(Default: 3.0 sec.)

**Quick Setting**

**Parameter # 0xF2 0xCF**


Support 3S、5S、10S、15S、20S、30S、60S and infinite time.



**3030CF0**  
infinite time  
(0x00)



**3030CF3**  
3s  
(0x03)

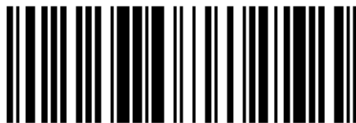

**3030CF5**  
5s  
(0x05)



**3030CFA**

**10s  
(0x0A)**



**3030CFB**

**15s  
(0x0B)**



**3030CFC**

**20s  
(0x0C)**



**3030CFD**

**30s  
(0x0D)**



**3030CFE**

**60s  
(0x0E)**

## Continuous Reading Interval

### Parameter # 0x89

The interval time between two readings in continuous mode. Regardless of the last success or failure to read, more than the specified time will automatically trigger the next reading.

Default: 500ms,unit: 100ms,range: 0-9900ms

To set a Continuous Reading Interval, scan the barcode below. Next scan two *Numeric Barcodes* in appendix that correspond to the desired time-out. Single digit values must have a leading zero. For example, to set a time-out of 0.5 seconds, scan the barcode below, then scan the “0” and “5” barcodes. To change the selection or cancel an incorrect entry, scan *Cancel* in appendix.



## Same Code Reading Delay

### Parameter #0xF3 0x03

To avoid reading the same barcode multiple times in continuous mode and automatic induction mode, set the scan engine to allow reading the same barcode after a delay.

Same code reading delay is to refuse to read the same barcode within the set length of time.

Default: 500ms,unit:100ms,range: 0-9900ms

To set same code reading delay, scan the barcode below. Next scan two *Numeric Barcodes* in appendix that correspond to the desired time-out. Single digit values must have a leading zero. For example, to set a time-out of 0.5 seconds, scan the barcode below, then scan the “0” and “5” barcodes. To change the selection or cancel an incorrect entry, scan *Cancel* in appendix.

For example:

Set same code reading delay to 200ms,first scan same code reading delay setting code,then scan *Numeric Barcodes* to set 0 and 2.

Set same code reading delay to 1500ms,first scan same code reading delay setting code,then scan *Numeric Barcodes* 1 and 5.



## Fast Setting

### Parameter # 0xF2 0xC9

Fast setting, Including 0s、 1s、 3s、 5s、 7s and infinite delay.



**3030C90**

**No Delay  
(0x00)**



**3030C91**

**Delay 1s  
(0x01)**




**3030C93**

**Delay 3s  
(0x03)**



**3030C95**

**Delay 5s  
(0x05)**

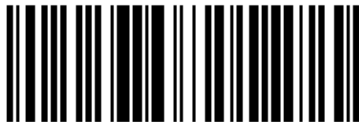

**3030C97**

**Delay 7s  
(0x07)**



3030C99

Infinite Delay(Disable Same code reading delay)  
(0x09)

## Continuous Scanning

### Parameter # 0xF6 0x39

Applicable trigger method: (level) key hold, (pulse) single key trigger, host mode.

In the continuous scanning mode, the continuous reading interval and the same code delay are effective.



6063900

\*Disable  
(0x00)



6063901

Enable  
(0x01)

## The Same Code Is Not Output In a Single Round Of Decoding

### Parameter # 0xF6 0x6B

In a round of decoding, the decoded data of the same code as the previous scan is not output. Cache up to 20 historical records of different decoding results. This function is suitable for the modes of "key continuous", "continue to scan code" and other modes.

Example:

Key-press continuous mode: Press the key to start a round of decoding, until the key is pressed again, to exit the continuous decoding mode, there is a round of decoding between two keys (note that it is different from a single scan).

Continue to scan code & key hold/host mode: The end of the scan code due to timeout will not be regarded as the end of the round.



6066B00

\*Disable  
(0x00)



6066B01

Enable  
(0x01)

## Disable passive trigger scanning

Scan below enable barcode, level and host triggers will be disabled.  
Parameter # 0xF2 0xA8



3030A80

\* Disable  
(0x00)

 


3030A81

Enable  
(0x01)

## Sensitivity Level

Set automatic induction triggering sensitivity  
Sensitivity Values Inquire the parameter values returned.  
Special: 0, high: 1, Middle: 8, Low: 15, Default: High  
Parameter # 0xF2 0x04




3030040

**Special  
(0x00)**



**3030041**

 **\* High  
(0x01)**



**3030042**

**Middle  
(0x02)**



**3030043**

**Low  
(0x03)**

## Custom Sensitivity

### Parameter #0xF3 0x01

Set Automatic induction triggering sensitivity, The smaller ,the more sensitive, Values range 00-15

Default: 01

For example:

Set sensitivity is 2

Scan the custom sensitivity setting code,then scan [Numeric Barcodes](#) 0 and 2



**3F30000001**

**Custom Sensitivity**

## Stability of Induction Time

### Parameter #0xF3 0x02

To set the stable time before the automatic induction mode enters the detection environment, first scan the following barcode, and then scan the two Numeric Barcodes in the appendix to set the corresponding required time. If less than 2 bits are filled with 0.

Default: 500ms, unit: 100ms, range: 0-9900ms

For example:

Set stability of induction time is 200ms

Scan stability of induction time setting code, then scan *Numeric Barcodes* 0 and 2

Set stability of induction time is 1500ms

Scan stability of induction time setting code, then scan *Numeric Barcodes* 1 and 5



3F3000002

Stability of Induction Time

## Communication Mode

Parameter # 0xF2 0x01



3030010

\* & Serial Port, UART, TTL, RS232  
(0x00)



3030011

# % USB KBW  
(0x01)



3030012

USB Serial Port  
(0x02)



**3030013**  
AUTO UK  
(0x03)



**3030014**  
AUTO UV  
(0x04)



**3030015**  
Wiegand  
(0x05)



**3030016**  
RS485  
(0x06)



**3030017**  
AUTO UW  
(0x07)



**3030018**  
AUTO UR  
(0x08)



**3030019**  
PS2  
(0x09)



**303001A**  
TTDATA  
(0x0A)



**303001B**  
TTDATA+serial port  
(0x0B)



**303001E**  
HID POS  
(0x0E)

1D module does not support USB KBW and USB serial port

【AUTO\_UK】 Automatic mode UK, USB and serial ports output simultaneously (use KBW)


【AUTO\_UV】 Automatic mode UV, USB and serial output simultaneously (use USB port)

Parameter # 0xF6 0x37



**6063718**

**AUTO KW (KBW+Wiegand)  
(0x18)**

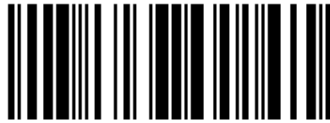

**6063719**

**AUTO KR (KBW+RS485)  
(0x19)**




**606371A**

**AUTO HU (HIDPOS+Serial port)  
(0x1A)**



**606371B**

**AUTO HW (HIDPOS+Wiegand)  
(0x1B)**

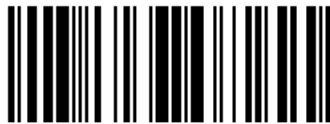

**606371C**

**AUTO HR (HIDPOS+RS485)  
(0x1C)**

[AUTO UK] USB and serial port output at the same time (USB uses KBW)

[AUTO UV] USB and serial port output at the same time (USB uses USB serial port)  
[AUTO UW] USB and Wiegand output at the same time (USB uses USB serial port)  
[AUTO UR] USB and RS485 output at the same time (USB uses USB serial port)  
[AUTO UT] USB and serial port output at the same time (USB uses TTDATA)  
[AUTO TW] USB and Wiegand output at the same time (USB uses TTDATA)  
[AUTO TR] USB and RS485 output at the same time (USB uses TTDATA)  
[AUTO KW] USB and Wiegand output at the same time (USB uses KBW)  
[AUTO KR] USB and RS485 output at the same time (USB uses KBW)  
[AUTO HU] USB and serial port output at the same time (USB uses HIDPOS)  
[AUTO HW] USB and Wiegand output at the same time (USB uses HIDPOS)  
[AUTO HR] USB and RS485 output at the same time (USB uses HIDPOS)

## Serial Parameters

### Baud Rate

#### Parameter # 0x9C

Baud rate is the number of bits of data transmitted per second. The scan engine's baud rate setting should match the data rate setting of the host device. If not, data may not reach the host device or may reach it in distorted form.





**2090106**  
\* Baud Rate 9600  
(0x06)



**2090107**  
Baud Rate 19,200  
(0x07)



**2090108**  
Baud Rate 38,400  
(0x08)



**2090109**  
Baud Rate 57600  
(0x09)



**209010A**  
Baud Rate 115200  
(0x0A)

## Data Bit

### Parameter # 0xA0

Data bit: This is a parameter to measure the actual data bit in communication.



2090502  
7 Data Bits  
(0x02)



2090503  
\*8 Data Bits  
(0x03)

## Parity

### Parameter # 0x9E

A parity check bit is the most significant bit of each ASCII coded character. Select the parity type according to host device requirements.

If you select **ODD** parity, the parity bit has a value 0 or 1, based on data, to ensure that an odd number of 1 bits is contained in the coded character.



2090300  
Odd  
(0x00)

If you select **EVEN** parity, the parity bit has a value 0 or 1, based on data, to ensure that an even number of 1 bits is contained in the coded character.



2090301  
Even  
(0x01)

Select **MARK** parity and the parity bit is always 1.



2090302  
Mark

(0x02)

Select **SPACE** parity and the parity bit is always 0.



If no parity is required, select **NONE**.



## Stop Bit Select

Parameter # 0x9D

The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. Set the number of stop bits (one or two) to match host device requirements.



## Software Handshaking

### Parameter # 0x9F

This parameter offers control of the data transmission process in addition to that offered by hardware handshaking. Hardware handshaking is always enabled and cannot be disabled by the user.

### Disable ACK/NAK Handshaking

When this option is selected, the scan engine neither generates nor expects ACK/NAK handshaking packets.



### Enable ACK/NAK Handshaking

When this option is selected, after transmitting data, the scan engine expects either an ACK or NAK response from the host. The scan engine also sends ACKs or NAKs messages to the host.

The scan engine waits up to the programmable Host Serial Response Time-out to receive an ACK or NAK. If the scan engine does not get a response in this time, it resends its data up to two times before discarding the data and declaring a transmit error.



## Host Serial Response Time-out

### Parameter # 0x9B

This parameter specifies how long the scan engine waits for an ACK or NAK before resending. Also, if the scan engine wants to send, and the host has already been granted permission to send, the scan engine waits for the designated time-out before declaring an error.

Default: 2000ms, Unit: 100ms, Range: 100-9900ms

For example:

Set the stable induction time to 3000ms. First scan the host serial response timeout setting code, then scan the Numeric Barcodes 0 and 3.

Set the stable induction time to 9900ms. First scan the host serial response timeout setting code, then scan the Numeric Barcodes 9 and 9.



3090020063

Host Serial Response Time-out(Default: 2.0 sec.)

## Keyboard

### Country/Language Keyboard

Parameter #0xF6 0x01



6060101

\* American Keyboard  
(0x01)



6060102

Belgium  
(0x02)



6060103

Brazil (ABNT2)  
(0x03)



6060106

**Denmark  
(0x06)**



**6060107**

**Finland  
(0x07)**



**6060108**

**France  
(0x08)**



**6060109**

**Austria, Germany  
(0x09)**



**606010A**

**Greece  
(0x0A)**



**606010B**

**Hungary**

(0x0B)



**606010D**

**Italy  
(0x0D)**



**606010F**

**Netherlands  
(0x0F)**



**6060110**

**Norway  
(0x10)**



**6060111**

**Poland (214)  
(0x11)**



**6060112**

**Portugal**

0x12



**6060113**  
Romania (standard)  
(0x13)



**6060114**  
Russia  
(0x14)



**6060115**  
Slovakia  
(0x15)



**6060116**  
Spain  
(0x16)



**6060117**  
Sweden  
(0x17)



**6060119**

**Turkey\_F  
(0x19)**



**606011A**

**Turkey\_Q  
(0x1A)**



**606011B**

**England  
(0x1B)**



**606011C**

**Japan  
(0x1C)**



**606011D**

**Czech  
(0x1D)**



**606011E**  
Thailand Kedmanee  
(0x1E)



**606011F**  
Ukraine  
(0x1F)

Supporting countries of Arabic\_101: Saudi Arabia, United Arab Emirates, Oman, Egypt, Bahrain, Qatar, Kuwait, Lebanon, Libya, Syria, Yemen, Iraq, Jordan



**6060120**  
Arabic\_101  
(0x20)



**6060121**  
Croatia  
(0x21)



**6060122**  
Korea  
(0x22)



6060123

Bulgaria  
(0x23)



6060124

Multi-country Common  
(0x24)

[Note 1]: Need to install WIN plug-in

[Note 2]: Multi-country common: In principle, the output character set should be set to UTF8

[Note 3]: Multi-country common: Microsoft Word (Office Word) cannot use this method. You can use the virtual keyboard method, the output character set should be set to UTF8, and the keyboard should be set to an American keyboard.



6060125

Vietnam  
(0x25)

### Time interval that keyboard outputs character

Time interval that keyboard outputs character, range: 0-1000ms,unit: 5ms,default: 5ms

Parameter #0xF3 0x04



3F30000004

For example:

Time interval: 100ms

First scan the setting code above,then scan '0', '2', '0' *Numeric Barcodes* in order.

### Quick Settings of Keyboard Output Time Interval

Parameter # 0xF2 0xB2



3030B20

0ms  
(0x00)




3030B23

5ms  
(0x03)



3030B21

10ms  
(0x01)

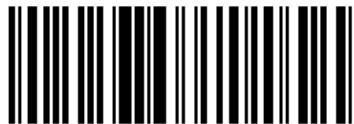

3030B22

50ms  
(0x02)

### Letter case conversion

If set to "Case Inversion", the uppercase of the output data will be lowercase, lowercase letters will be uppercase; If set to "all uppercase", regardless of whether the letters in the output data are uppercase or lowercase, all converted to uppercase letters; If set to "all lowercase", regardless of whether the letters in the output data is uppercase or lowercase, all converted to lowercase letters.

**Parameter #0xF2 0xA1**



3030A10

\* Normal Letter Case

(0x00)



**3030A11**

All Uppercase

(0x01)



**3030A12**

All Lowercase

(0x02)



**3030A13**

Case Inversion

(0x03)

## Keyboard Type

Enable virtual keyboard, you can output the correct data in any keyboard language mode. When using virtual keyboard, you must ensure that the keypad keys are valid

**Parameter # 0xF2 0xB4**



**3030B40**

\* Standard Keyboard

(0x00)



**3030B41**  
Virtual Keyboard  
(0x01)

## Keyboard State Control

Scanner control the state of the keyboard.

Parameter # 0xF2 0XB9



**3030B90**  
Disable  
(0x00)



**3030B91**  
\* Enable  
(0x01)

## ASCII Control Character Output Mode Selection

Parameter # 0xF2 0xAD

(0) Output Function Key: The control character is used as a custom function key. For details, see Appendix Table 4-3.

(1) Output Ctrl Combination Key: Ctrl combination key output control characters. For details, see Appendix Table 4-3.

(2) ALT Mode Output Control Character: Support full control character output in Chinese environment, specific reference standard ASCII table

(3) Output Enter, DownArrow: Mask other control characters, only output: 0x07 output Enter, 0x0A output DownArrow, 0x0D output Enter.

(4) Output the Ctrl key combination, but not the existing keys on the keyboard: Enter.



**3030AD0**  
Output Function Key

(0x00)



**3030AD1**

**Output Ctrl Combination Key  
(0x01)**



**3030AD2**

**ALT Mode Output Control Character  
(0x02)**



**3030AD3**

**Output Enter, DownArrow  
(0x03)**



**3030AD4**

**Output CTRL+key combination, but not including the keys on the keyboard  
(0x04)**

## Wiegand

**Wiegand Protocol Type**  
Parameter # 0xF2 0xA4



**3030A40**

\*AUTO

(0x00)



**3030A41**

WG26

(0x01)



**3030A42**

WG34

(0x02)



**3030A43**

WG66

(0x03)



**3030A44**

**Custom Wiegand transport 1**

(0x04)



3030A45

Custom Wiegand transport 2

(0x05)



3030A46

WG64

(0x06)

## Wiegand 26 Protocol Output Mode

Parameter # 0xF2 0xA5



3030A50

\*3+5

(0x00)



3030A51

Raw Data

(0x01)

## Wiegand Output Time Interval Setting

Parameter # 0xF3 0x16


According to the time to be set, scan the corresponding coefficient (two-digit setting code), and fill in 0 in front of the insufficient digits.

Default: 800us, Unit: 100us, Range: 100-1000us

For example:

Set 100us, the coefficient is 01, you need to scan the two Numeric Barcodes "0" and "1".

Set 1000us, the coefficient is 10, then you need to scan two Numeric Barcodes "1" and "0".

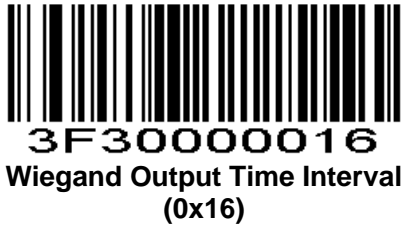

## RS485 Networking Function

### Enable RS485 Networking Function

Enable or disable RS485 networking function

Parameter # 0xF6 0x33



### Modify 485 Device Slave Address

Set 485 slave address

Parameter # 0xF8 0x11

Make setting code ^380811xxxx



### RS485 Networking Decoding Data Format

#### Parameter # 0xF6 0x34

Disable:Send the decoded data directly, the format is add+data.

Enable:Use RS485 networking data packet format

When disable, the se955 packet format must be set to the original data.



6063400

Disable\*  
(0x00)



6063401

Enable  
(0x01)

### RS485 Networking Heartbeat Switch

#### Parameter # 0xF6 0x35



6063500

Disable  
(0x00)



6063501

Enable\*  
(0x01)

### RS485 Network Decoded Data Is Saved To Cache


#### Parameter # 0xF6 0x2E

The RS485 networking decoded data is not sent, but saved in the cache, and sent at one time while waiting for the host computer to query. The RS485 networking data packet format must be enabled to take effect.



6062E00

\*Disable  
(0x00)

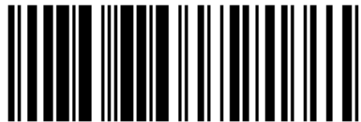

6062E01

Enable  
(0x01)

### Modbus Rtu Networking Function

#### Disable/Enable Modbus Rtu Function

#### Parameter # 0xF6 0x43



6064300

\*Disable  
(0x00)



**6064301**

**Enable  
(0x01)**

## Barcode Cache

Parameter # 0xF6 0x44



**6064400**

**\*Direct Output (Modbus Rtu Format)  
(0x00)**



**6064401**

**Cache  
(0x01)**

## Slave Address Setting

Parameter # 0xF3 0x33

Note: The factory default slave address is 0x00, and the customer needs to configure it to another address (1-255) before it can be used.

Scan setting code to set the slave address , and then scan three number setting codes, the decimal slave address (1-255).

For example, to set the slave address to 0x0A (10), you need to scan the number setting code of 0, 1, 0 in order to set the address to 10 (0x0A).



**3F30000033**

**Set The Slave Address**

## Quickly Set The Slave Address

### Parameter # 0xF6 0x43

Note: The factory default slave address is 0x00, and the customer needs to configure it to another address (1-255) before it can be used.



**6064500**

**\*Address 0x00  
(0x00)**



**6064501**

**Address 0x01  
(0x01)**



**6064502**

**Address 0x02  
(0x02)**



**6064503**

**Address 0x03  
(0x03)**



**60645AA**

**Address 0xAA  
(0xAA)**



**60645BB**

**Address 0xBB  
(0xBB)**

## Power Mode

### Parameter # 0x80

This parameter determines the power mode of the scanning engine.

In low-power mode, the scanning engine automatically enters sleep state after 800ms of idle time (can be woken up by a wake-up command).

In continuous power mode, the scanning engine remains awake after each decoding attempt.

Whether in low power mode or continuous power mode, you can use sleep and wake-up commands (see SLEEP and WAKEUP) to change the power state (immediate sleep: 04 EB 04 00 FF 0D, wake-up method: first send 0x00 to delay 50ms, then send a valid command.)



**1040450**

**Continuous Power  
(0x00)**



**1040451**

**Low power consumption(Low Power)  
(0x01)**

## Beeper

### Beeper Volume

#### Parameter # 0x8C

To select a decode beep volume, scan the appropriate barcode.



**2050802**

**Low  
(0x02)**



**2050801**

**Medium  
(0x01)**



**2050800**

**\* High  
(0x00)**



**2050803**

**Mute  
(0x03)**

**Beeper Type**

**Parameter # 0xF2 0xD8**



**3030D80**

**\* Passive Beeper  
(0x00)**



**3030D81**

## Active Beeper (0x01)

### Beep After Good Decode

#### Parameter # 0x38

Scan this symbol to set the scan engine to beep after a good decode.



1 040021

\* Beep After Good Decode  
(0x01)

Scan this symbol to set the scan engine not to beep after a good decode. The beeper still operates during parameter menu scanning and indicates error conditions.



1 040020

Do Not Beep After Good Decode  
(0x00)

### Indicator Light Function

#### Parameter # 0xF2 0x0A

Scan the appropriate barcode below to set indicator light function.



30300A0

\* Good Decode  
(0x00)



30300A1

Power LED  
(0x01)

### LED After Good Decode

#### Parameter # 0xF2 0x0B

To enable or disable LED after good decode, scan the appropriate barcode below.



**30300B0**

**Disable  
(0x00)**



**30300B1**

**\* Enable  
(0x01)**

## Decode Indicator Control

### Parameter # 0xF2 0xCB

Mode 0: The light is off when power on. Bright when decoding is successful. The light will be off after the specified time.

Mode 1: The light is on when power on. Off when decoding is successful. The light will be on after the specified time (Sleep mode is also bright).

Mode 2: The light is on when power on. Off when triggering decoding. Bright when decoding is successful. The light will be off after the specified time.

Mode 3: The decoding indicator light is used as the illumination light. When decoding, the light is on, and light is off when the decoding ends.



**3030CB0**

**\* Mode 0  
(0x00)**



**3030CB1**

**Mode 1  
(0x01)**



3030CB2

Mode 2  
(0x02)



3030CB3

Mode 3  
(0x03)

## Mute

Parameter # 0xF2 0x0C

To enable or disable close all prompt, scan the appropriate barcode below.



30300C0

\* Disable  
(0x00)



30300C1

Enable  
(0x01)

## Boot prompt

Parameter # 0xF2 0x0D



30300D0

Disable  
(0x00)



**30300D1**

**\* Enable  
(0x01)**

## Setup Code Prompt

Parameter # 0xF2 0x0E



**30300E0**

**Disable  
(0x00)**



**30300E1**

**\* Enable  
(0x01)**

## Floodlight Control

Parameter # 0xF2 0x02



**3030020**

**\* Lighting when Read  
(0x00)**



**3030021**

**Always Lighting  
(0x01)**



**3030022**  
Always Close  
(0x02)

## Positioning light

Only for 2D product.

### Positioning light control

Parameter # 0xF2 0x03



**3030030**  
\* Lighting when Read  
(0x00)



**3030031**  
Always Lighting  
(0x01)



**3030032**  
Always Close  
(0x02)

### Positioning light Flicker

Parameter # 0xF2 0xB8



3030B80

\*Flicker  
(0x00)



3030B81

No Flicker  
(0x01)

### Decode Data Packet Format

#### Parameter # 0xEE

This parameter selects whether decoded data is transmitted in raw format (unpacked), or transmitted with the packet format as defined by the serial protocol.

If the raw format is selected, ACK/NAK handshaking is disabled for decode data.



1040610

\* Send Raw Decode Data  
(0x00)



1040611

Send Packeted Decode Data  
(0x01)

### Transmit “No Read” Message

#### Parameter # 0x5E

Enable this option to transmit “NR” if a symbol does not decode during the timeout period or before the trigger is released. Any enabled prefix or suffixes are appended around this message.



**1020101**  
**Enable No Read**  
**(0x01)**

When disabled, it cannot send any messages to the host even if the barcode cannot be decoded.



**1020100**  
**\* Disable No Read**  
**(0x00)**

## Transmit Code ID Character

### Parameter # 0x2D

A code ID character identifies the code type of a scanned barcode. This can be useful when decoding more than one code type. The code ID character is inserted between the prefix character (if selected) and the decoded symbol.

Select no code ID character, a Symbol Code ID character, or an AIM Code ID character. The Symbol Code ID characters are listed below; see [AIM Code Identifiers](#).



**2051702**  
**Code ID**  
**(0x02)**



**2051701**  
**AIM ID**  
**(0x01)**



2051700

\* None  
(0x00)

## Terminator

### Parameter # 0xF2 0x05

Add character format: Decode Data+Terminator.



3030050

\* Disable  
(0x00)



3030051

# & CR LF  
(0x01)



3030052

% CR  
(0x02)



3030053

TAB  
(0x03)



3030054  
CR CR  
(0x04)



3030055  
CR LF CR LF  
(0x05)

## Prefix/Suffix

### Prefix/Suffix Values

Parameter # P = 0x69, S1 = 0x68, S2 = 0x6A

A prefix and/or one or two suffixes can be appended to scan data for use in data editing. To set these values, scan a four-digit number (i.e. four barcodes) that corresponds to ASCII values. See the [Table 4-3](#) and [Numeric Barcodes](#) in appendix. To change the selection or cancel an incorrect entry, scan [Cancel](#) in appendix. To set the Prefix/Suffix values via serial commands, see [Character Comparison Table](#).

**NOTE:** In order to use Prefix/Suffix values, the [Scan Data Transmission Format](#) must be set.



50C0107  
Scan Prefix



50C0006  
Scan Suffix 1



50C0208  
Scan Suffix 2



6Q

Data Format Cancel

## Continuously Set Multiple Prefix and Suffix Modes

Note: You must set the prefix value or suffix value first, and then set the data transmission format.

### Continuously Set Multiple Prefix

Parameter # 0xF3 0x10

Default is one prefix, you can set up to ten prefixes. Scan the barcode below to continuously set multiple prefixes. Scan Numeric Barcodes to set prefix. Each four Numeric Barcodes corresponds to a prefix character through an appendix table. Automatically ends after scanning for ten prefixes. According to the number of prefixes needed, you can scan "Complete Continuous Setup of Multiple Prefixes / Suffixes" to complete the prefix setting in advance.

Note: In order to use multiple prefixes, you must set up data transmission Format, that is "multiple prefix + data" or "multiple prefix + data + multiple suffixes" correspond to multiple prefix functions.



3F30000010


Continuously Set Multiple Prefix  
(0x00)

### Quickly Set Multiple Prefixes

Parameter # 0xF8 0x14

Suppose the prefix value is set to: AB (ASCII value: 0x41, 0x42)

Setting code

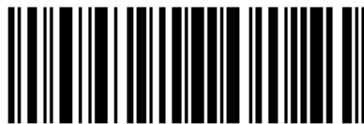

808144142

### Continuously Set Multiple Suffixes

Parameter # 0xF3 0x11

Default is two suffixes, you can set up to ten suffixes. Scan the barcode below to continuously set multiple suffix. Scan Numeric Barcodes to set suffix. Each four Numeric Barcodes corresponds to a suffix character through an appendix table. Automatically ends after scanning for ten suffixes. According to the

number of suffixes needed, You can scan "Complete Continuous Setup of Multiple Prefixes / Suffixes" to complete the suffix setting in advance.

Note: In order to use multiple suffixes, you must set up data transmission format, that is "data + multiple suffixes " or "multiple prefixes + data + multiple suffixes" correspond to multiple suffix functions.



**3F30000011**  
**Continuously Set Multiple Suffix**  
**(0x00)**

### Quickly Set Multiple Suffixes

**Parameter # 0xF8 0x15**

Suppose the suffix is set to: AB (ASCII value: 0x41, 0x42)  
Setting code



**808154142**

### Complete Continuous Setup of Multiple Prefixes / Suffixes

**Parameter # 0xFF 0XF6**

Scanning the code below exits the state of continuous setup of multiple prefixes or suffixes and preserves the current setting of prefixes or suffixes.

Note:If continuously set ten prefixes or suffixes, the setting will be automatically terminated. Otherwise the code below must be scanned each time to exit the state.



**303FF60**  
**Complete Continuous Setup of Multiple Prefixes / Suffixes**  
**(0x00)**

### Exit Set Prefix or Suffix

**Parameter # 0xFF 0XF6**

Scanning the barcode below will exit continuously set prefix or suffix. And reserve the current setting of prefix or suffix.

Note:If continuously set ten prefixes or suffixes,then automatic end setting. Otherwise, scan the barcode below every time to exit.



**303FF60**

## Exit Set Prefix or Suffix (0x00)

### Scan Data Transmission Format

#### Parameter # 0xEB

Scan the following corresponding barcodes to set the desired data transmission format.

Note: Scan the barcode below to set corresponding data format after setting prefixes or suffixes. For example, it is "data+suffix 1" data format before, after setting prefixes, must scan "prefixes+data" or "prefixes+data+suffixes" to set prefix function.



**20C1000**

\* Original Data  
(0x00)



**20C1001**

<DATA><SUFFIX 1>  
(0x01)



**20C1002**

<DATA><SUFFIX2>  
(0x02)



**20C1003**

<DATA> <SUFFIX 1><SUFFIX 2>  
(0x03)



**20C1004**

<PREFIX> <DATA >  
(0x04)



**20C1005**  
<PREFIX> <DATA> <SUFFIX 1>  
(0x05)



**20C1006**  
<PREFIX> <DATA> <SUFFIX 2>  
(0x06)



**20C1007**  
<PREFIX> <DATA> <SUFFIX 1> <SUFFIX 2>  
(0x07)



**20C1008**  
Data + Multiple Suffixes  
(0x08)



**20C1009**  
Multiple Prefixes+Data  
(0x09)



**20C100A**

**Multiple Prefixes+Data+Multiple Suffixes  
(0x0A)**

**STX and ETX Setting**  
Parameter # 0xF2 0XB7



**3030B70**

**\* Disable  
(0x00)**



**3030B71**

**STX(prefix)  
(0x01)**



**3030B72**

**ETX(suffix 1)  
(0x02)**



3030B73

STX(prefix)+ETX(suffix 1)  
(0x03)

### Suffix Key Combination

Suitable for communication method USB KBW. Single or multiple key combination functions can be set. If ctrl&shift is required, enable the suffix Ctrl key combination function and the suffix Shift key combination function at the same time.

### Suffix Alt Key Combination

Parameter # 0xF6 0x2B



6062B00

\*Disable  
(0x00)




6062B01

Enable  
(0x01)

### Suffix Ctrl Key Combination

Parameter # 0xF6 0x2C

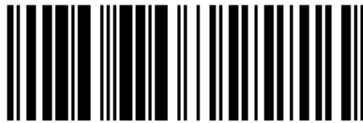

6062C00

\*Disable  
(0x00)



**Suffix Shift Key Combination**  
Parameter # 0xF6 0x2D



**Suffix And Terminator Are Not Affected By The Output Mode Of ASCII Control Characters**  
Parameter # 0xF6 0x49

Suitable for communication method USB KBW.



**6064901****Enable  
(0x01)**

## Set Prefix and Suffix according to Barcode Type

### Set Prefix according to Barcode Type

**Parameter # 0xF3 0x12**

Set multiple prefix according to barcode type. First, scan the barcode below. Second, choose barcode type, according to table 1-11 and table 4-3, scan the index of the corresponding hexadecimal value. For example, the QR code type is 0XF1, then scan "1" "2" "4" "1" digital setting code to set the barcode type. Third, scan barcode to set prefix or suffix, for example, set number "1", then scan "1" "0" "4" "9" digital setting code. Last, scan Exit Set Prefix or Suffix barcode.

**3F30000012****Set Prefix according to Barcode Type**

### Set Suffix according to Barcode Type

**Parameter # 0xF3 0x13**

Refer to "Set Prefix according to Barcode Type"

**3F30000013****Set Suffix according to Barcode Type**

### Clear Prefix according to Barcode Type

**Parameter # 0xF3 0x14**

Clear multiple prefix according to barcode type. First, scan the barcode below. Second, choose barcode type, according to table 1-11 and table 4-3, scan the index of the corresponding hexadecimal value. For example, the QR code type is 0XF1, then scan "1" "2" "4" "1" digital setting code to clear the prefix of QR.

Note:If you need to clear the prefix of all barcode type,scan “1” “2” “5” “5”(0xFF) digital setting code.



**3F30000014**

**Clear Prefix according to Barcode Type**

### **Clear Suffix according to Barcode Type**

**Parameter # 0xF3 0x15**

Refer to “Clear Prefix according to Barcode Type”.



**3F30000015**

**Clear Suffix according to Barcode Type**

### **Enable/Disable Prefix or Suffix**

**Parameter # 0xF2,0xD4**

Scan the following corresponding barcode to set the desired data transfer format.



**3030D40**

**Disable Prefix or Suffix (Raw Data)  
(0x00)**



**3030D41**

**Enable Prefix(Prefix+ Data)  
(0x01)**



3030D42

Enable Suffix(Data+ Suffix)  
(0x02)



3030D43

Enable Prefix and Suffix(Prefix+Data+Suffix)  
(0x03)

## Hide Custom Barcode Data

### Hide Head Data

Parameter # 0xF2 0xC6

Hide head data to decoded output data.It can be configured to hide any length. If the configuration length exceeds the barcode data length, then the whole content of the current barcode can be hidden.



3030C60

\* Disable  
(0x00)



3030C61

Enable  
(0x01)

### Set the Length of the Hidden Head Data

Parameter # 0xF3 0x0B

Set the length of the hidden head data, range is 1-255. Scan the barcode below and then scan the Numeric Barcodes, such as the need to hide 16 characters, then scan Numeric Barcodes 0,1,6 in sequence.



## Hide Intermediate Data

### Parameter # 0xF2 0xC7

Hide intermediate data to decoded output data. You can configure any starting position and length. If the starting position of the configuration exceeds the barcode data length, the current barcode is not hidden. If the configuration length exceeds the remaining barcode data length, all barcode data after the starting position is hidden.



## Set the Starting Position of Hiding the Intermediate Data

### Parameter # 0xF3 0x0C

Set the starting position of hiding the intermediate data, range is 1-255. Scan the barcode below and then scan the Numeric Barcodes. For example, to hide data after the third character (the fourth begins to hide), scan Numeric Barcodes 0, 0,3 in sequence.



### Set the Length of the Hidden Intermediate Data

**Parameter # 0xF3 0x0D**

Set the length of the hidden intermediate data, range is 1-255. Scan the barcode below and then scan the Numeric Barcodes. such as the need to hide 16 characters, then scan Numeric Barcodes 0,1,6 in sequence.



### Hide Tail Data

**Parameter # 0xF2 0xC8**

Hide tail data to decoded output data. It can be configured to hide any length. If the configuration length exceeds the barcode data length, then the whole content of the current barcode can be hidden.



### Set the Length of the Hidden Tail Data

**Parameter # 0xF3 0x0E**

Set the length of the hidden tail data, range is 1-255. Scan the barcode below and then scan the *Numeric Barcodes*. such as the need to hide 16 characters, then scan *Numeric Barcodes* 0,1,6 in sequence.



## Custom Barcode Data Reservation

### Reserve Header Data

Parameter # 0xF6 0x62

Header data interception of decoded output data, and the length of 1-65535 bytes can be configured. If the configured length exceeds the length of the barcode data, the entire content of the current barcode will be reserved.

For example, barcode data: 12345ABC, if 5 bytes of data in the header are reserved, then output: 12345, if more than 8 bytes of data in the header are reserved, then all data will be output: 12345ABC.



### Set The Length Of The Reserved Header Data

Parameter # 0xF3 0x35

Configure the length of the reserved header data, the range is 1-9999. After scanning the current barcode, scan four number setting codes (decimal value). For example, 15 bytes of characters need to be reserved, scan the number setting code in order: 0 0 1 5.



## Quickly Set The Length Of The Reserved Header Data

### Parameter # 0xF8 0x28

Configure the length of the reserved header data, the range is 1-65535 (0xFFFF). Need to cooperate with the barcode generator to generate a custom length setting code, the format is 80828XXXX (XXXX is an uppercase hexadecimal value), for example, 15 bytes of characters need to be reserved, then the setting code value is 80828000F.



808280001

**Reserve 1 Byte Of Header Data  
(0x0001)**



80828270F

**Reserve 9999 Bytes Of Header Data  
(0x270F)**



80828FFFF

**Reserve 65535 Bytes Of Header Data  
(0xffff)**

## Reserve Middle Data

### Parameter # 0xF6 0x63

The decoded output data is intercepted in the middle, and the length of 1-65535 bytes can be configured. If the configured starting position exceeds the length of the barcode data, no data will be retained (not output). If the configured length exceeds the remaining barcode data length, all barcode data after the start position will be retained.

For example, barcode data: 12345ABC, starting position 5, length 2, then output: AB. Start position 5, length 5, then output: ABC. The starting position exceeds the length of the barcode, then no data is retained (not output).



6066300

**\*Disable**

(0x00)



6066301

Enable  
(0x01)

### Set The Starting Position To Reserve Middle Data

#### Parameter # 0xF3 0x36

Configure the starting position of the reserved middle data, the range is 1-9999. After scanning the current barcode, scan four number setting codes (decimal value). For example, to reserve the data after the 15th byte character (reserved starting from the 16th), scan the number setting code in order: 0 0 1 5.



3F30000036

### Quickly Set The Starting Position To Reserve Middle Data

#### Parameter # 0xF8 0x29

Configure the starting position of the reserved middle data, the range is 1-65535 (0xFFFF). Need to cooperate with the barcode generator to generate a custom length setting code, the format is 80829XXXX (XXXX is an uppercase hexadecimal value). For example, if you need to reserve the data after the 15th byte character, then the setting code value is 80829000F.



808290001

Reserve The Data After The First Byte  
(0x0001)



80829270F

Reserve The Data After The 9999th Byte  
(0x270F)



80829FFFF

**Reserve The Data After The 65535th Byte  
(0xFFFF)**

### **Set The Length Of The Reserved Middle Data**

**Parameter # 0xF3 0x37**

Configure the length of the reserved middle data, the range is 1-9999. After scanning the current barcode, scan four number setting codes (decimal value). For example, to reserve data of 15 bytes after the start position, then scan the number setting code in order: 0 0 1 5.



3F30000037

### **Quickly Set The Length Of The Reserved Middle Data**

**Parameter # 0xF8 0x2A**

Configure the length of the reserved middle data, the range is 1-65535 (0xFFFF). Need to cooperate with the barcode generator to generate a custom length setting code, the format is 80829XXXX (XXXX is an uppercase hexadecimal value). For example, to reserve data of 15 bytes after the start position, then the setting code value is 8082A000F.



8082A0001

**1 Byte Of Data After The Start Position Is Reserved  
(0x0001)**



8082A270F

**9999 Bytes Of Data After The Start Position Are Reserved  
(0x270F)**



8082AFFFF

**65535 Bytes Of Data After The Start Position Are Reserved**

(0xFFFF)

## Reserve Tail Data

### Parameter # 0xF6 0x64

Tail data interception of decoded output data, and the length of 1-65535 bytes can be configured. If the configured length exceeds the length of the barcode data, the entire content of the current barcode will be reserved.

For example, barcode data: 12345ABC, if the last 3 bytes of data are reserved, then output: ABC. If the last 5 bytes of data are reserved, then output: 45ABC.



6066400

\*Disable

(0x00)



6066401

Enable

(0x01)

## Set The Length Of The Reserved Tail Data

### Parameter # 0xF3 0x38

Configure the length of the reserved tail data, the range is 1-9999. After scanning the current barcode, scan four number setting codes (decimal value). For example, if 16-byte characters need to be reserved, scan the number setting code in order: 0 0 1 6.



3F30000038

## Quickly Set The Length Of The Reserved Tail Data

### Parameter # 0xF8 0x2B

Configure the length of the reserved tail data, the range is 1-65535 (0xFFFF). Need to cooperate with the barcode generator to generate a custom length setting code, the format is 8082BXXXX (XXXX is an uppercase hexadecimal value). For example, 15 bytes of characters need to be reserved, the setting code value is: 8082B000F.



8082B0001

**Reserve 1 Byte Of Tail Data  
(0x0001)**



8082B270F

**Reserve 9999 Bytes Of Tail Data  
(0x270F)**



8082BFFFF

**Reserve 65535 Bytes Of Tail Data  
(0xFFFF)**

## Hide The Customized Data String In The Barcode

### Enable/Disable

**Parameter # 0xF6 0x68**

Supports setting 1-32 bytes of custom hidden data, all data strings appearing in the barcode will be hidden and output.

For example, barco-0de data: 123AB456AB789, set hidden data: AB, and finally output: 123456789



**6066800**

**Disable\***  
**(0x00)**



**6066801**

**Enable**  
**(0x01)**

### **Set The Hidden Data String**

**Parameter # 0xF3 0x2A**

After scanning the code, set the hidden value with a set of four number setting codes. For the number setting codes, please refer to: Appendix-Character Comparison Table.

For example, if you want to set the carriage return 0x0D in the shielded barcode, look up the table and you can see that the scan value is 1013. Set carriage return and line feed 0x0D, 0x0A, look up the table to see that the scan value is 1013, 1010.

Regardless of success or failure, every time you finish scanning the code, you must scan the "Complete Setting" setting code to exit the state of continuous setting data.



**3F3000002A**

**Set-up hidden parameters**

### **Complete The Setup**

After setting the hidden data, scan the code to complete the setting. The data supports a maximum of 32 bytes. When reaching 32 bytes, it will automatically exit and save the setting content. Less than 32 bytes need to scan this code to complete the setting.



**303FF60**

**Complete The Setup**

### **Read Back And Clear**

**Parameter # 0xF6 0x69**


Missetting may occur during the setting process. Through the read-back function, you can query and confirm the currently set data. It also supports reading back during the setting process without interrupting the setting of this round. After reading back, you can continue to set the next character after the previous character.

To clear the set content, you need to complete the setting first and then scan to clear the setting.



6066900

Read Back The Set Content  
(0x00)

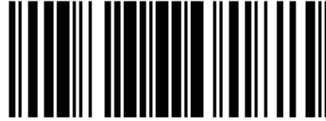

6066901

Clear The Set Content  
(0x01)

## Insert Custom Data

### Enable/Disable Insert Custom Data

Parameter # 0xF2 0xDE

Support for inserting custom data anywhere in the barcode, up to 10 bytes.



3030DE0

\*Disable  
(0x00)



3030DE1

Enable  
(0x01)

### Set Position of the Inserted Data

Parameter # 0xF3 0x17

According to the position to be inserted, scan the corresponding value (4 digit setting code). Fill 0 in front of the number of insufficient digits. For example, set after the 3rd character, you need to scan 4 digit setting code "0" "0" "0" "3".

If the position is 0, then insert the header of the decoded data. If the position is larger than the decoded data length, the tail of the decoded data is inserted by default. Supported settings for the insertion position range is 0-5000.



3F30000017

**Set Position of the Inserted Data**

(Next, scan the corresponding Numeric Barcodes.)

## Set Inserted Data

**Parameter # 0xF3 0x1A**

Set to insert custom data, and scan the custom data that needs to be set. For example, if you need to set the character 'QR' (0x51, 0x52), then continuously scan two sets of digital setting code '1'0'8'1' (1000+0x51) and '1'0'8'2' (1000+0x52). Support up to 10 custom data, can be set continuously. When 10 data is reached, the setting is automatically exited. Complete in advance: Scan the "Exit Set Custom Data" setting code, then exit the setting and save the currently set data.



3F3000001A

**Set Inserted Data**

(Next, scan the corresponding Numeric Barcodes.)

## Exit Setting Custom Data

**Parameter # 0xFF 0xF6**

Exit the setting and save the data that is currently set.



303FF60

**Exit Setting Custom Data**

## Output Character Set Type

**Parameter # 0xF2 0x06**

0: Primitive Type

1:GBK(GB2312)

2: UTF8

Default: 0(**Primitive Type**)

Output character set type: Expect the scanning engine to output decoded data according to the specified character set type.



3030060

**\* Primitive Type**

(0x00)



**3030061**

**GBK(GB2312)**

**(0x01)**



**3030062**

**UTF8**

**(0x02)**



**3030063**

**EUC-KR Korean (for special version)**

**(0x03)**

USB KBW American keyboard, Use ALT+keyboard for numerical output greater than 0x80.



**3030064**

**DEC MCS**

**(0x04)**



**3030065**

**BIG5**

**(0x05)**

## Input Character Set Type

### Parameter # 0xF2 0xAB

Input character set type: inform the scanning engine of the character set type used by the sample code generation.





**3030AB4**

**Japanese  
(0x04)**



**3030AB5**

**Korean (for special version)  
(0x05)**



**3030AB6**

**DEC Multinational Character Set (MCS)  
(0x06)**



**3030AB7**

**ISO8859-1 Character Set  
(0x07)**



**3030AB8**

**Japanese Single Byte (valid for special version)  
(0x08)**



**3030AB9**

**Cyrillic Character Set (Windows 1251)  
(0x09)**



**3030ABA**

**Koi8-R Character Set  
(0x0A)**



**3030ABB**

**BIG5 Character Set  
(0x0B)**



**3030ABC**

**ISO8859-2 Character Set  
(0x0C)**

## **USB Type**

USB type,0: USB1.1(Full Speed), 1:USB2.0(High Speed),Default USB1.1

**Parameter # 0xF2 0x0F**



**30300F0**

**\*USB1.1(Full Speed)**  
**(0x00)**



**30300F1**  
**USB2.0(High Speed)**  
**(0x01)**

## Event Report

Send Event Report Command refers to EVENT in SSI Commands.

### Boot Event

**Parameter # 0xF2 0xA2**

Boot event command: 05 F6 00 00 01 FF 04



**3030A20**  
**\* Disable**  
**(0x00)**



**3030A21**  
**Enable**  
**(0x01)**

### Trigger Event

When scan engine triggers reading, it can be prompted by a command or GPIO pin. The GPIO pin is prompted to remain low until the end of the reading

**Parameter # 0xF2 0xA3**

Trigger reading event command: 05 F6 00 00 02 FF 03



**3030A30**

\* Disable  
(0x00)



**3030A31**

Enable Event  
(0x01)



**3030A32**

Eable GPIO Pin Event  
(0x02)



**3030A33**

Enable Event&GPIO Pin Event  
(0x03)

## Heartbeat Control

### Parameter # 0xF2 0xCD

00: Disable heartbeat function

01: Send a heartbeat every 9 seconds(04 50 00 00 FF AC)

02: Send a heartbeat every 9 seconds(04 51 00 00 FF AB), If the ACK is not received in 3 seconds, the device restarts



**3030CD0**

**\* Disable  
(0x00)**



**3030CD1**

**Heartbeat doesn't need ACK  
(0x01)**



**3030CD2**

**Heartbeat needs ACK  
(0x02)**

## **URL Blocking**

Block URLs starting with "http://" and "https://"  
**Parameter # 0xF2 0xEa**



**3030EA0**

**\*Disable  
(0x00)**



**3030EA1**

**Enable  
(0x01)**

## Invoice Function

Open the invoice function, automatically shut down CODE128 code, if you need to read CODE128, can open CODE128.

### Automatic Filling of Value-added Tax Invoice

Parameter # 0xF2 0x08



3030080

\* Disable  
(0x00)



3030081

Enable  
(0x01)

## Invoice Type

Parameter # 0xF2 0xAA



3030AA0

\* Special Invoice  
(0x00)



3030AA1

Plain Invoice  
(0x01)

## Parameter Scanning

### Parameter # 0xEC

To disable decoding of parameter barcodes, scan the barcode below. The **Set Defaults** parameter barcode can still be decoded. To enable decoding of parameter barcodes, either scan **Enable Parameter Scanning** below, **Set Factory Defaults** or set this parameter to 0x01 via a serial command.



1040601

\* Enable Parameter Scanning  
(0x01)



1040600

Disable Parameter Scanning  
(0x00)

## Send Setting Code

### Parameter # 0xF1 0x71

Enable Send Setting Code to transmit barcodes in the following format, in Code 128, to the host:

<FNC3>L<any length data>

<FNC3>B<12 characters of data>

Note that the special Code 128 character <FNC3> must appear at the beginning of this data. However, if the appropriate data does not follow this as shown above, it does not transmit to the host device.



N02711

Enable Send Setting Code  
(0x01)



**N02710**

**\* Disable Send Setting Code  
(0x00)**

## Setting Code Password Mode

This is a feature that locks and protects settings. When in the enable setting code password mode, you need to enter the setting code password and pass the verification (unlock the device) before allowing the scanning and setting of the common setting code. After entering the correct password once, the power-on (unlock) is valid.

[Note]: Password 2 digits (00-99)

### Enable Setting Code Password Mode

**Parameter # 0xF2 0xA7**

When the device enters the enabling setting code password mode from the prohibiting setting code password mode, it is necessary to enter the setting code password to verify and pass the verification before allowing the mode to be changed. Disabling this function also requires verifying the password first.



**3030A70**

**\* Disable  
(0x00)**



**3030A71**

**Enable  
(0x01)**

### Input Setting Code Password

2 Password, From 0-9

**Parameter # 0xF3 0x05**

Enter the setting code password: After entering the correct password in the enable setting code password mode, the device will be unlocked and the device will be allowed to perform general setting code operations. Scan the barcode below, then scan the 2-digit setting code in the appendix corresponding to the desired password. If less than 2 bits are filled with 0.

For example, to enter password 68, scan the barcode below, then scan the numeric setting codes "6" and "8". To change the selection or cancel an incorrect setting, scan the cancel barcode in the appendix.



### Modify Setting Code Password

The password can be modified only when the setting code password mode is enabled and the password verification is passed (the device has been unlocked).

#### Parameter # 0xF3 0x06

Scan below barcode to modify setting code password. Next scan two *Numeric Barcodes* in appendix that correspond to new password. Single digit numbers must have a leading zero. For example, new password is 96, scan below barcode, then scan '9' and '6'. To change the selection or cancel an incorrect entry, scan *Cancel* in appendix.



### Logout Password

After entering the correct password in password mode, you can scan the setting code of the logout password. By logging out, re-enter the password.

#### Parameter # 0xF2 0xA9



### Linear Code Type Security Level

#### Parameter # 0x4E

The scan engine offers four levels of decode security for linear code types. Select higher security levels for decreasing levels of barcode quality. As security levels increase, the scan engine's aggressiveness decreases.

Select the security level appropriate for your barcode quality.

### Linear Security Level 1

All code types must be successfully read once before being decoded.



## \* Linear Security Level 1 (0x01)

### Linear Security Level 2

All code types must be successfully read twice before being decoded.



### Linear Security Level 3

All code types must be successfully read three times before being decoded.



### Linear Security Level 4

All code types must be successfully read four times before being decoded.



## Support GS1 Rules And Use Parentheses To Include AI Fields

Currently supports GS1 rules and supports AI fields: (00) transport container serial number, (01) commodity transaction item, (02) commodity transaction item, (10) batch number, (11) production date, (13) packaging date, (15) Best Date, (17) Expiration Date, (21) Serial Number, (30) Quantity, (240)


Internal Code, (712) National Medical Insurance Reimbursement Number-Spanish CN, (8012) Software Version, (90) Consistent information among trading partners

**Parameter # 0xF6 0x3C**



**6063C00**

**\*Disable  
(0x00)**

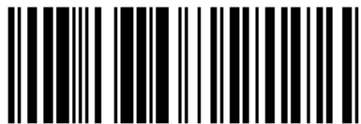

**6063C01**

**Enable  
(0x01)**

## Convert To Hexadecimal

### Convert To Hexadecimal Output

**Parameter # 0xF6 0x41**

The output data is hexadecimal, and the output hexadecimal is fixed at 2 digits, excluding prefixes and suffixes and terminator.



**6064100**

**\*Disable  
(0x00)**



**6064101**

**Hexadecimal Uppercase  
(0x01)**



**6064102**  
Hexadecimal Lowercase  
(0x02)

**Convert To Hexadecimal Interval Output**

**Parameter # 0xF6 0x42**

Output hexadecimal character interval



**6064200**  
\*Disable Interval  
(0x00)



**6064201**  
Space  
(0x01)

**1D Inverse Barcode Reading**

**Parameter # 0xF2 0x91**



**3030910**  
\* Disable  
(0x00)



**3030911**

**Enable  
(0x01)**

**Barcode Global Switch**

**1D Global Switch  
Parameter # 0xF2 0x11**



**2D Global Switch  
Parameter # 0xF2 0x50**



**All Barcode Switch**  
Parameter # 0xF2 0x90



## UPC-A

### Enable/Disable UPC-A

#### Parameter # 0x01

To enable or disable UPC-A, scan the appropriate barcode below.



**1 0 0 0 0 1 1**  
**\* Enable UPC-A**  
**(0x01)**



**1 0 0 0 0 1 0**  
**Disable UPC-A**  
**(0x00)**

### UPC-A Preamble

#### Parameter # 0x22

Preamble characters (Country Code and System Character) can be transmitted as part of a UPC-A symbol. Select one of the following options for transmitting UPC-A preamble to the host device: transmit system character only, transmit system character and country code ("0" for USA), or transmit no preamble.



**2 0 3 0 1 0 0**  
**No Preamble**  
**(<DATA>)**  
**(0x00)**



**2 0 3 0 1 0 1**  
**\* System Character**  
**(<SYSTEM CHARACTER> <DATA>)**  
**(0x01)**



2030102

System Character & Country Code  
( < COUNTRY CODE> <SYSTEM  
CHARACTER><DATA> )  
(0x02)

## Transmit UPC-A Check Digit

Parameter # 0x28

Scan the appropriate barcode below to transmit the symbol with or without the UPC-A check digit.



1020021

\* Transmit UPC-A Check Digit  
(0x01)



1020020

Do Not Transmit UPC-A Check Digit  
(0x00)

## UPC-A 2-bits Supplementals

Parameter # 0xF2 0x40



3030401

Enable  
(0x01)



3030400

\* Disable  
(0x00)

## UPC-A 5-bits Supplementals

Parameter # 0xF2 0x41



## UPC-A Read Supplementals

Parameter # 0xF2 0x42



## UPC-E

### Enable/Disable UPC-E

Parameter # 0x02

To enable or disable UPC-E, scan the appropriate barcode below.



**1 000021**  
**\* Enable UPC-E**  
**(0x01)**



**1 000020**  
**Disable UPC-E**  
**(0x00)**

### **UPC-E Preamble**

#### **Parameter # 0x23**

Preamble characters (Country Code and System Character) can be transmitted as part of a UPC-E symbol. Select one of the following options for transmitting UPC-E preamble to the host device: transmit system character only, transmit system character and country code ("0" for USA), or transmit no preamble.



**2030000**  
**No Preamble**  
**(<DATA>)**  
**(0x00)**



**2030001**

**\* System Character  
(<SYSTEM CHARACTER> <DATA>  
(0x01)**



**2030002**

**System Character & Country Code  
(< COUNTRY CODE> <SYSTEM CHARACTER><DATA>  
(0x02)**

## **Transmit UPC-E Check Digit**

**Parameter # 0x29**

Scan the appropriate barcode below to transmit the symbol with or without the UPC-E check digit.



**1020031**

**\* Transmit UPC-E Check Digit  
(0x01)**



**1020030**

**Do Not Transmit UPC-E Check Digit  
(0x00)**

## **Convert UPC-E to UPC-A**

**Parameter # 0x25**



Enable this parameter to convert UPC-E (zero suppressed) decoded data to UPC-A format before transmission. After conversion, data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

Scan **DO NOT CONVERT UPC-E TO UPC-A** to transmit UPC-E (zero suppressed) decoded data.



**1 020001**

**Convert UPC-E to UPC-A  
(0x01)**



**1 020000**

**\* Do Not Convert UPC-E to UPC-A  
(0x00)**

**UPC-E 2-bits Supplementals**

Parameter # 0xF2 0x3D



**30303D1**

**Enable  
(0x01)**



**30303D0**

**\* Disable  
(0x00)**

**UPC-E 5-bits Supplementals**

Parameter # 0xF2 0x3E



**30303E1**  
Enable  
(0x01)



**30303E0**  
\* Disable  
(0x00)

**UPC-E Read Supplementals**  
Parameter # 0xF2 0x3F



**30303F1**  
Enable  
(0x01)



**30303F0**  
\* Disable  
(0x00)

**UPC-E1**  
Parameter # 0xF2 0x15



**3030150**  
\* Disable  
(0x00)



**3030151**

**Enable  
(0x01)**

## **EAN-8**

### **Enable/Disable EAN-8**

#### **Parameter # 0x04**

To enable or disable EAN-8, scan the appropriate barcode below.



**1 000041**

**\* Enable EAN-8  
(0x01)**



**1 000040**

**Disable EAN-8  
(0x00)**

### **EAN-8 Zero Extend**

#### **Parameter # 0x27**

When enabled, this parameter adds five leading zeros to decoded EAN-8 symbols to make them compatible in format to EAN-13 symbols.

Disable this parameter to transmit EAN-8 symbols as is.



**1 020011**

**Enable EAN-8 Zero Extend  
(0x01)**



1020010

\* Disable EAN-8 Zero Extend  
(0x00)

**EAN-8 2-bits Supplementals**

Parameter # 0xF2 0x37



3030371

Enable  
(0x01)



3030370

\* Disable  
(0x00)

 
**EAN-8 5-bits Supplementals**

Parameter # 0xF2 0x38



3030381

Enable  
(0x01)



3030380

\* Disable  
(0x00)

**EAN-8 Read Supplementals**

Parameter # 0xF2 0x39



**3030391**

**Enable  
(0x01)**



**3030390**

**\* Disable  
(0x00)**

**EAN-8 Transmit Check Digit**

**Parameter # 0xF2 0x80**



**3030800**

**Disable  
(0x00)**



**3030801**

**\*Enable  
(0x01)**

**EAN-13**

**Enable/Disable EAN-13**

**Parameter # 0x03**

To enable or disable EAN-13, scan the appropriate barcode below.



**1 000031**  
**\* Enable EAN-13**  
**(0x01)**



**1 000030**  
**Disable EAN-13**  
**(0x00)**

## **EAN-13 2-bits Supplementals**

**Parameter # 0xF2 0x3A**



**30303A1**  
**Enable**  
**(0x01)**



**30303A0**  
**\* Disable**  
**(0x00)**

## **EAN-13 5-bits Supplementals**

**Parameter # 0xF2 0x3B**



**30303B1**  
Enable  
(0x01)



**30303B0**  
\* Disable  
(0x00)

**EAN-13 Read Supplementals**  
Parameter # 0xF2 0x3C



**30303C1**  
Enable  
(0x01)



**30303C0**  
\* Disable  
(0x00)

**EAN-13 Transmit Check Digit**  
Parameter # 0xF2 0x16



**3030160**  
Disable  
(0x00)



3030161

\*Enable  
(0x01)

## Enable/Disable Bookland EAN(ISBN)

### Parameter # 0x53

To enable or disable EAN Bookland, scan the appropriate barcode below.



1000231

Enable Bookland EAN  
(0x01)



1000230

\* Disable Bookland EAN  
(0x00)

 
## Code 128

Including AIM128 ,but the output type is different.

### Enable/Disable Code 128

#### Parameter # 0x08

To enable or disable Code 128, scan the appropriate barcode below.



1000101

\* Enable Code 128  
(0x01)



**1 0001 00**  
**Disable Code 128**  
**(0x00)**

### Transmit Check Digit Parameter # 0xF2 0x35



**303035 1**  
**Enable**  
**(0x01)**



**303035 0**  
**\* Disable**  
**(0x00)**

### Set Lengths for Code 128

**Parameter # L1=0xF5 0x04, L2=0xF5 0x05**

Allows reading of Code128 codes of a specific length. First scan the barcode with the length within a specific range, then scan the four Numeric Barcodes in the appendix to set the corresponding two sets of lengths L1 and L2. L1 and L2 each have a two-digit setting code, and the less than two digits are filled with 0.

To set and read Code128 codes of any length, just scan the setting code of any length, no need to scan the digital setting code.

Default: 0-99, setting range: 01-99.

- I、 When  $L1 < L2$ , L1 is the minimum length and L2 is the maximum length
- II、 When  $L1 > L2$ , L1 is the maximum length and L2 is the minimum length
- III、 When  $L1 = L2$ , only read fixed length (L1/L2)

For example:

Only 4-8 characters in length are allowed to be read, then scan the digital setting code "0" "4" "0" "8" or "0" "8" "0" "4".

Fixed to read only 12 characters in length, then scan the digital setting code "1" "2" "1" "2".



**F3118485F5000005**



### The Length Within A Specific Range



### GS1-128 (formerly UCC/EAN-128)

#### Enable/Disable GS1-128 (formerly UCC/EAN-128)

Parameter # 0x0E

To enable or disable GS1-128, scan the appropriate barcode below.



#### UCC/EAN-128 Transmit Check Digit

Parameter # 0xF2 0x36





3030360

\* Disable  
(0x00)

### Set Lengths for UCC/EAN-128

#### Parameter # L1=0xF5 0x06, L2=0xF5 0x07

Allows reading of UCC/EAN-128 codes of a specific length. First scan the barcode with the length within a specific range, then scan the four Numeric Barcodes in the appendix to set the corresponding two sets of lengths L1 and L2. L1 and L2 each have a two-digit setting code, and the less than two digits are filled with 0.

To set and read UCC/EAN-128 codes of any length, just scan the setting code of any length, no need to scan the digital setting code.

Default: 0-99, setting range: 01-99.

- I、 When  $L1 < L2$ , L1 is the minimum length and L2 is the maximum length
- II、 When  $L1 > L2$ , L1 is the maximum length and L2 is the minimum length
- III、 When  $L1 = L2$ , only read fixed length (L1/L2)

For example:

Only 4-8 characters in length are allowed to be read, then scan the digital setting code "0" "4" "0" "8" or "0" "8" "0" "4".

Fixed to read only 12 characters in length, then scan the digital setting code "1" "2" "1" "2".



F3118687F5000007

The Length Within A Specific Range



F0118687F50000007

Any Length

## ISBT 128

### Parameter # 0x54

To enable or disable ISBT 128, scan the appropriate barcode below.



1 000331

\* Enable ISBT 128  
(0x01)



1 000330

Disable ISBT 128  
(0x00)

## Code 39

### Enable/Disable Code 39

#### Parameter # 0x00

To enable or disable Code 39, scan the appropriate barcode below.



1 000001

\* Enable Code 39

(0x01)



### Set Lengths for Code 39

**Parameter # L1 = 0x12, L2 = 0x13**

Allows reading of Code 39 codes of a specific length. First scan the barcode with the length within a specific range, then scan the four Numeric Barcodes in the appendix to set the corresponding two sets of lengths L1 and L2. L1 and L2 each have a two-digit setting code, and the less than two digits are filled with 0.

To set and read Code 39 codes of any length, just scan the setting code of any length, no need to scan the digital setting code.

Default: 0-99, setting range: 01-99.

- I、 When  $L1 < L2$ , L1 is the minimum length and L2 is the maximum length
- II、 When  $L1 > L2$ , L1 is the maximum length and L2 is the minimum length
- III、 When  $L1 = L2$ , only read fixed length (L1/L2)

For example:

Only 4-8 characters in length are allowed to be read, then scan the digital setting code "0" "4" "0" "8" or "0" "8" "0" "4".

Fixed to read only 12 characters in length, then scan the digital setting code "1" "2" "1" "2".



### Code 39 Check Digit Verification

**Parameter # 0x30**

When this feature is enabled, the scan engine checks the integrity of all Code 39 symbols to verify that the data complies with specified check digit algorithm. Only those Code 39 symbols which include a modulo 43 check digit are decoded. Only enable this feature if your Code 39 symbols contain a module 43 check digit.



### Transmit Code 39 Check Digit

#### Parameter # 0x2B

Scan this symbol to transmit the check digit with the data.



Scan this symbol to transmit data without the check digit.



### Enable/Disable Code 39 Full ASCII

#### Parameter # 0x11

Code 39 Full ASCII is a variant of Code 39 which pairs characters to encode the full ASCII character set. To enable or disable Code 39 Full ASCII, scan the appropriate barcode below.

See [Table 4-3](#) for the mapping of Code 39 characters to ASCII values.



1020111

Enable Code 39 Full ASCII  
(0x01)



1020110

\* Disable Code 39 Full ASCII  
(0x00)

**NOTE** :Trioptic Code 39 and Code 39 Full ASCII cannot be enabled simultaneously. If you get an error beep when enabling Code 39 Full ASCII, disable Trioptic Code 39 and try again.

### Code 39 Transport Start Character and Terminator

Parameter # 0xF2 0x30



3030300

\* Disable  
(0x00)



3030301

Enable

(0x01)

## Convert Code 39 to Code 32 (Italian Pharma Code)

### Parameter # 0x56

Code 32 is a variant of Code 39 used by the Italian pharmaceutical industry. Scan the appropriate barcode below to enable or disable converting Code 39 to Code 32.



1020300

\* Disable  
(0x00)



1020301

Enable  
(0x01)

## Code 32 Prefix

### Parameter # 0xE7

Enable this parameter to add the prefix character "A" to all Code 32 barcodes. Convert Code 39 to Code 32(Italian Pharma Code) must be enabled for this parameter to function.



1020320

\* Disable  
(0x00)



1020321

Enable

(0x01)

**Code 32 Check Digit Verification**

Parameter # 0xF2 0x19



3030190

\* Disable  
(0x00)



3030191

Enable  
(0x01)

**Transmit Code 32 Check Digit**

Parameter # 0xF2 0x1A



30301A0

\*Transmit Check Digit  
(0x00)



30301A1

Transmit Start Character, Stop Character, Check Digit  
(0x01)

**Code 93**

**Enable/Disable Code 93**

Parameter # 0x09

To enable or disable Code 93, scan the appropriate barcode below.



**1 000 111**  
**Enable Code 93**  
**(0x01)**



**1 000 110**  
**\* Disable Code 93**  
**(0x00)**

### Set Lengths for Code 93

**Parameter # L1 = 0x1A, L2 = 0x1B**

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Lengths for Code 93 may be set for any length, one or two discrete lengths, or lengths within a specific range. To set lengths via serial commands, see [Setting Code Lengths Via Serial Commands](#).

**One Discrete Length** - Select this option to decode only those codes containing a selected length. For example, select **Code 93 One Discrete Length**, then scan **1, 4**, to limit the decoding to only Code 93 symbols containing 14 characters. [Numeric Barcodes](#) is in appendix. To change the selection or cancel an incorrect entry, scan [Cancel](#) in appendix.



**F 1010A0B023700011**  
**Code 93 - One Discrete Length**

**Two Discrete Lengths** - Select this option to decode only those codes containing two selected lengths. For example, select **Code 93 Two Discrete Lengths**, then scan **0, 2, 1, 4**, to limit the decoding to only Code 93 symbols containing 2 or 14 characters. [Numeric Barcodes](#) is in appendix. To change the selection or cancel an incorrect entry, scan [Cancel](#) in appendix.



**F 2010A0B023700011**  
**Code 93 - Two Discrete Lengths**

**Length Within Range** - This option sets the unit to decode a code type within a specified range. For example, to decode Code 93 symbols containing between 4 and 12 characters, first scan **Code 93 Length Within Range**, then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero).

*Numeric Barcodes* is in appendix. To change the selection or cancel an incorrect entry, scan *Cancel* in appendix..



**Any Length** - Scan this option to decode Code 93 symbols containing any number of characters.



## Code 11

### Enable/Disable Code 11

Parameter # 0x0A

To enable or disable Code 11, scan the appropriate barcode below.



## Set Lengths for Code 11

Parameter # L1 = 0x1C, L2 = 0x1D

Allows reading of Code 11 codes of a specific length. First scan the barcode with the length within a specific range, then scan the four Numeric Barcodes in the appendix to set the corresponding two sets of lengths L1 and L2. L1 and L2 each have a two-digit setting code, and the less than two digits are filled with 0.

To set and read Code 11 codes of any length, just scan the setting code of any length, no need to scan the digital setting code.

Default: 4-99, setting range: 01-99.

- I、 When L1<L2, L1 is the minimum length and L2 is the maximum length
- II、 When L1>L2, L1 is the maximum length and L2 is the minimum length
- III、 When L1=L2, only read fixed length (L1/L2)

For example:

Only 4-8 characters in length are allowed to be read, then scan the digital setting code "0" "4" "0" "8" or "0" "8" "0" "4".

Fixed to read only 12 characters in length, then scan the digital setting code "1" "2" "1" "2".



F3010C0D013700012

The Length Within A Specific Range



F0010C0D013700012

Any Length

## Code 11 Check Digit Verification

Parameter # 0x34

This feature allows the scan engine to check the integrity of all Code 11 symbols to verify that the data complies with the specified check digit algorithm. This selects the check digit mechanism for the decoded Code 11 barcode. The options are to check for one check digit, check for two check digits, or disable the feature.

To enable this feature, scan the barcode below corresponding to the number of check digits encoded in your Code 11 symbols.



2051200

\* Disable

137

(0x00)



2051201  
One Check Digit  
(0x01)



2051202  
Two Check Digits  
(0x02)

 
## Transmit Code 11 Check Digit

Parameter # 0x2F

This feature selects whether or not to transmit the Code 11 check digit.



1020141  
Transmit Code 11 Check Digit  
(0x01)



\* Do Not Transmit Code 11 Check Digit  
(0x00)

**NOTE:** Code 11 Check Digit Verification must be enabled for this parameter to function.

## Interleaved 2 of 5/ITF/25

### Enable/Disable Interleaved 2 of 5

Parameter # 0x06

To enable or disable Interleaved 2 of 5, scan the appropriate barcode below.



1 0 0 0 0 6 1

\* Enable Interleaved 2 of 5  
(0x01)



1 0 0 0 0 6 0

Disable Interleaved 2 of 5  
(0x00)

## Set Lengths for Interleaved 2 of 5

Parameter # L1 = 0x16, L2 = 0x17

Allows reading of Interleaved 2 of 5 codes of a specific length. First scan the barcode with the length within a specific range, then scan the four Numeric Barcodes in the appendix to set the corresponding two sets of lengths L1 and L2. L1 and L2 each have a two-digit setting code, and the less than two digits are filled with 0.

To set and read Interleaved 2 of 5 codes of any length, just scan the setting code of any length, no need to scan the digital setting code.

Default: 4-99, setting range: 01-99.

- I、 When  $L1 < L2$ , L1 is the minimum length and L2 is the maximum length
- II、 When  $L1 > L2$ , L1 is the maximum length and L2 is the minimum length
- III、 When  $L1 = L2$ , only read fixed length (L1/L2)

For example:

Only 4-8 characters in length are allowed to be read, then scan the digital setting code "0" "4" "0" "8" or "0" "8" "0" "4".

Fixed to read only 12 characters in length, then scan the digital setting code "1" "2" "1" "2".



3 0 1 0 8 0 9 0 2 4 4 0 0 0 C

The Length Within A Specific Range

Any length - scan this to decode Interleaved 2 of 5 code containing any characters

Note: Selecting this may result in incorrect decoding of I 2 of 5.



### I 2 of 5 Check Digit Verification

#### Parameter # 0x31

When enabled, this parameter checks the integrity of an I 2 of 5 symbol to ensure it complies with a specified algorithm, either USS (Uniform Symbology Specification), or OPCC (Optical Product Code Council).



### Transmit I 2 of 5 Check Digit

#### Parameter # 0x2C

Scan this symbol to transmit the check digit with the data.



Scan this symbol to transmit data without the check digit.



## Discrete 2 of 5/Industrial 2 of 5/IND25/25

### Enable/Disable Discrete 2 of 5

#### Parameter # 0x05

To enable or disable Discrete 2 of 5, scan the appropriate barcode below.



1 000051

Enable Discrete 2 of 5  
(0x01)



1 000050

\* Disable Discrete 2 of 5  
(0x00)

### Set Lengths for Discrete 2 of 5

#### Parameter # L1 = 0x14, L2 = 0x15

Allow reading of Discrete 2 of 5 codes of a specific length. First scan the barcode with the length within a specific range, then scan the four Numeric Barcodes in the appendix to set the corresponding two sets of lengths L1 and L2. L1 and L2 each have a two-digit setting code, and the less than two digits are filled with 0.

To set and read Discrete 2 of 5 codes of any length, just scan the setting code of any length, no need to scan the digital setting code.

Default: 4-99, setting range: 01-99.

- I、 When  $L1 < L2$ , L1 is the minimum length and L2 is the maximum length
- II、 When  $L1 > L2$ , L1 is the maximum length and L2 is the minimum length
- III、 When  $L1 = L2$ , only read fixed length (L1/L2)

For example:

Only 4-8 characters in length are allowed to be read, then scan the digital setting code "0" "4" "0" "8" or "0" "8" "0" "4".

Fixed to read only 12 characters in length, then scan the digital setting code "1" "2" "1" "2".



30106070237000C

The Length Within A Specific Range



Any length - scan this to decode D 2 of 5 code containing any characters  
Note: Selecting this may result in incorrect decoding of D 2 of 5.



**Discrete 2 of 5 Check**  
Parameter # 0xF2 0x48



**Transmit Discrete 2 of 5 Check Digit**  
Parameter # 0xF2 0x49



## Matrix 25

### Enable/Disable Matrix 25

Parameter # 0xF2 0x20

To enable or disable Matrix 25, scan the appropriate barcode below.



**3030201**  
Enable Matrix 25  
(0x01)



**3030200**  
\* Disable Matrix 25  
(0x00)

### Matrix 25 Check Digit Verification

Parameter # 0xF2 0x21



**3030211**  
Enable Matrix 25 Check Digit Verification  
(0x01)



**3030210**  
\*Disable Matrix 25 Check Digit Verification  
(0x00)

### Transmit Matrix 25 Check Digit

Parameter # 0xF2 0x22



3030221

**Enable Matrix 25 Transmit Check Character  
(0x01)**



3030220

**\* Disable Matrix 25 Transmit Check Character  
(0x00)**

## Set Lengths for Matrix 25

**Parameter # L1=0xF5 0x00, L2=0xF5 0x01**

Allow reading of Matrix 25 codes of a specific length. First scan the barcode with the length within a specific range, then scan the four Numeric Barcodes in the appendix to set the corresponding two sets of lengths L1 and L2. L1 and L2 each have a two-digit setting code, and the less than two digits are filled with 0.

To set and read Matrix 25 codes of any length, just scan the setting code of any length, no need to scan the digital setting code.

Default: 4-99, setting range: 01-99.

- I、 When  $L1 < L2$ , L1 is the minimum length and L2 is the maximum length
- II、 When  $L1 > L2$ , L1 is the maximum length and L2 is the minimum length
- III、 When  $L1 = L2$ , only read fixed length (L1/L2)

For example:

Only 4-8 characters in length are allowed to be read, then scan the digital setting code "0" "4" "0" "8" or "0" "8" "0" "4".

Fixed to read only 12 characters in length, then scan the digital setting code "1" "2" "1" "2".



F3118081F5000001

**The Length Within A Specific Range**

Any length - scan this to decode Matrix 25 code containing any characters

Note: Selecting this may result in incorrect decoding of Matrix 25.



F0118081F5000001

**Any Length**

## Standard 25/IATA 25(25)

### Enable/Disable Standard 25

Parameter # 0xF2 0x23

To enable or disable Standard 25, scan the appropriate barcode below.



3030230

\* Disable  
(0x00)



3030231

Enable  
(0x01)

### Standard 25 Check Digit Verification

Parameter # 0xF2 0x24



3030240

\* Disable Standard 25 Check Digit Verification  
(0x00)



3030241

Enable Standard 25 Check Digit Verification  
(0x01)

## Transmit Check Digit Parameter # 0xF2 0x25



**\* Disable Standard 25 Transmit Check Character  
(0x00)**



**Enable Standard 25 Transmit Check Character  
(0x01)**

## Set Lengths for Standard 25

**Parameter # L1=0xF5 0x02, L2=0xF5 0x03**

Allow reading of Standard 25 codes of a specific length. First scan the barcode with the length within a specific range, then scan the four Numeric Barcodes in the appendix to set the corresponding two sets of lengths L1 and L2. L1 and L2 each have a two-digit setting code, and the less than two digits are filled with 0.

To set and read Standard 25 codes of any length, just scan the setting code of any length, no need to scan the digital setting code.

Default: 4-99, setting range: 01-99.

- I、 When L1<L2, L1 is the minimum length and L2 is the maximum length
- II、 When L1>L2, L1 is the maximum length and L2 is the minimum length
- III、 When L1=L2, only read fixed length (L1/L2)

For example:

Only 4-8 characters in length are allowed to be read, then scan the digital setting code "0" "4" "0" "8" or "0" "8" "0" "4".

Fixed to read only 12 characters in length, then scan the digital setting code "1" "2" "1" "2".



**The Length Within A Specific Range**

Any length - scan this to decode Standard 25 code containing any characters

Note: Selecting this may result in incorrect decoding of Standard 25.




## Codabar

### Enable/Disable Codabar

#### Parameter # 0x07

To enable or disable Codabar, scan the appropriate barcode below.

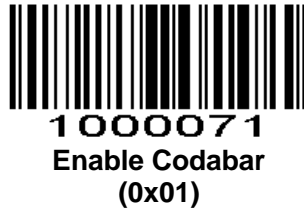

### Set Lengths for Codabar

#### Parameter # L1 = 0x18, L2 = 0x19

Allow reading of Codabar codes of a specific length. First scan the barcode with the length within a specific range, then scan the four Numeric Barcodes in the appendix to set the corresponding two sets of lengths L1 and L2. L1 and L2 each have a two-digit setting code, and the less than two digits are filled with 0.

To set and read Codabar codes of any length, just scan the setting code of any length, no need to scan the digital setting code.

Default: 2-99, setting range: 01-99.

I、 When  $L1 < L2$ , L1 is the minimum length and L2 is the maximum length

II、 When  $L1 > L2$ , L1 is the maximum length and L2 is the minimum length

III、 When  $L1 = L2$ , only read fixed length (L1/L2)

For example:

Only 4-8 characters in length are allowed to be read, then scan the digital setting code "0" "4" "0" "8" or "0" "8" "0" "4".

Fixed to read only 12 characters in length, then scan the digital setting code "1" "2" "1" "2".



30102030237000C

The Length Within A Specific Range

Any length - scan this to decode Codabar code containing any characters



30102030237000C

Any Length

### Codabar Check

Parameter # 0xF2 0x4C



30304C1

Enable

(0x01)



30304C0

\* Disable

(0x00)

### Transmit Codabar Check Digit

Parameter # 0xF2 0x4D



30304D1

Enable

(0x01)



30304D0

\* Disable  
(0x00)

## NOTIS Editing

### Parameter # 0x37

When enabled, this parameter strips the start and stop characters from decoded Codabar symbol.



1020061

Enable NOTIS Editing  
(0x01)



1020060

\* Disable NOTIS Editing  
(0x00)

## Start Character and Terminator

The start character and terminator are allowed to be one of the four characters of "A", "B", "C", "D". The terminator is also allowed to be one of the four characters of "T", "N", "\*", "E".

### Parameter # 0xF2 0x31



3030310

\*ABCD/ABCD  
(0x00)



3030311

ABCD/TN\*E



(0x01)

**Letter Case Setting of Start Character and Terminator**  
Parameter # 0xF2 0x32



**MSI/MSI PLESSEY**

**Enable/Disable MSI**  
Parameter # 0x0B

To enable or disable MSI, scan the appropriate barcode below.



## Set Lengths for MSI

Parameter # L1 = 0x1E, L2 = 0x1F

Allow reading of MSI codes of a specific length. First scan the barcode with the length within a specific range, then scan the four Numeric Barcodes in the appendix to set the corresponding two sets of lengths L1 and L2. L1 and L2 each have a two-digit setting code, and the less than two digits are filled with 0.

To set and read MSI codes of any length, just scan the setting code of any length, no need to scan the digital setting code.

Default: 2-99, setting range: 01-99.

- I、 When L1<L2, L1 is the minimum length and L2 is the maximum length
- II、 When L1>L2, L1 is the maximum length and L2 is the minimum length
- III、 When L1=L2, only read fixed length (L1/L2)

For example:

Only 4-8 characters in length are allowed to be read, then scan the digital setting code "0" "4" "0" "8" or "0" "8" "0" "4".

Fixed to read only 12 characters in length, then scan the digital setting code "1" "2" "1" "2".



Any length - scan this to decode MSI code containing any characters

Note: Selecting this may result in incorrect decoding of MSI.



## MSI Check Digits

Parameter # 0x32

These check digits at the end of the barcode verify the integrity of the data. At least one check digit is always required. Check digits are not automatically transmitted with the data.



If two check digits are selected, also select an *MSI Check Digit Algorithm*.



**1 020121**

**Two MSI Check Digit  
(0x01)**

### Transmit MSI Check Digit

**Parameter # 0x2E**

Scan this symbol to transmit the check digit with the data.



**1 020131**

**Transmit MSI Check Digit  
(0x01)**

Scan this symbol to transmit data without the check digit.



 
**1 020130**

**\* Do Not Transmit MSI Check Digit  
(0x00)**

### MSI Check Digit Algorithm

**Parameter # 0x33**

When the Two MSI check digits option is selected, an additional verification is required to ensure integrity. Select one of the following algorithms:



**1 020230**

**MOD 10/ MOD 11  
(0x00)**



**1 020231**  
**\*MOD 10/ MOD 10**  
**(0x01)**

## GS1 DataBar/RSS

### Enable/Disable GS1 DataBar-14

Parameter # **0xF0 0x52**

To enable or disable GS1 DataBar-14, scan the appropriate barcode below.



**1 000351**  
**Enable GS1 DataBar-14**  
**(0x01)**



**1 000350**  
**\* Disable GS1 DataBar-14**  
**(0x00)**

### RSS AI Character

Parameter # **0xF2 0x26**



**3030261**



**\* Enable  
(0x01)**



## PDF417

Scan normal or mirror image picture.

### Enable/Disable PDF417

**Parameter # 0x0F**

To enable or disable PDF417, scan the appropriate barcode below.



### Read Normal Phase/ Phase Reversal

**Parameter # 0xF2 0x61**



**\* Read Normal Phase  
(0x00)**



**3030611**

**Read Phase Reversal  
(0x01)**



**3030612**

**Read Normal Phase/Phase Reversal  
(0x02)**

## QR

Read normal phase/ phase reversal/ mirror image picture

### Enable/Disable QR

**Parameter # 0xF0 0x25**

To enable or disable QR, scan the appropriate barcode below.



**1003250**

**Disable QRCode  
(0x00)**



**1003251**

**\* Enable QRCode  
(0x01)**

### ECI Control

**Parameter # 0xF2 0x66**



**3030660**  
\* Not Output ECI  
(0x00)



**3030661**  
Output ECI  
(0x01)

**QR Read Normal Phase/ Phase Reversal**

Parameter # 0xF2 0x67



**3030670**  
\* Read Normal Phase  
(0x00)



**3030671**  
Read Phase Reversal  
(0x01)



**3030672**  
Read Normal Phase/ Phase Reversal  
(0x02)

**Remove The UTF-8 BOM Encoding Format Of The QR Code**

Parameter # 0xF6 0x3A



6063A00

\*Disable  
(0x00)



6063A01

Enable  
(0x01)

## Data Matrix(DM)

Scan normal or mirror image picture.

### Enable/Disable Data Matrix(DM)

Parameter # 0xF0 0x24

To enable or disable Data Matrix(DM), scan the appropriate barcode below.



1003240

Disable DataMatrix  
(0x00)



1003241

\* Enable DataMatrix  
(0x01)

### Read Normal Phase/ Phase Reversal

Parameter # 0xF2 0x6B



30306B0

\* Read Normal Phase

(0x00)



**30306B1**

**Read Phase Reversal  
(0x01)**



**30306B2**

**Read Normal Phase/ Phase Reversal  
(0x02)**

## ECI Control

Parameter # 0xF2 0x6C



**30306C0**

**\* Not Output ECI  
(0x00)**



**30306C1**

**Output ECI  
(0x01)**

## Maxi Code

### Enable/Disable Maxi Code

Parameter # 0xF0 0x26

To enable or disable Maxi Code, scan the appropriate barcode below.



**1 003260**  
\* Disable MaxiCode  
(0x00)



**1 003261**  
Enable MaxiCode  
(0x01)

## Aztec Code

### Enable/Disable Aztec Code

Parameter # **0xF0 0x28**

To enable or disable Aztec Code, scan the appropriate barcode below.



**1 003280**  
\* Disable Aztec Code  
(0x00)



**1 003281**  
Enable Aztec Code  
(0x01)

## Han Xin Code

### Enable/Disable Han Xin Code

Parameter # **0xF0 0x2F**

To enable or disable Han Xin Code, scan the appropriate barcode below.



**1 0032F0**

**\* Disable Han Xin Code  
(0x00)**



**10032F1  
Enable Han Xin Code  
(0x01)**

**Read Normal Phase/ Phase Reversal  
Parameter # 0xF2 0x71**



**3030710  
\* Read Normal Phase  
(0x00)**



**3030711  
Read Phase Reversal  
(0x01)**



**3030712  
Read Normal Phase/ Phase Reversal  
(0x02)**

**ISSN**

ISSN turns to EAN13 when it's disabled.

**Parameter # 0xF2 0x33**



## **NEC-25(COOP25)**

**NEC-25(COOP25)**  
**Parameter # 0xF2 0x45**



**NEC-25(COOP25) Check**  
**Parameter # 0xF2 0x46**



**3030461**  
Enable  
(0x01)



**3030460**  
\* Disable  
(0x00)

### Transmit NEC-25(COOP25) Check Digit

Parameter # 0xF2 0x47



**3030471**  
Enable  
(0x01)



**3030470**  
\* Disable  
(0x00)

### Set Lengths for NEC-25(COOP 25)

Parameter # L1=0xF5 0x08, L2=0xF5 0x09

Allows reading of NEC-25 codes of a specific length. First scan the barcode with the length within a specific range, then scan the four Numeric Barcodes in the appendix to set the corresponding two sets of lengths L1 and L2. L1 and L2 each have a two-digit setting code, and the less than two digits are filled with 0.

To set and read NEC-25 codes of any length, just scan the setting code of any length, no need to scan the digital setting code.

Default: 4-99, setting range: 01-99.

- I、 When L1<L2, L1 is the minimum length and L2 is the maximum length
- II、 When L1>L2, L1 is the maximum length and L2 is the minimum length
- III、 When L1=L2, only read fixed length (L1/L2)

For example:

Only 4-8 characters in length are allowed to be read, then scan the digital setting code "0" "4" "0" "8" or "0" "8" "0" "4".

Fixed to read only 12 characters in length, then scan the digital setting code "1" "2" "1" "2".



F3118889F50000009

The Length Within A Specific Range



F0118889F50000009

Any Length

## COMPOSITE

### Enable/Disable COMPOSITE

Parameter # 0xF2 0x17



3030170

\*Disable  
(0x00)



3030171

Enable  
(0x01)

## 4. Appendix

**Table 4-1 Param Data Format**

Parameter Number	Data Format
------------------	-------------

0 through 0xEF	<param_num> <value>
0xF0, 0xF1, 0xF2	<extended parameter code> <param_num offset> <value>
0xF4	<WORD parameter><Parameter Number><Value : High Byte><Value : Low Byte> Or <WORD parameter><Extended parameter code><Parameter Number> <Value : High Byte><Value : Low Byte>

## Numeric Barcodes

For parameters requiring specific numeric values, scan the appropriately numbered barcode(s).





## Cancel

To change the selection or cancel an incorrect entry, scan the barcode below.



## Setting Code Lengths Via Serial Commands

There are two lengths (L1 and L2) for each variable length code type. Depending on the selected option, the scan engine decodes:

- One discrete length barcode;
- Two discrete length barcodes;
- Barcodes within a range of lengths within the scan engine capability;
- Any length of barcodes within the scan engine capability.

Table 4-2 lists the requirements for each option.

**Table 4-2 Setting Variable Code Lengths**

Code Length Option	L1 value	L2 value
One discrete length is decoded.	Discrete length to decode	0x00
Two discrete lengths is decoded.	Higher length value	Lower length value
Lengths within a range are decoded within the scan engine capability.	Lower length value	Higher length value
Any length barcode is decoded within the scan engine capability.	0x00	0x00

## Character Comparison Table

To append a prefix and suffixes to the decode data:

1. Set the Scan Data Transmission Format (parameter 0xE2) to the desired option.
2. Enter the required value(s) for Prefix (0x69), Suffix1 (0x68) or Suffix2 (0x6A) using the hex values for the desired ASCII value from [Table 4-3](#)

**Table 4-3 Character Comparison Table (control character)**

Scan Value	Hex Value	Character	Keyboard Function Key Operation	Keyboard Ctrl Combination Key
1000	00h	NUL	Null	CTRL 2
1001	01h	SOH	Keypad Enter	CTRL A
1002	02h	STX	Caps lock	CTRL B
1003	03h	ETX	Right Arrow	CTRL C
1004	04h	EOT	Up Arrow	CTRL D
1005	05h	ENQ	Null	CTRL E
1006	06h	ACK	Null	CTRL F
1007	07h	BEL	Enter	CTRL G
1008	08h	BS	Left Arrow	CTRL H
1009	09h	HT	Horizontal Tab	CTRL I
1010	0Ah	LF	Down Arrow	CTRL J
1011	0Bh	VT	Vertical Tab	CTRL K
1012	0Ch	FF	Delete	CTRL L
1013	0Dh	CR	Enter	CTRL M
1014	0Eh	SO	Insert	CTRL N
1015	0Fh	SI	Esc	CTRL O
1016	10h	DLE	F11	CTRL P
1017	11h	DC1	Home	CTRL Q
1018	12h	DC2	Print Screen	CTRL R
1019	13h	DC3	Backspace	CTRL S
1020	14h	DC4	tab+shift	CTRL T
1021	15h	NAK	F12	CTRL U
1022	16h	SYN	F1	CTRL V

1023	17h	ETB	F2	CTRL W
Scan Value	Hex Value	Character	Keyboard Function Key Operation	Keyboard Ctrl Combination Key
1024	18h	CAN	F3	CTRL X
1025	19h	EM	F4	CTRL Y
1026	1Ah	SUB	F5	CTRL Z
1027	1Bh	ESC	F6	CTRL [
1028	1Ch	FS	F7	CTRL \
1029	1Dh	GS	F8	CTRL ]
1030	1Eh	RS	F9	CTRL 6
1031	1Fh	US	F10	CTRL -
1032	20h	(space)	Space	Space

**Table4-3 Character Comparison Table (visible Character)**

Scan Value	Hex Value	Keyboard Function Key Operation
1033	21h	!
1034	22h	'
1035	23h	#
1036	24h	\$
1037	25h	%
1038	26h	&
1039	27h	'
1040	28h	(
1041	29h	)
1042	2Ah	*
1043	2Bh	+
1044	2Ch	,
1045	2Dh	-
1046	2Eh	.
1047	2Fh	/
1048	30h	0
1049	31h	1
1050	32h	2
1051	33h	3

1052	34h	4
1053	35h	5
1054	36h	6
1055	37h	7

Scan Value	Hex Value	Keyboard Function Key Operation
1056	38h	8
1057	39h	9
1058	3Ah	:
1059	3Bh	;
1060	3Ch	<
1061	3Dh	=
1062	3Eh	>
1063	3Fh	?
1064	40h	@
1065	41h	A
1066	42h	B
1067	43h	C
1068	44h	D
1069	45h	E
1070	46h	F
1071	47h	G
1072	48h	H
1073	49h	I
1074	4Ah	J
1075	4Bh	K
1076	4Ch	L
1077	4Dh	M
1078	4Eh	N
1079	4Fh	O
1080	50h	P
1081	51h	Q
1082	52h	R
1083	53h	S
1084	54h	T
1085	55h	U
1086	56h	V

Scan Value	Hex Value	Keyboard Function Key Operation
1087	57h	W
1088	58h	X
1089	59h	Y
1090	5Ah	Z
1091	5Bh	[
1092	5Ch	\
1093	5Dh	]
1094	5Eh	^
1095	5Fh	_
1096	60h	'
1097	61h	a
1098	62h	b
1099	63h	c
1100	64h	d
1101	65h	e
1102	66h	f
1103	67h	g
1104	68h	h
1105	69h	i
1106	6Ah	j
1107	6Bh	k
1108	6Ch	l
1109	6Dh	m

1110	6Eh	n
1111	6Fh	o
1112	70h	p
1113	71h	q
1114	72h	r
1115	73h	s
1116	74h	t
1117	75h	u

Scan Value	Hex Value	Keyboard Function Key Operation
1118	76h	v
1119	77h	w
1120	78h	x
1121	79h	y
1122	7Ah	z
1123	7Bh	{
1124	7Ch	
1125	7Dh	}
1126	7Eh	~
1127	7Fh	Undefined

Values from 1128 to 1255 can also be set. (Hex Value 80h to FFh are for SSI).

## Code ID

**Table 4-4**

Barcode Type	Code ID
Code 128	D
GS1-128(UCC/EAN-128)	K
AIM 128	D
ISBT-128	D
EAN-8	A
EAN-13	A
ISSN	L
ISBN/Bookland EAN	L
UPC-E	A
UPC-A	A
Interleaved 2 of 5/ITF	F
ITF-14	F
Deutsche Post 14	w
Deutsche Post 12	l
NEC-25(COOP 2 of 5)	o
Matrix 2 of 5	V
Industrial 2 of 5/Discrete 2 of 5/IND25	G
Standard 2 of 5 (IATA 25)	G
Code 39	B
Code 93	E
Codabar	C
Code 11	H
Plessey	J
MSI-Plessey	J
GS1-DataBar ( RSS )	R
PDF417	r
QR	q
AZTEC(Aztec Code)	a
DM(DataMatrix)	u
MaxiCode	x
Han Xin Code	c
Code 32	B
Trioptic Code 39	M
Coupon Code	N
GS1 DataBar-14	R
SETUP128	S
Veri Code	v

## AIM Code Identifiers

**Table 4-5**

Barcode Type	AIM ID	Instruction
Code 128	JC0	Common data
GS1-128(UCC/EAN-128)	JC1	FNC1 in the first code word position.
AIM 128	JC2	FNC1 in the second code word position.
ISBT-128	JC0	
EAN-8	JE4	Common data
	JE4...JE1...	Add 2-bit additional code
	JE4...JE2...	Add 5-bit additional code
EAN-13	JE0	Common data
	JE3	Add 2/5-bit additional code
ISSN	JX0	Common data
ISBN/Bookland EAN	JX0	Common data
UPC-E	JE0	Common data
	JE3	Add 2/5-bit additional code
UPC-A	JE0	Common data
	JE3	Add 2/5-bit additional code
Interleaved 2 of 5/ITF	Jl0	Common data
	Jl1	Check and output check character
	Jl3	Check but don't output check character
ITF-14	Jl1	Output check character
	Jl3	Not output check character
Deutsche Post 14	JX0	Common data
Deutsche Post 12	JX0	Common data
NEC-25(COOP 2 of 5)	JX0	Common data
Matrix 2 of 5	JX0	Common data
Industrial 2 of 5/ Discrete 2 of 5/IND25	JS0	Common data
Standard 2 of 5 (IATA 25)	JR0	Common data
Code 39	JA0	Common data
	JA1	MOD43 Check and output check character
	JA3	MOD43 Check but don't output check character
	JA4	Full ASCII expand,but don't check.
	JA5	Full ASCII expand,and output check character
	JA7	Full ASCII expand,but don't output check character
Code 93	JG0	Common data
	JF0	Common data
Codabar	JF2	Check and output check character
	JF4	Check but don't output check character
	JH3	Common data
Code 11	JH0	MOD11 single character check, and output check character.
	JH3	MOD11 single character check, but don't output check character.
Plessey	JP0	Common data
MSI-Plessey	JM0	Common data
	JM0	MOD10 check and output check character
	JM1	MOD10 check but don't output check character
GS1-DataBar ( RSS )	Je0	Standard data packet
PDF417	JL0	No options specified at this time. Always transmit 3.
QR	JQ0	QR barcode Mode1 ( conform AIM ISS 97-001 )
	JQ1	QR barcode Mode2 ( 2005 symbol ) ,do not use the ECI protocol

	JQ2	QR barcode Mode2( 2005 symbol), Use the ECI protocol
	JQ3	QR barcode Mode2 (2005 symbol),do not use the ECI protocol, FNC1 is in the first place
	JQ4	QR barcode Mode2 (2005 symbol),use the ECI protocol , FNC1 is in the first place
	JQ5	QR barcode Mode2 (2005 symbol),do not use the ECI protocol , FNC1 is in the second place
	JQ6	QR barcode Mode2 (2005 symbol),use the ECI protocol , FNC1 is in the second place
AZTEC(Aztec Code)	Jz0	No options specified at this time. Always transmit 3.
DM(DataMatrix)	Jd0	ECC 000 - 140
	Jd1	ECC 200
	Jd2	ECC 200,FNC1 is in the first or fifth place
	Jd3	ECC 200, FNC1 is in the second or sixth place
	Jd4	ECC 200 supports ECI protocol
	Jd5	ECC 200, FNC1 is in the first or fifth place and supports ECI protocol
	Jd6	ECC 200, FNC1 is in the second or sixth place and supports ECI protocol
MaxiCode	JU1	No options specified at this time. Always transmit 3.
Han Xin Code	JX0	No options specified at this time. Always transmit 3.

## Parameter Command

**Table 4-6**

Name	Command
CMD_ACK	04 D0 04 00 FF 28
CMD_NAK	RESEND:05 D1 04 00 01 FF 25 BAD_CONTEXT:05 D1 04 00 02 FF 24 DENIED:05 D1 04 00 06 FF 20
DECODE_DATA	None
LED_OFF	05 E8 04 00 01 FF 0E
LED_ON	05 E7 04 00 01 FF 0F
PARAM_DEFAULTS	04 C8 04 00 FF 30
PARAM_REQUEST	Listed in the following table
PARAM_SEND	Listed in the following table
REQUEST_REVISION	04 A3 04 00 FF 55
REPLY_REVISION	None
SCAN_DISABLE	04 EA 04 00 FF 0E
SCAN_ENABLE	04 E9 04 00 FF 0F
SLEEP	04 EB 04 00 FF 0D
START_DECODE	04 E4 04 00 FF 14
STOP_DECODE	04 E5 04 00 FF 13
WAKEUP	None
RESET	04 FA 04 00 FE FE
Custom Beeper Sound	05 E6 04 00 00 FF 11 05 E6 04 00 01 FF 10

**Table 4-7**

Parameter Name	Parameter Values	Default Values	Command	Command Inquiry
Default Configuration	0xF2 0xFF	0( Factory Configuration)	Factory Configuration:08 C6 04 08 00 F2 FF 00 FD 35 Default Configuration 1:08 C6 04 08 00 F2 FF 01 FD 34 Default Configuration 2:08 C6 04 08 00 F2 FF 02 FD 33 Default Configuration 3:08 C6 04 08 00 F2 FF 03 FD 32 Default Configuration 4:08 C6 04 08 00 F2 FF 04 FD 31 Default Configuration 5:08 C6 04 08 00 F2 FF 05 FD 30	06 C7 04 00 F2 FF FD 3E
Duration in Scanning	0x88	3.0 sec.	4s: 07 C6 04 08 00 88 28 FE 77 10s:07 C6 04 08 00 88 64 FE 3B Temporary: 1s: 07 C6 04 00 FF 88 0A FD 9E	05 C7 04 00 88 FE A8
Duration in Scanning Quick Setting	0xF2 0xCF		Infinite Time: 08 C6 04 08 00 F2 CF 00 FD 65 last 3s: 08 C6 04 08 00 F2 CF 03 FD 62 last 5s: 08 C6 04 08 00 F2 CF 05 FD 60 last 10s: 08 C6 04 08 00 F2 CF 0A FD 5B last 15s: 08 C6 04 08 00 F2 CF 0B FD 5A last 20s: 08 C6 04 08 00 F2 CF 0C FD 59 last 30s: 08 C6 04 08 00 F2 CF 0D FD 58 last 60s: 08 C6 04 08 00 F2 CF 0E FD 57	06 C7 04 00 F2 CF FD 6E
Enable RS485 Networking Function	0xF6 0x33	0: Disable	Disable: 08 C6 04 08 00 F6 33 00 FD FD Enable: 08 C6 04 08 00 F6 33 01 FD FC	06 C7 04 00 F6 33 FE 06
Modify 485 Device Slave Address	0xF8 0x11		Set slave address 00 01 command :09 A1 04 08 00 F8 11 00 01 FE 40	06 A0 04 00 F8 11 FE 4D
RS485 Networking Decoding Data Format	0xF6 0x34	0: Disable	Disable:08 C6 04 08 00 F6 34 00 FD FC Enable:08 C6 04 08 00 F6 34 01 FD FB	06 C7 04 00 F6 34 FE 05
RS485 Networking Heartbeat Switch	0xF6 0x35	1: Enable	Disable: 08 C6 04 08 00 F6 35 00 FD FB Enable: 08 C6 04 08 00 F6 35 01 FD FA	06 C7 04 00 F6 35 FE 04
RS485 Network Decoded	0xF6 0x2E	0: Disable	*Disable: 08 C6 04 08 00 F6 2E 00 FE 02	06 C7 04 00 F6 2E FE 0B

Data Is Saved To Cache			Enable: 08 C6 04 08 00 F6 2E 01 FE 01	
Disable/Enable Modbus Rtu Function	0xF6 0x43	0: Disable	*Disable: 08 C6 04 08 00 F6 43 00 FD ED Enable: 08 C6 04 08 00 F6 43 01 FD EC	06 C7 04 00 F6 43 FD F6
Barcode Cache	0xF6 0x44	0: *Direct Output (Modbus Rtu Format)	*Direct Output (ModbusRtu Format): 08 C6 04 08 00 F6 44 00 FD EC Cache: 08 C6 04 08 00 F6 44 01 FD EB	06 C7 04 00 F6 44 FD F5
Slave Address Setting	0xF3 0x33			06 C7 04 00 F3 33 FE 09
Quickly Set The Slave Address	0xF6 0x43	0: *Address 0x00	*Address 0x00: 08 C6 04 08 00 F6 43 00 FD ED Address 0x01: 08 C6 04 08 00 F6 43 01 FD EC Address 0x02: 08 C6 04 08 00 F6 43 02 FD EB Address 0x03: 08 C6 04 08 00 F6 43 03 FD EA Address 0xAA: 08 C6 04 08 00 F6 43 AA FD 43 Address 0xBB: 08 C6 04 08 00 F6 43 BB FD 32	06 C7 04 00 F6 43 FD F6
Power Mode	0x80	0x01:Low Power	Continuous Power: 07 C6 04 08 00 80 00 FE A7 Low Power: 07 C6 04 08 00 80 01 FE A6	05 C7 04 00 80 FE B0
Trigger Mode	0x8A	0x00: Level	Level: 07 C6 04 08 00 8A 00 FE 9D Pulse: 07 C6 04 08 00 8A 02 FE 9B Continuous: 07 C6 04 08 00 8A 04 FE 99 Host: 07 C6 04 08 00 8A 08 FE 95 Automatic Induction Mode: 07 C6 04 08 00 8A 09 FE 94 Button Continuous: 07 C6 04 08 00 8A 0A FE 93 Button Automatic Induction Mode: 07 C6 04 08 00 8A 0B FE 92 Temporary: Level: 07 C6 04 00 FF 8A 00 FD A6 Continuous: 07 C6 04 00 FF 8A 04 FD A2 Host: 07 C6 04 00 FF 8A 08 FD 9E Host: 07 C6 04 00 00 8A 08 FE 9D	05 C7 04 00 8A FE A6

Continuous Reading Interval	0x89	0.5s	0s: 07 C6 04 08 00 89 00 FE 9E 0.5s: 07 C6 04 08 00 89 05 FE 99 3s: 07 C6 04 08 00 89 1E FE 80	05 C7 04 00 89 FE A7
Beeper Volume	0x8C	0x00: High	Low: 07 C6 04 08 00 8C 02 FE 99 Medium: 07 C6 04 08 00 8C 01 FE 9A High: 07 C6 04 08 00 8C 00 FE 9B Mute: 07 C6 04 08 00 8C 03 FE 98	05 C7 04 00 8C FE A4
Beeper Type	0xF2 0xD8	0x00: Passive Beeper	* Passive Beeper: 08 C6 04 08 00 F2 D8 00 FD 5C Active Beeper: 08 C6 04 08 00 F2 D8 01 FD 5B	06 C7 04 00 F2 D8 FD 65
Beep After Good Decode	0x38	1: Enable	Enable: 07 C6 04 08 00 38 01 FE EE Disable: 07 C6 04 08 00 38 00 FE EF	05 C7 04 00 38 FE F8
Terminator	0xF2 0x05	*0x00: Disable  #0x01: CR LF  &0x01: CR LF  %0x02: CR	Disable: 08 C6 04 08 00 F2 05 00 FE 2F CR LF: 08 C6 04 08 00 F2 05 01 FE 2E CR: 08 C6 04 08 00 F2 05 02 FE 2D TAB: 08 C6 04 08 00 F2 05 03 FE 2C CR CR: 08 C6 04 08 00 F2 05 04 FE 2B CR LF CR LF: 08 C6 04 08 00 F2 05 05 FE 2A	06 C7 04 00 F2 05 FE 38
Indicator Light Function	0xF2 0x0A	0x00: Good Decode	Good Decode: 08 C6 04 08 00 F2 0A 00 FE 2A Power LED: 08 C6 04 08 00 F2 0A 01 FE 29	06 C7 04 00 F2 0A FE 33
LED After Good Decode	0xF2 0x0B	1: Enable	Disable: 08 C6 04 08 00 F2 0B 00 FE 29 Enable: 08 C6 04 08 00 F2 0B 01 FE 28	06 C7 04 00 F2 0B FE 32
Decode Indicator Control	0xF2 0xCB	0: Mode 0	Mode 0: 08 C6 04 08 00 F2 CB 00 FD 69 Mode 1: 08 C6 04 08 00 F2 CB 01 FD 68 Mode 2: 08 C6 04 08 00 F2 CB 02 FD 67 Mode 3: 08 C6 04 08 00 F2 CB 03 FD 66	06 C7 04 00 F2 CB FD 72
Mute	0xF2 0x0C	0: Disable	Disable: 08 C6 04 08 00 F2 0C 00 FE 28 Enable: 08 C6 04 08 00 F2 0C 01 FE 27	06 C7 04 00 F2 0C FE 31
Boot Prompt	0xF2 0x0D	1: Enable	Disable: 08 C6 04 08 00 F2 0D 00 FE 27 Enable: 08 C6 04 08 00 F2 0D 01 FE 26	06 C7 04 00 F2 0D FE 30
Setup Code Prompt	0xF2 0x0E	1: Enable	Disable: 08 C6 04 08 00 F2 0E 00 FE 26	06 C7 04 00 F2 0E FE 2F

			Enable: 08 C6 04 08 00 F2 0E 01 FE 25	
Transmit "No Read" Message	0x5E	0x00:Disable No Read	Enable: 07 C6 04 08 00 5E 01 FE C8 Disable: 07 C6 04 08 00 5E 00 FE C9	05 C7 04 00 5E FE D2
Parameter Scanning	0xEC	1: Enable	Enable: 07 C6 04 08 00 EC 01 FE 3A Disable: 07 C6 04 08 00 EC 00 FE 3B	05 C7 04 00 EC FE 44
Send Setting Code	0xF1 0x71	0: Disable	Enable: 08 C6 04 08 00 F1 71 01 FD C3 Disable: 08 C6 04 08 00 F1 71 00 FD C4	06 C7 04 00 F1 71 FD CD
Linear Code Type Security Levels	0x4E	0x01:Linear Security Level 1	Level 1: 07 C6 04 08 00 4E 01 FE D8 Level 2: 07 C6 04 08 00 4E 02 FE D7 Level 3: 07 C6 04 08 00 4E 03 FE D6 Level 4: 07 C6 04 08 00 4E 04 FE D5	05 C7 04 00 4E FE E2
Automatic Filling of Value-added Tax Invoice	0xF2 0x08	0: Disable	Disable: 08 C6 04 08 00 F2 08 00 FE 2C Enable: 08 C6 04 08 00 F2 08 01 FE 2B	06 C7 04 00 F2 08 FE 35
Invoice Type	0xF2 0xAA	0:Special Invoice	Special Invoice: 08 C6 04 08 00 F2 AA 00 FD 8A Plain Invoice: 08 C6 04 08 00 F2 AA 01 FD 89	06 C7 04 00 F2 AA FD 93
Transmit ID Characters	0x2D	0(None)	Disable: 07 C6 04 08 00 2D 00 FE FA AIM: 07 C6 04 08 00 2D 01 FE F9 Custom: 07 C6 04 08 00 2D 02 FE F8	05 C7 04 00 2D FF 03
The prefix/suffix value			Prefix Character String Setting 31 Suffix Character String Setting 32 33: 0B C6 04 08 00 69 31 68 32 6A 33 FD 52 Prefix 0x00 Suffix 0x0D 0x0A : 0B C6 04 08 00 69 00 68 0D 6A 0A FD D1	07 C7 04 00 69 68 6A FD F3
Prefix	0x69	0x00		
Suffix1	0x68	0x0A		
Suffix2	0x6A	0x0D		
Scan Data Transmission Format	0xEB	0x00(Data Only)	Data: 07 C6 04 08 00 EB 00 FE 3C Data+Suffix1: 07 C6 04 08 00 EB 01 FE 3B Data+Suffix2: 07 C6 04 08 00 EB 02 FE 3A Data+Suffix1+Suffix2: 07 C6 04 08 00 EB 03 FE 39	05 C7 04 00 EB FE 45

			Prefix+Data: 07 C6 04 08 00 EB 04 FE 38 Prefix+Data+Suffix1: 07 C6 04 08 00 EB 05 FE 37 Prefix+Data+Suffix2: 07 C6 04 08 00 EB 06 FE 36 Prefix+Data+Suffix1+Suffix2: 07 C6 04 08 00 EB 07 FE 35	
Baud Rate	0x9C	0x06:960 0	1200: 07 C6 04 08 00 9C 03 FE 88 2400: 07 C6 04 08 00 9C 04 FE 87 4800: 07 C6 04 08 00 9C 05 FE 86 9600: 07 C6 04 08 00 9C 06 FE 85 19200: 07 C6 04 08 00 9C 07 FE 84 38400: 07 C6 04 08 00 9C 08 FE 83 57600: 07 C6 04 08 00 9C 09 FE 82 115200: 07 C6 04 08 00 9C 0A FE 81	05 C7 04 00 9C FE 94
Data Bit	0xA0	0x03: 8 Data Bits	7 Data Bits: 07 C6 04 08 00 A0 02 FE 85 8 Data Bits: 07 C6 04 08 00 A0 03 FE 84	05 C7 04 00 A0 FE 90
Parity	0x9E	0x04:None	Odd: 07 C6 04 08 00 9E 00 FE 89 Even: 07 C6 04 08 00 9E 01 FE 88 Mark: 07 C6 04 08 00 9E 02 FE 87 Space: 07 C6 04 08 00 9E 03 FE 86 None: 07 C6 04 08 00 9E 04 FE 85	05 C7 04 00 9E FE 92
Software Handshaking	0x9F	1: Enable	Enable: 07 C6 04 08 00 9F 01 FE 87 Disable: 07 C6 04 08 00 9F 00 FE 88	05 C7 04 00 9F FE 91
Decode Data Packet Format	0xEE	0: Disable	Send Raw Decode Data : 07 C6 04 08 00 EE 00 FE 39 Send Packeted Decode Data: 07 C6 04 08 00 EE 01 FE 38	05 C7 04 00 EE FE 42
Host Serial Response Time-out	0x9B	2s	0.1s: 07 C6 04 08 00 9B 01 FE 8B	05 C7 04 00 9B FE 95
Stop Bit Select	0x9D	0x01(1 Stop Bit)	1 Stop Bit: 07 C6 04 08 00 9D 01 FE 89 2 Stop Bits: 07 C6 04 08 00 9D 02 FE 88	05 C7 04 00 9D FE 93

Intercharacter Delay	0x6E	0	1s: 07 C6 04 08 00 6E 01 FE B8	05 C7 04 00 6E FE C2
Host Character Time-out	0xEF	200ms	500ms: 07 C6 04 08 00 EF 32 FE 06 200ms: 07 C6 04 08 00 EF 14 FE 24 50ms: 07 C6 04 08 00 EF 05 FE 33	05 C7 04 00 EF FE 41
Communication Mode	0xF2 0x01	0 (Serial Port)	Serial Port: 08 C6 04 08 00 F2 01 00 FE 33 USB KBW: 08 C6 04 08 00 F2 01 01 FE 32 USB Serial Port: 08 C6 04 08 00 F2 01 02 FE 31 AUTO UK: 08 C6 04 08 00 F2 01 03 FE 30 AUTO UV: 08 C6 04 08 00 F2 01 04 FE 2F TTDATA: 08 C6 04 08 00 F2 01 0A FE 29 TTDATA+Serial Port: 08 C6 04 08 00 F2 01 0B FE 28 HID POS: 08 C6 04 08 00 F2 01 0E FE 25	06 C7 04 00 F2 01 FE 3C
Communication Mode (0xF6 0x37)	0xF6 0x37		AUTO KW (KBW+Wiegand): 08 C6 04 08 00 F6 37 18 FD E1 AUTO KR (KBW+RS485): 08 C6 04 08 00 F6 37 19 FD E0 AUTO HU (HIDPOS+Serial port): 08 C6 04 08 00 F6 37 1A FD DF AUTO HW (HIDPOS+Wiegand): 08 C6 04 08 00 F6 37 1B FD DE AUTO HR (HIDPOS+RS485): 08 C6 04 08 00 F6 37 1C FD DD	06 C7 04 00 F6 37 FE 02
Wiegand protocol type	0xF2 0xA4	0: AUTO	AUTO: 08 C6 04 08 00 F2 A4 00 FD 90 WG26: 08 C6 04 08 00 F2 A4 01 FD 8F WG34: 08 C6 04 08 00 F2 A4 02 FD 8E WG66: 08 C6 04 08 00 F2 A4 03 FD 8D Custom Wiegand transport 1: 08 C6 04 08 00 F2 A4 04 FD 8C Custom Wiegand transport 2: 08 C6 04 08 00 F2 A4 05 FD 8B WG64: 08 C6 04 08 00 F2 A4 06 FD 8A	06 C7 04 00 F2 A4 FD 99
Wiegand 26 Protocol Output Mode	0xF2 0xA5	0: 3+5	3+5: 08 C6 04 08 00 F2 A5 00 FD 8F RAW: 08 C6 04 08 00 F2 A5 01 FD 8E	06 C7 04 00 F2 A5 FD 98

Wiegand Output Time Interval	0xF3 0x16		08 C6 04 08 00 F3 16 16 FE 07	06 C7 04 00 F3 16 FE 26
Floodlight Control	0xF2 0x02	0(Lighting when Read)	Lighting when Read:08 C6 04 08 00 F2 02 00 FE 32 Always Lighting:08 C6 04 08 00 F2 02 01 FE 31 Always Close: 08 C6 04 08 00 F2 02 02 FE 30	06 C7 04 00 F2 02 FE 3B
Positioning Light Control	0xF2 0x03	0(Lighting when Read)	Lighting when Read:08 C6 04 08 00 F2 03 00 FE 31 Always Lighting:08 C6 04 08 00 F2 03 01 FE 30 Always Close: 08 C6 04 08 00 F2 03 02 FE 2F	06 C7 04 00 F2 03 FE 3A
Positioning light Flicker	0xF2 0xB8	0x00: Flicker	*Flicker: 08 C6 04 08 00 F2 B8 00 FD 7C No Flicker: 08 C6 04 08 00 F2 B8 01 FD 7B	06 C7 04 00 F2 B8 FD 85
Sensitivity Level	0xF2 0x04	1(High Sensitivity)	Special:08 C6 04 08 00 F2 04 00 FE 30 High:08 C6 04 08 00 F2 04 01 FE 2F Middle:08 C6 04 08 00 F2 04 02 FE 2E Low:08 C6 04 08 00 F2 04 03 FE 2D	06 C7 04 00 F2 04 FE 39
Custom Sensitivity	0xF3 0x01	1	00:08 C6 04 08 00 F3 01 00 FE 32 01:08 C6 04 08 00 F3 01 01 FE 31 05:08 C6 04 08 00 F3 01 05 FE 2D 10:08 C6 04 08 00 F3 01 0A FE 28 15:08 C6 04 08 00 F3 01 0F FE 23	06 C7 04 00 F3 01 FE 3B
Stability of Induction Time	0xF3 0x02	0.5s	500ms:08 C6 04 08 00 F3 02 05 FE 2C 1000ms:08 C6 04 08 00 F3 02 0A FE 27 300ms: 08 C6 04 08 00 F3 02 03 FE 2E	06 C7 04 00 F3 02 FE 3A
Same code reading delay	0xF3 0x03	0.5s	1500ms:08 C6 04 08 00 F3 03 0F FE 21 500ms:08 C6 04 08 00 F3 03 05 FE 2B 300ms: 08 C6 04 08 00 F3 03 03 FE 2D	06 C7 04 00 F3 03 FE 39
Support GS1 Rules And Use Parentheses To Include All Fields	0xF6 0x3C	0: Disable	*Disable: 08 C6 04 08 00 F6 3C 00 FD F4 Enable: 08 C6 04 08 00 F6 3C 01 FD F3	06 C7 04 00 F6 3C FD FD
Convert To Hexadecimal Output	0xF6 0x41	0: *Disable	*Disable: 08 C6 04 08 00 F6 41 00 FD EF Hexadecimal Uppercase: 08 C6 04 08 00 F6 41 01 FD EE	06 C7 04 00 F6 41 FD F8

			Hexadecimal Lowercase: 08 C6 04 08 00 F6 41 02 FD ED	
Convert To Hexadecimal Interval Output	0xF6 0x42	0: *Disable Interval	*Disable Interval: 08 C6 04 08 00 F6 42 00 FD EE Space: 08 C6 04 08 00 F6 42 01 FD ED	06 C7 04 00 F6 42 FD F7
1D inverse barcode reading	0xF2 0x91	0: Disable	Disable: 08 C6 04 08 00 F2 91 00 FD A3 Enable: 08 C6 04 08 00 F2 91 01 FD A2	06 C7 04 00 F2 91 FD AC
Output Product Information	0xF4 0x01	None	None	06 C7 04 00 F4 01 FE 3A
Output Character Set Type	0xF2 0x06	0: Primitive Type	*Primitive type: 08 C6 04 08 00 F2 06 00 FE 2E GBK(GB2312): 08 C6 04 08 00 F2 06 01 FE 2D UTF8: 08 C6 04 08 00 F2 06 02 FE 2C EUC-KR Korean (valid for special version): 08 C6 04 08 00 F2 06 03 FE 2B DEC MCS: 08 C6 04 08 00 F2 06 04 FE 2A BIG5: 08 C6 04 08 00 F2 06 05 FE 29	06 C7 04 00 F2 06 FE 37
Input Character Set Type	0xF2 0xAB	0: AUTO	AUTO: 08 C6 04 08 00 F2 AB 00 FD 89 GBK(GB2312): 08 C6 04 08 00 F2 AB 01 FD 88 UTF8: 08 C6 04 08 00 F2 AB 02 FD 87 ASCII: 08 C6 04 08 00 F2 AB 03 FD 86 Japanese:08 C6 04 08 00 F2 AB 04 FD 85 Korean:08 C6 04 08 00 F2 AB 05 FD 84 DEC Multinational Character Set (MCS): 08 C6 04 08 00 F2 AB 06 FD 83 ISO8859-1 Character Set: 08 C6 04 08 00 F2 AB 07 FD 82 Japanese Single Byte (valid for special version): 08 C6 04 08 00 F2 AB 08 FD 81 Cyrillic Character Set (Windows 1251) : 08 C6 04 08 00 F2 AB 09 FD 80 KOI8-R Character Set: 08 C6 04 08 00 F2 AB 0A FD 7F BIG5 Character Set: 08 C6 04 08 00 F2 AB 0B FD 7E	06 C7 04 00 F2 AB FD 92

			ISO8859-2 Character Set: 08 C6 04 08 00 F2 AB 0C FD 7D	
USB Type	0xF2 0x0F	0: USB1.1( Full Speed)	USB1.1 ( Full Speed): 08 C6 04 08 00 F2 0F 00 FE 25 USB2.0 ( High Speed) 08 C6 04 08 00 F2 0F 01 FE 24	06 C7 04 00 F2 0F FE 2E
Country/Language Keyboard	0xF6 0x01	1: American Keyboard	America: 08 C6 04 08 00 F6 01 01 FE 2E Belgium: 08 C6 04 08 00 F6 01 02 FE 2D Brazil ( ABNT2 ) : 08 C6 04 08 00 F6 01 03 FE 2C Denmark: 08 C6 04 08 00 F6 01 06 FE 29 Finland: 08 C6 04 08 00 F6 01 07 FE 28 France: 08 C6 04 08 00 F6 01 08 FE 27 Austria、 Germany: 08 C6 04 08 00 F6 01 09 FE 26 Greece: 08 C6 04 08 00 F6 01 0A FE 25 Hungary: 08 C6 04 08 00 F6 01 0B FE 24 Italy: 08 C6 04 08 00 F6 01 0D FE 22 Netherlands: 08 C6 04 08 00 F6 01 0F FE 20 Norway: 08 C6 04 08 00 F6 01 10 FE 1F Poland: 08 C6 04 08 00 F6 01 11 FE 1E Portugal: 08 C6 04 08 00 F6 01 12 FE 1D Romania (standard): 08 C6 04 08 00 F6 01 13 FE 1C Russia: 08 C6 04 08 00 F6 01 14 FE 1B Slovakia: 08 C6 04 08 00 F6 01 15 FE 1A Spain: 08 C6 04 08 00 F6 01 16 FE 19 Sweden: 08 C6 04 08 00 F6 01 17 FE 18 Turkey_F: 08 C6 04 08 00 F6 01 19 FE 16 Turkey_Q: 08 C6 04 08 00 F6 01 1A FE 15 England: 08 C6 04 08 00 F6 01 1B FE 14 Japan: 08 C6 04 08 00 F6 01 1C FE 13 Chech: 08 C6 04 08 00 F6 01 1D FE 12	06 C7 04 00 F6 01 FE 38

			Thailand Kedmanee: 08 C6 04 08 00 F6 01 1E FE 11 Ukraine: 08 C6 04 08 00 F6 01 1F FE 10 Arabic_101: 08 C6 04 08 00 F6 01 20 FE 0F Croatia: 08 C6 04 08 00 F6 01 21 FE 0E Korea: 08 C6 04 08 00 F6 01 22 FE 0D Bulgaria: 08 C6 04 08 00 F6 01 23 FE 0C Multi-country Common: 08 C6 04 08 00 F6 01 24 FE 0B Vietnam: 08 C6 04 08 00 F6 01 25 FE 0A	
Time interval that keyboard outputs character	0xF3 0x04	5ms	0ms: 08 C6 04 08 00 F3 04 00 FE 2F 5ms: 08 C6 04 08 00 F3 04 01 FE 2E 10ms: 08 C6 04 08 00 F3 04 02 FE 2D	06 C7 04 00 F3 04 FE 38
Quick Settings of Keyboard Output Time Interval	0xF2 0xB2		0ms: 08 C6 04 08 00 F2 B2 00 FD 82 5ms: 08 C6 04 08 00 F2 B2 03 FD 7F 10ms: 08 C6 04 08 00 F2 B2 01 FD 81 50ms: 08 C6 04 08 00 F2 B2 02 FD 80	06 C7 04 00 F2 B2 FD 8B
Letter case conversion	0xF2 0xA1	0: Normal Letter Case	Normal Letter Case: 08 C6 04 08 00 F2 A1 00 FD 93 All Uppercase: 08 C6 04 08 00 F2 A1 01 FD 92 All Lowercase: 08 C6 04 08 00 F2 A1 02 FD 91 Case Inversion: 08 C6 04 08 00 F2 A1 03 FD 90	06 C7 04 00 F2 A1 FD 9C
Keyboard Type	0xF2 0xB4	0: Standard Keyboard	Standard Keyboard: 08 C6 04 08 00 F2 B4 00 FD 80 Virtual Keyboard: 08 C6 04 08 00 F2 B4 01 FD 7F	06 C7 04 00 F2 B4 FD 89
STX and ETX Setting	0xF2 0xB7	0: Disable	Disable: 08 C6 04 08 00 F2 B7 00 FD 7D STX(Prefix): 08 C6 04 08 00 F2 B7 01 FD 7C ETX(Suffix 1): 08 C6 04 08 00 F2 B7 02 FD 7B STX(Prefix)+ ETX(Suffix 1): 08 C6 04 08 00 F2 B7 03 FD 7A	06 C7 04 00 F2 B7 FD 86
Suffix Alt Key Combination	0xF6 0x2B	0: Disable	*Disable: 08 C6 04 08 00 F6 2B 00 FE 05 Enable: 08 C6 04 08 00 F6 2B 01	06 C7 04 00 F6 2B FE 0E

			FE 04	
Suffix Ctrl Key Combination	0xF6 0x2C	0: Disable	*Disable: 08 C6 04 08 00 F6 2C 00 FE 04 Enable: 08 C6 04 08 00 F6 2C 01 FE 03	06 C7 04 00 F6 2C FE 0D
Suffix Shift Key Combination	0xF6 0x2D	0: Disable	*Disable: 08 C6 04 08 00 F6 2D 00 FE 03 Enable: 08 C6 04 08 00 F6 2D 01 FE 02	06 C7 04 00 F6 2D FE 0C
Suffix And Terminator Are Not Affected By The Output Mode Of ASCII Control Characters	0xF6 0x49	0: Disable	*Disable: 08 C6 04 08 00 F6 49 00 FD E7 Enable: 08 C6 04 08 00 F6 49 01 FD E6	06 C7 04 00 F6 49 FD F0
Keyboard State Control	0xF2 0xB9	1: Enable	Disable: 08 C6 04 08 00 F2 B9 00 FD 7B Enable: 08 C6 04 08 00 F2 B9 01 FD 7A	06 C7 04 00 F2 B9 FD 84
ASCII Control Character Output Mode Selection	0xF2 0xAD		Output Function Key:08 C6 04 08 00 F2 AD 00 FD 87 Output Ctrl Combination Key:08 C6 04 08 00 F2 AD 01 FD 86 ALT Mode Output Control Character:08 C6 04 08 00 F2 AD 02 FD 85 Output Enter , DownArrow:08 C6 04 08 00 F2 AD 03 FD 84 Output CTRL+key combination, but not including the keys on the keyboard:08 C6 04 08 00 F2 AD 04 FD 83	06 C7 04 00 F2 AD FD 90
Boot Event	0xF2 0xA2	0: Disable	Disable: 08 C6 04 08 00 F2 A2 00 FD 92 Enable: 08 C6 04 08 00 F2 A2 01 FD 91	06 C7 04 00 F2 A2 FD 9B
Trigger Event	0xF2 0xA3	0: Disable	Disable: 08 C6 04 08 00 F2 A3 00 FD 91 Enable: 08 C6 04 08 00 F2 A3 01 FD 90 Enable GPIO Pin Event: 08 C6 04 08 00 F2 A3 02 FD 8F Enable Event&GPIO Pin Event: 08 C6 04 08 00 F2 A3 03 FD 8E	06 C7 04 00 F2 A3 FD 9A
Enable Setting Code Password Mode	0xF2 0xA7	0: Disable	Disable: 08 C6 04 08 00 F2 A7 00 FD 8D Enable: 08 C6 04 08 00 F2 A7 01 FD 8C	06 C7 04 00 F2 A7 FD 96
Input Setting Code Password	0xF3 0x05		Password 68: 08 C6 04 08 00 F3 05 68 FD C6	06 C7 04 00 F3 05 FE 37

			Password 96: 08 C6 04 08 00 F3 05 96 FD 98	
Modify Setting Code Password	0xF3 0x06		New Password 68: 08 C6 04 08 00 F3 06 68 FD C5 New Password 96: 08 C6 04 08 00 F3 06 96 FD 97	06 C7 04 00 F3 06 FE 36
Logout Password	0xF2 0xA9		08 C6 04 08 00 F2 A9 00 FD 8B	06 C7 04 00 F2 A9 FD 94
Disable passive trigger scanning	0xF2 0xA8	0: Disable	Disable: 08 C6 04 08 00 F2 A8 00 FD 8C Enable: 08 C6 04 08 00 F2 A8 01 FD 8B	06 C7 04 00 F2 A8 FD 95
1D Global Switch	0xF2 0x11		Disable: 08 C6 04 08 00 F2 11 00 FE 23 Enable: 08 C6 04 08 00 F2 11 01 FE 22	06 C7 04 00 F2 11 FE 2C
2D Global Switch	0xF2 0x50		Disable: 08 C6 04 08 00 F2 50 00 FD E4 Enable: 08 C6 04 08 00 F2 50 01 FD E3	06 C7 04 00 F2 50 FD ED
All Barcode Switch	0xF2 0x90		Disable: 08 C6 04 08 00 F2 90 00 FD A4 Enable: 08 C6 04 08 00 F2 90 01 FD A3	06 C7 04 00 F2 90 FD AD
Hide Head Data	0xF2 0xC6	0: Disable	Disable: 08 C6 04 08 00 F2 C6 00 FD 6E Enable: 08 C6 04 08 00 F2 C6 01 FD 6D	06 C7 04 00 F2 C6 FD 77
Hide Intermediate Data	0xF2 0xC7	0: Disable	Disable: 08 C6 04 08 00 F2 C7 00 FD 6D Enable: 08 C6 04 08 00 F2 C7 01 FD 6C	06 C7 04 00 F2 C7 FD 76
Hide Tail Data	0xF2 0xC8	0: Disable	Disable: 08 C6 04 08 00 F2 C8 00 FD 6C Enable: 08 C6 04 08 00 F2 C8 01 FD 6B	06 C7 04 00 F2 C8 FD 75
Reserve Header Data	0xF6 0x62	0: Disable	*Disable: 08 C6 04 08 00 F6 62 00 FD CE Enable: 08 C6 04 08 00 F6 62 01 FD CD	06 C7 04 00 F6 62 FD D7
Set The Length Of The Reserved Header Data	0xF3 0x35			06 C7 04 00 F3 35 FE 07
Quickly Set The Length Of The Reserved Header Data	0xF8 0x28		Reserve 1 Byte Of Header Data: 09 C6 04 08 00 F8 28 00 01 FE 04 Reserve 9999 Bytes Of Header Data: 09 C6 04 08 00 F8 28 27 0F FD CF Reserve 65535 Bytes Of Header Data: 09 C6 04 08 00 F8 28 FF FF FC 07	06 C7 04 00 F8 28 FE 0F

Reserve Middle Data	0xF6 0x63	0: Disable	*Disable: 08 C6 04 08 00 F6 63 00 FD CD Enable: 08 C6 04 08 00 F6 63 01 FD CC	06 C7 04 00 F6 63 FD D6
Set The Starting Position To Reserve Middle Data	0xF3 0x36			06 C7 04 00 F3 36 FE 06
Quickly Set The Starting Position To Reserve Middle Data	0xF8 0x29		Reserve The Data After The First Byte: 09 C6 04 08 00 F8 29 00 01 FE 03 Reserve The Data After The 9999th Byte: 09 C6 04 08 00 F8 29 27 0F FD CE Reserve The Data After The 65535th Byte: 09 C6 04 08 00 F8 29 FF FF FC 06	06 C7 04 00 F8 29 FE 0E
Set The Length Of The Reserved Middle Data	0xF3 0x37			06 C7 04 00 F3 37 FE 05
Quickly Set The Length Of The Reserved Middle Data	0xF8 0x2A		1 Byte Of Data After The Start Position Is Reserved: 09 C6 04 08 00 F8 2A 00 01 FE 02 9999 Bytes Of Data After The Start Position Are Reserved: 09 C6 04 08 00 F8 2A 27 0F FD CD 65535 Bytes Of Data After The Start Position Are Reserved: 09 C6 04 08 00 F8 2A FF FF FC 05	06 C7 04 00 F8 2A FE 0D
Reserve Tail Data	0xF6 0x64	0: Disable	*Disable: 08 C6 04 08 00 F6 64 00 FD CC Enable: 08 C6 04 08 00 F6 64 01 FD CB	06 C7 04 00 F6 64 FD D5
Set The Length Of The Reserved Tail Data	0xF3 0x38			06 C7 04 00 F3 38 FE 04
Quickly Set The Length Of The Reserved Tail Data	0xF8 0x2B		Reserve 1 Byte Of Tail Data: 09 C6 04 08 00 F8 2B 00 01 FE 01 Reserve 9999 Bytes Of Tail Data: 09 C6 04 08 00 F8 2B 27 0F FD CC Reserve 65535 Bytes Of Tail Data: 09 C6 04 08 00 F8 2B FF FF FC 04	06 C7 04 00 F8 2B FE 0C
Enable/Disable Hide The Customized Data String	0xF6 0x68	0: Disable	*Disable: 08 C6 04 08 00 F6 68 00 FD C8 Enable: 08 C6 04 08 00 F6 68 01 FD C7	06 C7 04 00 F6 68 FD D1

In The Barcode				
Set The Hidden Data String	0xF3 0x2A			06 C7 04 00 F3 2A FE 12
Read Back And Clear	0xF6 0x69		Read Back The Set Content: 08 C6 04 08 00 F6 69 00 FD C7 Clear The Set Content: 08 C6 04 08 00 F6 69 01 FD C6	06 C7 04 00 F6 69 FD D0
Enable/Disable Insert Custom Data	0xF2 0xDE	0: Disable	Disable: 08 C6 04 08 00 F2 DE 00 FD 56 Enable: 08 C6 04 08 00 F2 DE 01 FD 55	06 C7 04 00 F2 DE FD 5F
Same code reading delay	0xF3 0x03	0.5s	1500ms:08 C6 04 08 00 F3 03 0F FE 21 500ms:08 C6 04 08 00 F3 03 05 FE 2B 300ms: 08 C6 04 08 00 F3 03 03 FE 2D	06 C7 04 00 F3 03 FE 39
Fast Setting	0xF2 0xC9		No Delay: 08 C6 04 08 00 F2 C9 00 FD 6B Delay 1s: 08 C6 04 08 00 F2 C9 01 FD 6A Delay 3s: 08 C6 04 08 00 F2 C9 03 FD 68 Delay 5s: 08 C6 04 08 00 F2 C9 05 FD 66 Delay 7s: 08 C6 04 08 00 F2 C9 07 FD 64 Infinite Delay(Disable Same code reading delay): 08 C6 04 08 00 F2 C9 09 FD 62	06 C7 04 00 F2 C9 FD 74
Continue Scanning	0xF6 0x39	0: Disable	*Disable: 08 C6 04 08 00 F6 39 00 FD F7 Enable: 08 C6 04 08 00 F6 39 01 FD F6	06 C7 04 00 F6 39 FE 00
The Same Code Is Not Output In a Single Round Of Decoding	0xF6 0x6B	0: Disable	*Disable: 08 C6 04 08 00 F6 6B 00 FD C5 Enable: 08 C6 04 08 00 F6 6B 01 FD C4	06 C7 04 00 F6 6B FD CE
Continuously Set Multiple Prefix	0xF3 0x10		Continuously Set Multiple Prefix: 08 C6 04 08 00 F3 10 00 FE 23	06 C7 04 00 F3 10 FE 2C
Quickly Set Multiple Prefixes	0xF8 0x14			06 C7 04 00 F8 14 FE 23
Continuously Set Multiple Suffixes	0xF3 0x11		Continuously Set Multiple Suffix: 08 C6 04 08 00 F3 11 00 FE 22	06 C7 04 00 F3 11 FE 2B

Quickly Set Multiple Suffixes	0xF8 0x15			06 C7 04 00 F8 15 FE 22
Complete Continuous Setup of Multiple Prefixes / Suffixes	0xFF 0XF6		Complete Continuous Setup of Multiple Prefixes / Suffixes: 08 C6 04 08 00 FF F6 00 FD 31	06 C7 04 00 FF F6 FD 3A
Set Multiple Prefix and Suffix Data Transmission Format	0xEB		Data + Multiple Suffixes: 07 C6 04 08 00 EB 08 FE 34 Multiple Prefixes+Data: 07 C6 04 08 00 EB 09 FE 33 Multiple Prefixes+Data+Multiple Suffixes: 07 C6 04 08 00 EB 0A FE 32	05 C7 04 00 EB FE 45
Heartbeat Control	0xF2 0xCD	0: Disable	Disable: 08 C6 04 08 00 F2 CD 00 FD 67 ACK Heartbeat doesn't need ACK: 08 C6 04 08 00 F2 CD 01 FD 66 ACK Heartbeat needs ACK: 08 C6 04 08 00 F2 CD 02 FD 65	06 C7 04 00 F2 CD FD 70
URL Blocking	0xF2 0xEa	0: Disable	Disable: 08 C6 04 08 00 F2 EA 00 FD 4A Enable: 08 C6 04 08 00 F2 EA 01 FD 49	06 C7 04 00 F2 EA FD 53

### About 1D Barcode(only for 1D)

#### UPC-A

Scan	0x01	1: Enable	Disable: 07 C6 04 08 00 01 00 FF 26 Enable: 07 C6 04 08 00 01 01 FF 25	05 C7 04 00 01 FF 2F
Transmit UPC-A Check Digit	0x28	1: Enable	Disable: 07 C6 04 08 00 28 00 FE FF Enable: 07 C6 04 08 00 28 01 FE FE	05 C7 04 00 28 FF 08
Preamble	0x22	0x01: System Character	None(00): 07 C6 04 08 00 22 00 FF 05 System Character (01) : 07 C6 04 08 00 22 01 FF 04 Country Character & System Character(02): 07 C6 04 08 00 22 02 FF 03	05 C7 04 00 22 FF 0E
UPC-A 2-bits Supplemental	0xF2 0x40	0: Disable	Enable: 08 C6 04 08 00 F2 40 01 FD F3 Disable: 08 C6 04 08 00 F2 40 00 FD F4	06 C7 04 00 F2 40 FD FD
UPC-A 5-bits Supplemental	0xF2 0x41	0: Disable	Enable: 08 C6 04 08 00 F2 41 01 FD F2 Disable: 08 C6 04 08 00 F2 41 00 FD F3	06 C7 04 00 F2 41 FD FC

UPC-A Read Supplementals	0xF2 0x42	0: Disable	Enable: 08 C6 04 08 00 F2 42 01 FD F1 Disable: 08 C6 04 08 00 F2 42 00 FD F2	06 C7 04 00 F2 42 FD FB
<b>UPC-E</b>				
Scan	0x02	1: Enable	Disable: 07 C6 04 08 00 02 00 FF 25 Enable: 07 C6 04 08 00 02 01 FF 24	05 C7 04 00 02 FF 2E
Transmit UPC-E Check Digit	0x29	1: Enable	Disable: 07 C6 04 08 00 29 00 FE FE Enable: 07 C6 04 08 00 29 01 FE FD	05 C7 04 00 29 FF 07
Preamble	0x23	0x01: System Character	None(00): 07 C6 04 08 00 23 00 FF 04 System Character (01) : 07 C6 04 08 00 23 01 FF 03 Country Character & System Character(02): 07 C6 04 08 00 23 02 FF 02	05 C7 04 00 23 FF 0D
Convert UPC-E to UPC-A	0x25	0: Disable	Disable: 07 C6 04 08 00 25 00 FF 02 Enable: 07 C6 04 08 00 25 01 FF 01	05 C7 04 00 25 FF 0B
UPC-E 2-bits Supplemental	0xF2 0x3D	0: Disable	Enable: 08 C6 04 08 00 F2 3D 01 FD F6 Disable: 08 C6 04 08 00 F2 3D 00 FD F7	06 C7 04 00 F2 3D FE 00
UPC-E 5-bits Supplemental	0xF2 0x3E	0: Disable	Enable: 08 C6 04 08 00 F2 3E 01 FD F5 Disable: 08 C6 04 08 00 F2 3E 00 FD F6	06 C7 04 00 F2 3E FD FF
UPC-E Read Supplementals	0xF2 0x3F	0: Disable	Enable: 08 C6 04 08 00 F2 3F 01 FD F4 Disable: 08 C6 04 08 00 F2 3F 00 FD F5	06 C7 04 00 F2 3F FD FE
UPC-E1	0xF2 0x15	0: Disable	Disable: 08 C6 04 08 00 F2 15 00 FE 1F Enable: 08 C6 04 08 00 F2 15 01 FE 1E	06 C7 04 00 F2 15 FE 28
<b>EAN-8</b>				
Scan	0x04	1: Enable	Disable: 07 C6 04 08 00 04 00 FF 23 Enable: 07 C6 04 08 00 04 01 FF 22	05 C7 04 00 04 FF 2C
EAN-8 is expanded to EAN-13	0x27	0: Disable	Disable: 07 C6 04 08 00 27 00 FF 00 Enable: 07 C6 04 08 00 27 01 FE FF	05 C7 04 00 27 FF 09
2-bits Supplemental	0xF2 0x37	0: Disable	Enable: 08 C6 04 08 00 F2 37 01 FD FC	06 C7 04 00 F2 37 FE 06

			Disable: 08 C6 04 08 00 F2 37 00 FD FD	
5-bits Supplemental	0xF2 0x38	0: Disable	Enable: 08 C6 04 08 00 F2 38 01 FD FB Disable: 08 C6 04 08 00 F2 38 00 FD FC	06 C7 04 00 F2 38 FE 05
Read Supplementals	0xF2 0x39	0: Disable	Enable: 08 C6 04 08 00 F2 39 01 FD FA Disable: 08 C6 04 08 00 F2 39 00 FD FB	06 C7 04 00 F2 39 FE 04
EAN-8 Transmit Check Digit	0xF2 0x80	1: Enable	Disable: 08 C6 04 08 00 F2 80 00 FD B4 Enable: 08 C6 04 08 00 F2 80 01 FD B3	06 C7 04 00 F2 80 FD BD

### EAN-13

Scan	0x03	1: Enable	Disable: 07 C6 04 08 00 03 00 FF 24 Enable: 07 C6 04 08 00 03 01 FF 23	05 C7 04 00 03 FF 2D
EAN-13 2-bits Supplemental	0xF2 0x3A	0: Disable	Enable: 08 C6 04 08 00 F2 3A 01 FD F9 Disable: 08 C6 04 08 00 F2 3A 00 FD FA	06 C7 04 00 F2 3A FE 03
EAN-13 5-bits Supplemental	0xF2 0x3B	0: Disable	Enable: 08 C6 04 08 00 F2 3B 01 FD F8 Disable: 08 C6 04 08 00 F2 3B 00 FD F9	06 C7 04 00 F2 3B FE 02
EAN-13 Read Supplementals	0xF2 0x3C	0: Disable	Enable: 08 C6 04 08 00 F2 3C 01 FD F7 Disable: 08 C6 04 08 00 F2 3C 00 FD F8	06 C7 04 00 F2 3C FE 01
EAN-13 Transmit Check Digit	0xF2 0x16	1: Enable	Disable: 08 C6 04 08 00 F2 16 00 FE 1E Enable: 08 C6 04 08 00 F2 16 01 FE 1D	06 C7 04 00 F2 16 FE 27

### Bookland EAN(ISBN)

Scan	0x53	0: Disable	Disable: 07 C6 04 08 00 53 00 FE D4 Enable: 07 C6 04 08 00 53 01 FE D3	05 C7 04 00 53 FE DD
Code 128 Symbologies Switch	0x08	1: Enable	Disable: 07 C6 04 08 00 08 00 FF 1F Enable: 07 C6 04 08 00 08 01 FF 1E	05 C7 04 00 08 FF 28
Transmit Code 128 Check Digit	0xF2 0x35	0: Disable	Enable: 08 C6 04 08 00 F2 35 01 FD FE Disable: 08 C6 04 08 00 F2 35 00 FD FF	06 C7 04 00 F2 35 FE 08
Set Lengths for Code 128	L1=0xF5 0x04, L2=0xF5 0x05			08 C7 04 00 F5 04 F5 05 FD 3A

GS1-128 (formerly UCC/EAN- 128)	0x0E	1: Enable	Disable: 07 C6 04 08 00 0E 00 FF 19 Enable: 07 C6 04 08 00 0E 01 FF 18	05 C7 04 00 0E FF 22
Transmit UCC/EAN- 128 Check Digit	0xF2 0x36	0: Disable	Enable: 08 C6 04 08 00 F2 36 01 FD FD Disable: 08 C6 04 08 00 F2 36 00 FD FE	06 C7 04 00 F2 36 FE 07
Set Lengths for UCC/EAN- 128	L1=0xF5 0x06, L2=0xF5 0x07			08 C7 04 00 F5 06 F5 07 FD 36
ISBT 128	0x54	1: Enable	Disable: 07 C6 04 08 00 54 00 FE D3 Enable: 07 C6 04 08 00 54 01 FE D2	05 C7 04 00 54 FE DC

### Code 39

Code 39	0x00	1: Enable	Disable: 07 C6 04 08 00 00 00 FF 27 Enable: 07 C6 04 08 00 00 01 FF 26	05 C7 04 00 00 FF 30
Set Lengths for Code 39	0x12(L1)  0x13(L2)	2  55	One Discrete Length: Length 06: 09 C6 04 08 00 12 06 13 00 FE FA Length 16: 09 C6 04 08 00 12 10 13 00 FE F0 Length 14: 09 C6 04 08 00 12 0E 13 00 FE F2 Two Discrete Lengths: 02 and 04: 09 C6 04 08 00 12 04 13 02 FE FA 16 and 14: 09 C6 04 08 00 12 10 13 0E FE E2 Length Within Range: 02 to 09: 09 C-6 04 08 00 12 02 13 09 FE F5 0x02 to 0x37(55) : 09 C6 04 08 00 12 02 13 37 FE C7 14 to 15: 09 C6 04 08 00 12 0E 13 0F FE E3 14 to 15 (Temporary) : 09 C6 04 00 00 12 0E 13 0F FE EB 15 to 16 : 09 C6 04 08 00 12 0F 13 10 FE E1 Any Length: 09 C6 04 08 00 12 00 13 00 FE F0	06 C7 04 00 12 13 FF 0A
Code 39 Check Digit Verification	0x30	0: Disable	Disable: 07 C6 04 08 00 30 00 FE F7 Enable: 07 C6 04 08 00 30 01 FE F6	05 C7 04 00 30 FF 00

Transmit Code 39 Check Digit	0x2B	0: Disable	Disable: 07 C6 04 08 00 2B 00 FE FC Enable: 07 C6 04 08 00 2B 01 FE FB	05 C7 04 00 2B FF 05
Code 39 Full ASCII	0x11	0: Disable	07 C6 04 08 00 11 01 FF 15	05 C7 04 00 11 FF 1F
Code 39 Transport Start Character and Terminator	0xF2 0x30	0: Disable	Disable: 08 C6 04 08 00 F2 30 00 FE 04 Enable: 08 C6 04 08 00 F2 30 01 FE 03	06 C7 04 00 F2 30 FE 0D
Convert Code 39 to Code 32 (Italian Pharma Code)	0x56	0: Disable	Disable: 07 C6 04 08 00 56 00 FE D1 Enable: 07 C6 04 08 00 56 01 FE D0	05 C7 04 00 56 FE DA
Code 32 Prefix	0xE7	0: Disable	Disable: 07 C6 04 08 00 E7 00 FE 40 Enable: 07 C6 04 08 00 E7 01 FE 3F	05 C7 04 00 E7 FE 49
Code 32 Check Digit Verification	0xF2 0x19	0: Disable	Disable: 08 C6 04 08 00 F2 19 00 FE 1B Enable: 08 C6 04 08 00 F2 19 01 FE 1A	06 C7 04 00 F2 19 FE 24
Transmit Code 32 Check Digit	0xF2 0x1A	0: Transmit Check Digit	Transmit Check Digit: 08 C6 04 08 00 F2 1A 00 FE 1A Transmit Start Character, Stop Character, Check Digit: 08 C6 04 08 00 F2 1A 01 FE 19	06 C7 04 00 F2 1A FE 23

### Code 93

Code 93	0x09	0: Disable	Disable: 07 C6 04 08 00 09 00 FF 1E Enable: 07 C6 04 08 00 09 01 FF 1D	05 C7 04 00 09 FF 27
Set Lengths for Code 93	0x1A(L1) 0x1B(L2)	4 55	One Discrete Length: 04: 09 C6 04 08 00 1A 04 1B 00 FE EC Two Discrete Lengths: 04 and 06: 09 C6 04 08 00 1A 06 1B 04 FE E6 Length Within Range: 04 to 09: 09 C6 04 08 00 1A 04 1B 09 FE E3 Any Length: 09 C6 04 08 00 1A 00 1B 00 FE F0	06 C7 04 00 1A 1B FE FA

### Code 11

Enable Code 11 Barcode Scanning	0x0A	0: Disable	Disable: 07 C6 04 08 00 0A 00 FF 1D Enable: 07 C6 04 08 00 0A 01 FF 1C	05 C7 04 00 0A FF 26
---------------------------------	------	---------------	---	----------------------

Set Lengths for Code 11	0x1C(L1) 0x1D(L2)	4 55	One Discrete Length: 06: 09 C6 04 08 00 1C 06 1D 00 FE E6 Two Discrete Lengths: 04 and 06: 09 C6 04 08 00 1C 06 1D 04 FE E2 Length Within Range: 04 to 09: 09 C6 04 08 00 1C 04 1D 09 FE DF Any Length: 09 C6 04 08 00 1C 00 1D 00 FE EC	06 C7 04 00 1C 1D FE F6
Code 11 Check Digit Verification	0x34	0: Disable	None: 07 C6 04 08 00 34 00 FE F3 1 bit: 07 C6 04 08 00 34 01 FE F2 2 bits: 07 C6 04 08 00 34 02 FE F1	05 C7 04 00 34 FE FC
Transmit Code 11 Check Digit	0x2F	0: Disable	Disable: 07 C6 04 08 00 2F 00 FE F8 Enable: 07 C6 04 08 00 2F 01 FE F7	05 C7 04 00 2F FF 01
<b>Interleaved 2 of 5/ITF/交叉 25 码</b>				
Enable Interleaved 2 of 5/ITF/交叉 25 码	0x06	1: Enable	Disable: 07 C6 04 08 00 06 00 FF 21 Enable: 07 C6 04 08 00 06 01 FF 20	05 C7 04 00 06 FF 2A
Set Scanning Data Lengths for Interleaved 2 of 5	0x16 0x17	14 14	One Discrete Length: 06: 09 C6 04 08 00 16 06 17 00 FE F2 Two Discrete Lengths: 04 and 06: 09 C6 04 08 00 16 06 17 04 FE EE Length Within Range: 04 to 09: 09 C6 04 08 00 16 04 17 09 FE EB Any Length: 09 C6 04 08 00 16 00 17 00 FE F8	06 C7 04 00 16 17 FF 02
Interleaved 2 of 5 Check Digit Verification	0x31	0: Disable	Disable: 07 C6 04 08 00 31 00 FE F6 Enable: 07 C6 04 08 00 31 01 FE F5	05 C7 04 00 31 FE FF
Transmit Interleaved 2 of 5 Check Digit	0x2C	0: Disable	Disable: 07 C6 04 08 00 2C 00 FE FB Enable: 07 C6 04 08 00 2C 01 FE FA	05 C7 04 00 2C FF 04
<b>Discrete 2 of 5 /Industrial 2 of 5/IND25/工业 25 码</b>				
Enable Discrete 2 of 5 /Industrial 2 of 5/IND25/工业 25 码	0x05	0: Disable	Disable: 07 C6 04 08 00 05 00 FF 22 Enable: 07 C6 04 08 00 05 01 FF 21	05 C7 04 00 05 FF 2B

Set Scanning Data Lengths for Discrete 2 of 5	0x14 0x15	12	One Discrete Length: 06: 09 C6 04 08 00 14 06 15 00 FE F6 Two Discrete Lengths: 04 and 06 04 and 06: 09 C6 04 08 00 14 06 15 04 FE F2 Length Within Range: 04 to 09 04 to 09: 09 C6 04 08 00 14 04 15 09 FE EF Any Length: 09 C6 04 08 00 14 00 15 00 FE FC	06 C7 04 00 14 15 FF 06
Discrete 2 of 5 Check	0xF2 0x48	0: Disable	Enable: 08 C6 04 08 00 F2 48 01 FD EB Disable: 08 C6 04 08 00 F2 48 00 FD EC	06 C7 04 00 F2 48 FD F5
Transmit Discrete 2 of 5 Check Digit	0xF2 0x49	0: Disable	Enable: 08 C6 04 08 00 F2 49 01 FD EA Disable: 08 C6 04 08 00 F2 49 00 FD EB	06 C7 04 00 F2 49 FD F4

矩阵 25 Matrix 25

Matrix 25	0xF2 0x20	0: Disable	Disable: 08 C6 04 08 00 F2 20 00 FE 14 Enable: 08 C6 04 08 00 F2 20 01 FE 13	06 C7 04 00 F2 20 FE 1D
Matrix 25 Check Digit Verification	0xF2 0x21	0: Disable	Disable: 08 C6 04 08 00 F2 21 00 FE 13 Enable: 08 C6 04 08 00 F2 21 01 FE 12	06 C7 04 00 F2 21 FE 1C
Transmit Matrix 25 Check Character	0xF2 0x22	0: Disable	Disable: 08 C6 04 08 00 F2 22 00 FE 12 Enable: 08 C6 04 08 00 F2 22 01 FE 11	06 C7 04 00 F2 22 FE 1B
Set Lengths for Matrix 25	L1=0xF5 0x00, L2=0xF5 0x01	12	One Discrete Length: 06: 0B C6 04 08 00 F5 00 06 F5 01 00 FD 32 Two Discrete Lengths: 04 and 06 04 and 06: 0B C6 04 08 00 F5 00 06 F5 01 04 FD 2E Length Within Range: 04 to 09 04 to 09: 0B C6 04 08 00 F5 00 04 F5 01 09 FD 2B Any Length: 0B C6 04 08 00 F5 00 00 F5 01 00 FD 38	08 C7 04 00 F5 00 F5 01 FD 42

Standard 25 / IATA 25 / 标准 25

Standard 25/IATA 25/ 标准 25	0xF2 0x23	0: Disable	Disable: 08 C6 04 08 00 F2 23 00 FE 11 Enable: 08 C6 04 08 00 F2 23 01 FE 10	06 C7 04 00 F2 23 FE 1A
----------------------------	-----------	---------------	---	-------------------------

Standard 25 Check Digit Verification	0xF2 0x24	0: Disable	Disable: 08 C6 04 08 00 F2 24 00 FE 10 Enable: 08 C6 04 08 00 F2 24 01 FE 0F	06 C7 04 00 F2 24 FE 19
Transmit Standard 25 Check Digit	0xF2 0x25	0: Disable	Disable: 08 C6 04 08 00 F2 25 00 FE 0F Enable: 08 C6 04 08 00 F2 25 01 FE 0E	06 C7 04 00 F2 25 FE 18
Set Lengths for Standard 25	L1=0xF5 0x02, L2=0xF5 0x03	12	One Discrete Length: 06: 09 C6 04 08 00 F5 02 06 F5 03 00 FD 2E Two Discrete Lengths: 04 and 06 04 and 06: 09 C6 04 08 00 F5 02 06 F5 03 04 FD 2A Length Within Range: 04 to 09 04 to 09: 09 C6 04 08 00 F5 02 04 F5 03 09 FD 27 Any Length: 09 C6 04 08 00 F5 02 00 F5 03 00 FD 34	08 C7 04 00 F5 02 F5 03 FD 3E
Enable Codabar Barcode Scanning	0x07	0: Disable	Disable: 07 C6 04 08 00 07 00 FF 20 Enable: 07 C6 04 08 00 07 01 FF 1F	05 C7 04 00 07 FF 29
Set Lengths for Codabar	0x18(L1)  0x19(L2)	5  55	One Discrete Length: 04: 09 C6 04 08 00 18 04 19 00 FE F0 Two Discrete Lengths: 09 C6 04 08 00 18 05 19 04 FE EB Length Within Range: 04 to 09 04 to 09: 09 C6 04 08 00 18 04 19 09 FE E7 Any Length: 09 C6 04 08 00 18 00 19 00 FE F4	06 C7 04 00 18 19 FE FE
Codabar Check	0xF2 0x4C	0: Disable	Enable: 08 C6 04 08 00 F2 4C 01 FD E7 Disable: 08 C6 04 08 00 F2 4C 00 FD E8	06 C7 04 00 F2 4C FD F1
Transmit Codabar Check Digit	0xF2 0x4D	0: Disable	Enable: 08 C6 04 08 00 F2 4D 01 FD E6 Disable: 08 C6 04 08 00 F2 4D 00 FD E7	06 C7 04 00 F2 4D FD F0
NOTIS Transmit Format	0x37	0: Disable	Disable: 07 C6 04 08 00 37 00 FE F0 Enable: 07 C6 04 08 00 37 01 FE EF	05 C7 04 00 37 FE F9
Start Character and Terminator Format	0xF2 0x31	0: ABCD/A BCD	ABCD/ABCD: 08 C6 04 08 00 F2 31 00 FE 03 ABCD/TN*E: 08 C6 04 08 00 F2 31 01 FE 02	06 C7 04 00 F2 31 FE 0C

Letter Case Setting of Start Character and Terminator	0xF2 0x32	0: Uppercase	Uppercase: 08 C6 04 08 00 F2 32 00 FE 02 Lowercase: 08 C6 04 08 00 F2 32 01 FE 01	06 C7 04 00 F2 32 FE 0B
---	-----------	-----------------	--	-------------------------

### MSI /MSI PLESSEY

Enable MSI /MSI PLESSEY Barcode Scanning	0x0B	0: Disable	Disable: 07 C6 04 08 00 0B 00 FF 1C Enable: 07 C6 04 08 00 0B 01 FF 1B	05 C7 04 00 0B FF 25
Set Lengths for MSI	0x1E(L1) 0x1F(L2)	6 55	One Discrete Length: 04: 09 C6 04 08 00 1E 04 1F 00 FE E4 Two Discrete Lengths: 04 and 05: 09 C6 04 08 00 1E 05 1F 04 FE DF Length Within Range: 02 to 09: 09 C6 04 08 00 1E 02 1F 09 FE DD Any Length: 09 C6 04 08 00 1E 00 1F 00 FE E8	06 C7 04 00 1E 1F FE F2
MSI Check Digit	0x32	0 (One digit)	1 bit: 07 C6 04 08 00 32 00 FE F5 2 bits: 07 C6 04 08 00 32 01 FE F4	05 C7 04 00 32 FE FE
Transmit MSI Check Digit	0x2E	0: Disable	Disable: 07 C6 04 08 00 2E 00 FE F9 Enable: 07 C6 04 08 00 2E 01 FE F8	05 C7 04 00 2E FF 02
MSI Check Algorithm	0x33	1 (Mod 10/Mod 10)	MOD10/11: 07 C6 04 08 00 33 00 FE F4 MOD10/10: 07 C6 04 08 00 33 01 FE F3	05 C7 04 00 33 FE FD

### GS1 DataBar(RSS)

Enable GS1 DataBar(RSS) 14 Barcode Scanning	0xF0 0x52	0: Disable	Disable: 08 C6 04 08 00 F0 52 00 FD E4 Enable: 08 C6 04 08 00 F0 52 01 FD E3	06 C7 04 00 F0 52 FD ED
RSS AI Character	0xF2 0x26	1: Enable	Enable: 08 C6 04 08 00 F2 26 01 FE 0D Disable: 08 C6 04 08 00 F2 26 00 FE 0E	06 C7 04 00 F2 26 FE 17

### About 2D Barcode(only for 2D)

#### PDF417

PDF417	0x0F	1: Enable	Enable: 07 C6 04 08 00 0F 01 FF 17 Disable: 07 C6 04 08 00 0F 00 FF 18	05 C7 04 00 0F FF 21
Read Normal Phase/	0xF2 0x61	0: Read	Read Normal Phase: 08 C6 04 08 00 F2 61 00 FD D3	06 C7 04 00 F2 61 FD DC

Phase Reversal		Normal Phase	Read Phase Reversal: 08 C6 04 08 00 F2 61 01 FD D2 Read Normal Phase/ Phase Reversal: 08 C6 04 08 00 F2 61 02 FD D1	
----------------	--	--------------	--	--

### QRCode

QRCode	F0h 25h	1: Enable	Enable: 08 C6 04 08 00 F0 25 01 FE 10 Disable: 08 C6 04 08 00 F0 25 00 FE 11	06 C7 04 00 F0 25 FE 1A
ECI Control	0xF2 0x66	0: Not Output ECI	Not Output:08 C6 04 08 00 F2 66 00 FD CE Output:08 C6 04 08 00 F2 66 01 FD CD	06 C7 04 00 F2 66 FD D7
Read Normal Phase/ Phase Reversal	0xF2 0x67	0: Read Normal Phase	Read Normal Phase: 08 C6 04 08 00 F2 67 00 FD CD Read Phase Reversal: 08 C6 04 08 00 F2 67 01 FD CC Read Normal Phase/ Phase Reversal: 08 C6 04 08 00 F2 67 02 FD CB	06 C7 04 00 F2 67 FD D6
Remove The UTF-8 BOM Encoding Format Of The QR Code	0xF6 0x3A	0: Disable	*Disable: 08 C6 04 08 00 F6 3A 00 FD F6 Enable: 08 C6 04 08 00 F6 3A 01 FD F5	06 C7 04 00 F6 3A FD FF

### DataMatrix

DataMatrix	F0h 24h	1: Enable	Enable: 08 C6 04 08 00 F0 24 01 FE 11 Disable: 08 C6 04 08 00 F0 24 00 FE 12	06 C7 04 00 F0 24 FE 1B
Read Normal Phase/ Phase Reversal	0xF2 0x6B	0: Read Normal Phase	Read Normal Phase: 08 C6 04 08 00 F2 6B 00 FD C9 Read Phase Reversal: 08 C6 04 08 00 F2 6B 01 FD C8 Read Normal Phase/ Phase Reversal: 08 C6 04 08 00 F2 6B 02 FD C7	06 C7 04 00 F2 6B FD D2
ECI Control	0xF2 0x6C	0: Not Output ECI	Not Output:08 C6 04 08 00 F2 6C 00 FD C8 Output:08 C6 04 08 00 F2 6C 01 FD C7	06 C7 04 00 F2 6C FD D1

### MaxiCode

MaxiCode	F0h 26h	0: Disable	Disable: 08 C6 04 08 00 F0 26 00 FE 10 Enable: 08 C6 04 08 00 F0 26 01 FE 0F	06 C7 04 00 F0 26 FE 19
----------	---------	------------	---	-------------------------

### Aztec

Aztec	F0h 28h	0: Disable	Disable: 08 C6 04 08 00 F0 28 00 FE 0E Enable: 08 C6 04 08 00 F0 28 01 FE 0D	06 C7 04 00 F0 28 FE 17
Han Xin Code				
Han Xin Code	0xF0 0x2F	0: Disable	Disable: 08 C6 04 08 00 F0 2F 00 FE 07 Enable: 08 C6 04 08 00 F0 2F 01 FE 06	06 C7 04 00 F0 2F FE 10
Read Normal Phase/ Phase Reversal	0xF2 0x71	0: Read Normal Phase	Read Normal Phase: 08 C6 04 08 00 F2 71 00 FD C3 Read Phase Reversal: 08 C6 04 08 00 F2 71 01 FD C2 Read Normal Phase/ Phase Reversal: 08 C6 04 08 00 F2 71 02 FD C1	06 C7 04 00 F2 71 FD CC
ISSN	0xF2 0x33	0: Disable	Disable: 08 C6 04 08 00 F2 33 00 FE 01 Enable: 08 C6 04 08 00 F2 33 01 FE 00	06 C7 04 00 F2 33 FE 0A
NEC-25(COOP25)	0xF2 0x45	0: Disable	Enable: 08 C6 04 08 00 F2 45 01 FD EE Disable: 08 C6 04 08 00 F2 45 00 FD EF	06 C7 04 00 F2 45 FD F8
NEC-25(COOP25) Check	0xF2 0x46	0: Disable	Enable: 08 C6 04 08 00 F2 46 01 FD ED Disable: 08 C6 04 08 00 F2 46 00 FD EE	06 C7 04 00 F2 46 FD F7
Transmit NEC-25(COOP25) Check Character	0xF2 0x47	0: Disable	Enable: 08 C6 04 08 00 F2 47 01 FD EC Disable: 08 C6 04 08 00 F2 47 00 FD ED	06 C7 04 00 F2 47 FD F6
Set Lengths for NEC-25(COOP25)	L1=0xF5 0x08, L2=0xF5 0x09			08 C7 04 00 F5 08 F5 09 FD 32
COMPOSITE	0xF2 0x17	0: Disable	Disable: 08 C6 04 08 00 F2 17 00 FE 1D Enable: 08 C6 04 08 00 F2 17 01 FE 1C	06 C7 04 00 F2 17 FE 26